

# PTAC

## STANDARD LOUVERED OUTDOOR GRILLE

### INSTALLATION INSTRUCTIONS

#### Standard Louvered Grille

**NOTE:** A baffle kit **must not** be used with a standard louvered grille on any PTAC installation.

**NOTE:** Remove rear baffles attached to the condenser coil header plate in the unit if installed with stamped aluminum grille.

Before installing the grille, remove the cardboard stiffener and rear enclosure panel from the wall sleeve. These items can be removed from inside of the building. The sleeve stiffener must be taken out before the rear sleeve enclosure panel can be removed from the sleeve.

#### Rear Enclosure Removal

Remove the rear enclosure by folding the front ends of the top and bottom towards the center. Grasp the top and bottom flanges as shown in Figure 2 and pull out diagonally from one side of the sleeve.

#### Standard Louvered Grille Installation Instructions

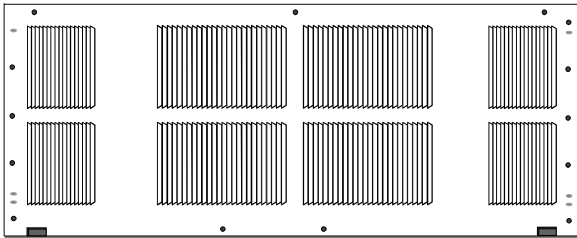


Figure 1

1. Position the grille so that all four flanges are in the up position.
2. Insert the six grommets provided so the square end protrudes through the grille in the opposite direction from the flanges.
3. Manipulate the grille out through the rear sleeve opening using the plastic handle (not shown) provided.
4. Secure the grille by threading each of the six screws into the plastic grommets.
5. Remove the plastic handle (not shown) from the center of the grille prior to installing the chassis into the sleeve.



**BE SURE TO KEEP A FIRM GRIP ON THE PLASTIC HANDLE AND GRILLE TO PREVENT IT FROM DROPPING AND/OR CAUSING POSSIBLE INJURY OR PROPERTY DAMAGE.**

