





## VERTICAL ZERO COLLIMATION and Tracking adjustment 900/9000/QS



With Instrument setup up on a good stable tripod and your prism mounted on a bipod @ 300ft away follow the steps indicated by the blue arrow below.

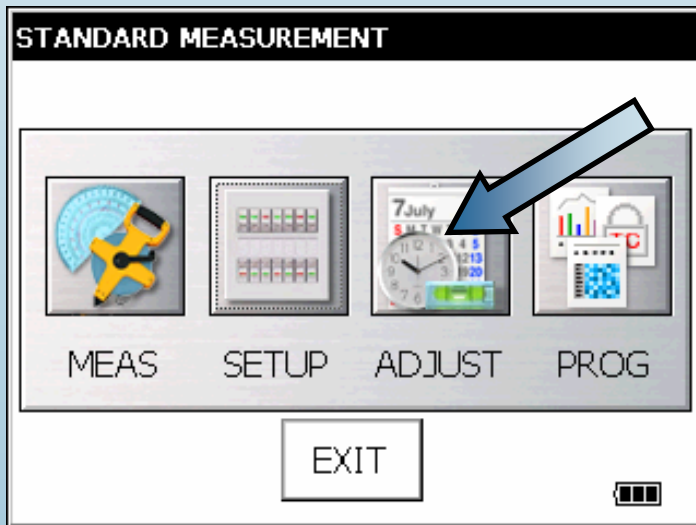


Site the prism very precisely and press SET on FACE 1.

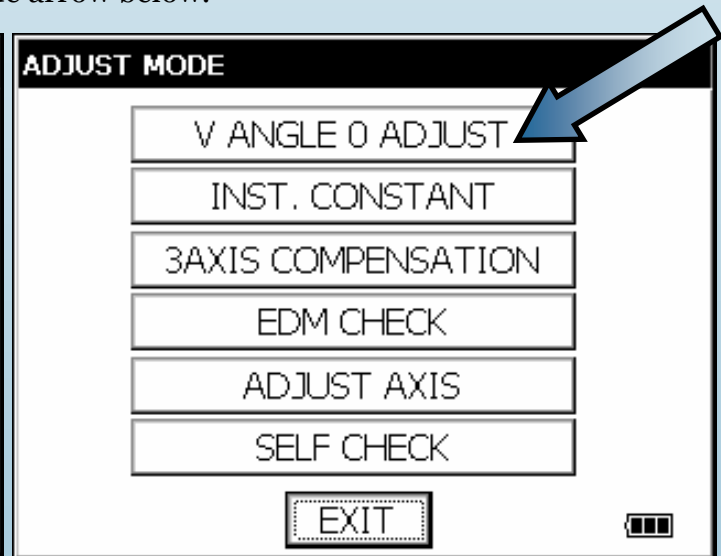





Press the \* (Star key) on Keyboard then Press the auto invert key below.  
*Careful the unit will ROTATE automatically*

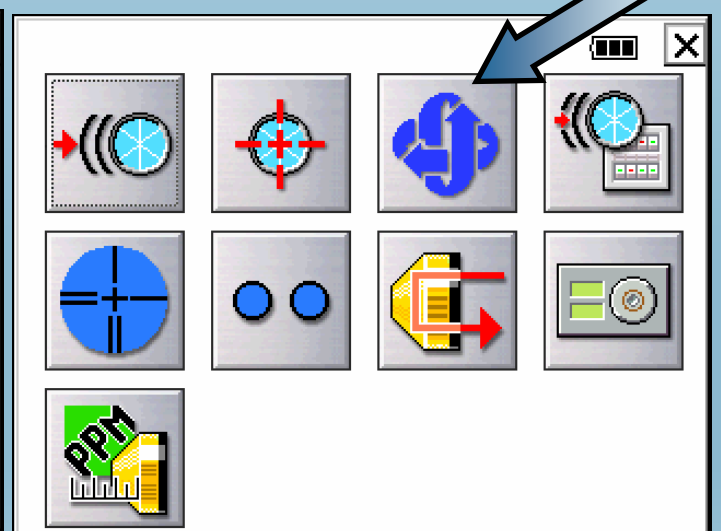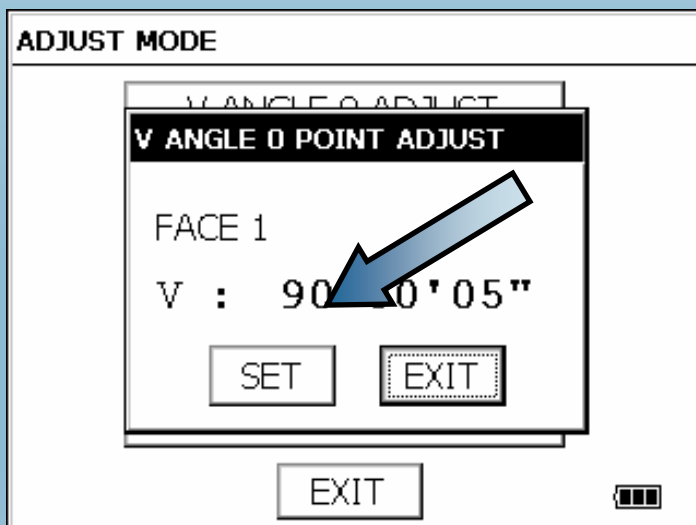

Site the prism very precisely and press SET on FACE 2 . That will complete the Vertical Zero Adjustment and apply correction to V angle.

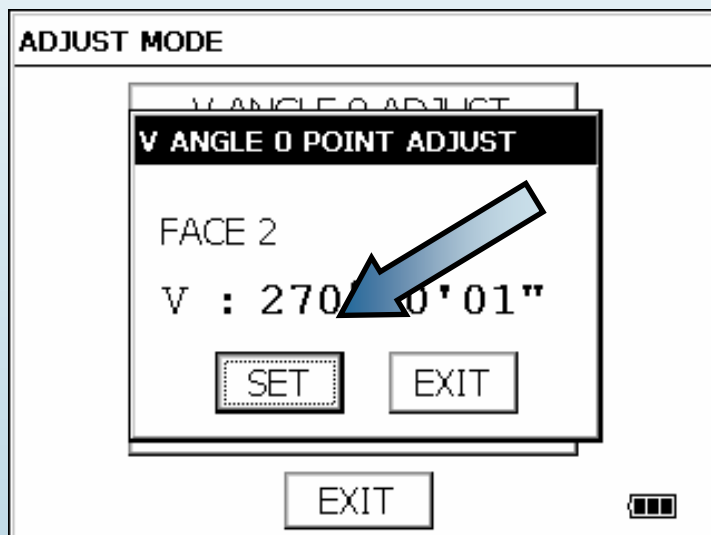

Return the instrument back to Face 1 (90) degree side, before beginning the Tracking adjustment. Sight the prism precisely and begin the adjustment routine as indicated by arrows.

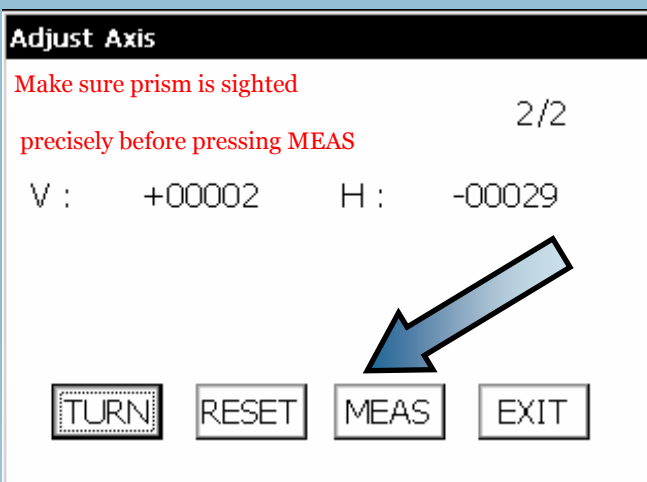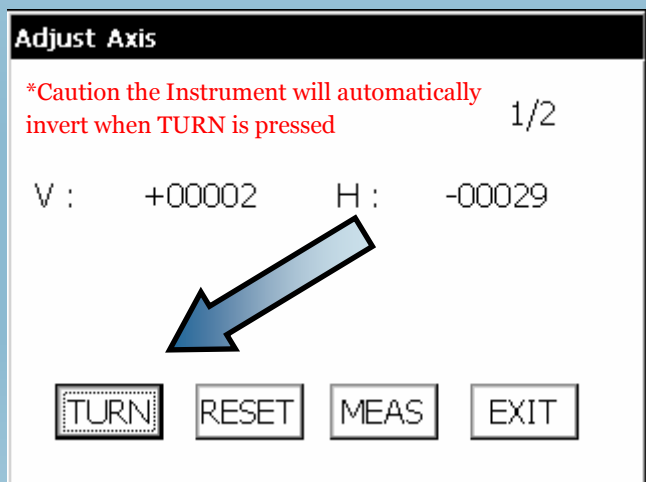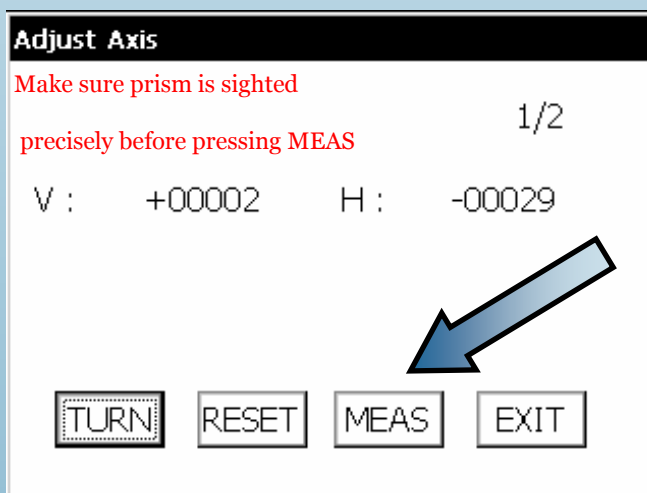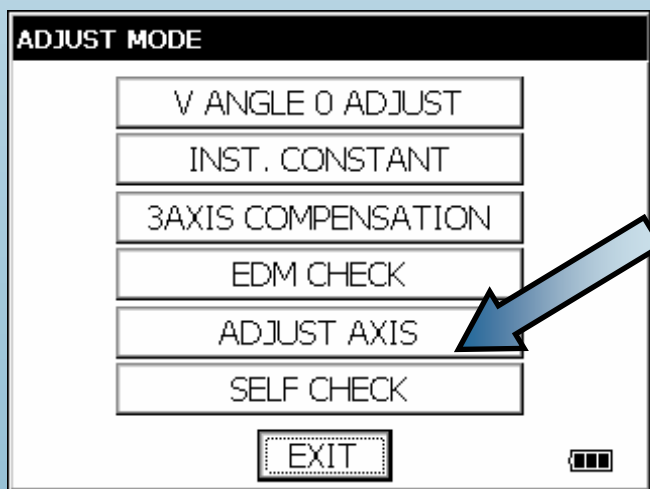

The correction values will be displayed for H & V, Press the **SET** key to store the new values.