



Waterloo Mfg., Inc.


606 N. Bell Blvd. Cedar Park, Texas 78613




Waterloo Mfg., Inc.

(512) 219-1935 fax; (512) 219-7378 e-mail: jcburch@wlmfg.com

Web Site : WLMFG.COM



Mount door hanger plate 2-3/4" from each edge at centerline at top of door, with lock tabs both on same side of door.



Alternate wheel positions in track for even weight distribution.

NOTE; Track must be absolutely level and square with jambs. Door should be sealed on all six sides to resist warpage.


Insert door into pocket frame and tilt up until adjusting bolt of tricycle hanger will slide into seat of door hanger plate. Lock hanger together with lock tab.

Lift front edge of door and slide other tricycle hanger into remaining door hanger plate, and lock in place.

Use wrench provided to raise or lower hanger to plumb door to jamb.

Apply trim stop to frame leaving 3/16" minimum clearance between door and stop. Apply stop on the side of the frame where the lock tabs are located with screws so that the door may be removed later if necessary.

After trim stop is in place, fasten #1550 guides as shown and adjust until door slides smoothly and evenly into pocket.

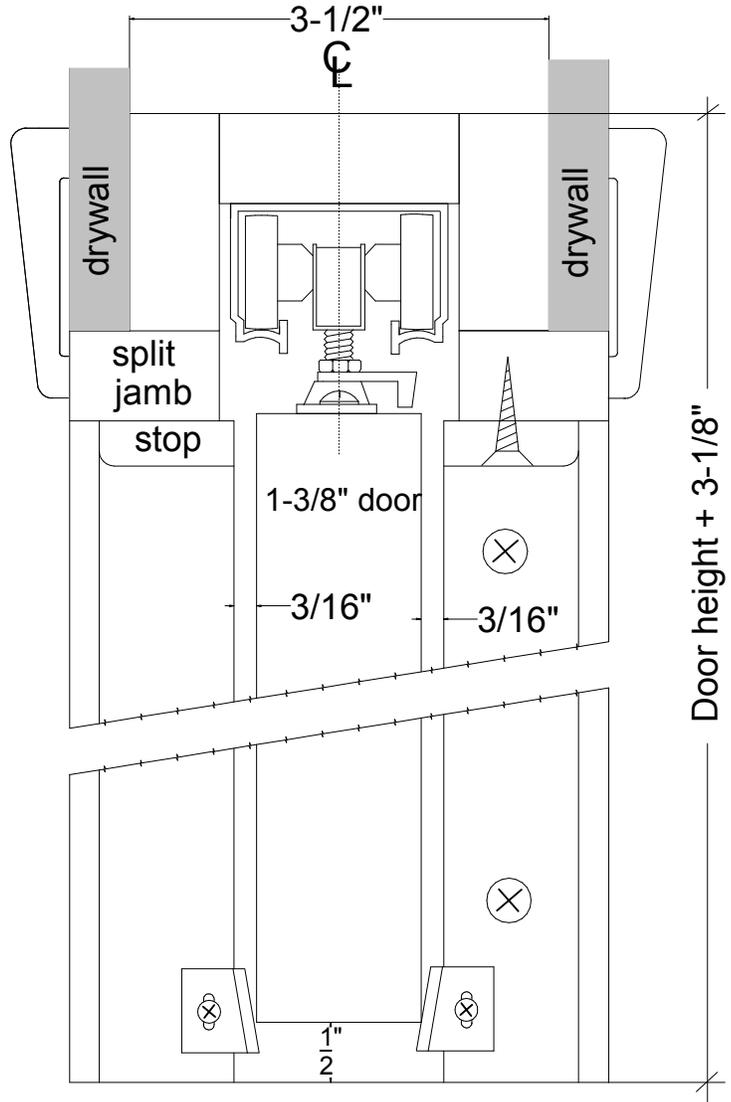

#1550 guides
Pre-drill pilot holes
in stop to prevent
splitting material

L.E. Johnson #100 track & hardware
#125 series hardware carries 125 lb door
#200 series hardware carries 200 lb door