


Drapery Rod


Read all instructions prior to installation.

Kirsch.

Tools Required (not included)

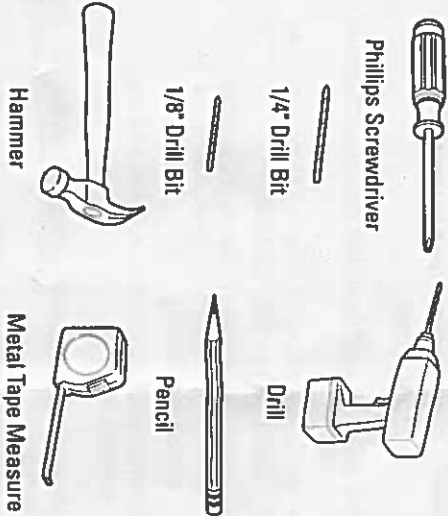

Parts Included

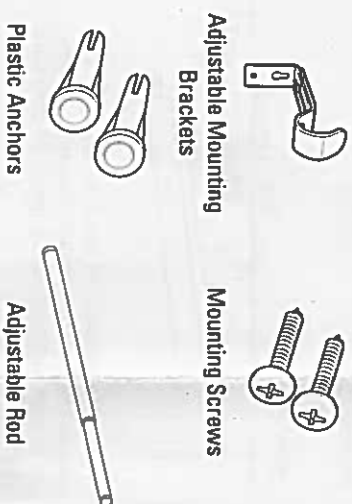


Tightening Screws

Package Contents	Pole Length		
	36"-66" (91-167 cm)	66"-120" (167-305 cm)	120"-180" (305-457 cm)
Adjustable Brackets	3	4	6
Mounting Screws	6	8	12
Plastic Anchors	6	8	12
Tightening Screws	3	4	6

*End Caps are not included with all rod sets


1 Mark the bracket location

- Place mounting brackets against the wall at the desired locations for the appropriate pole lengths. Brackets should be evenly spaced.
- Mark screw holes with pencil. Be sure pencil marks are leveled across opening.

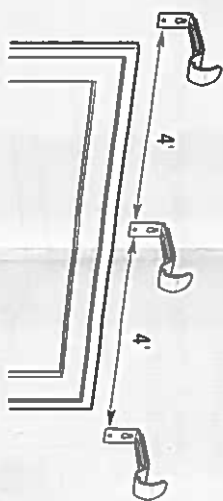


3 Install the adjustable brackets

- Mount each adjustable bracket using the provided screws.
- Prior to mounting, loosen projection screw and slide away bracket extension.
- Install screws through brackets. Do not overly tighten screws fastened into plastic anchors.
- *Mount all brackets included for added support.*

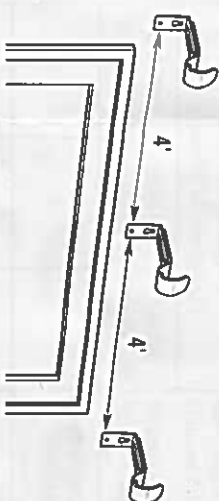


5 Install end caps

- Screw in end caps or 1 3/8" finial sets (sold separately).

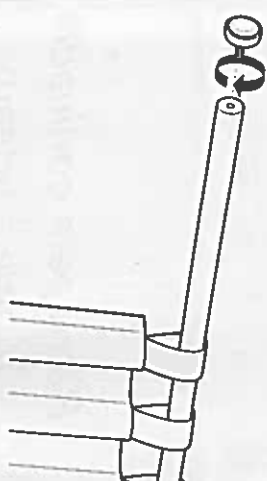


6 Install rod and drapery

- Extend rod to desired length. Place rod with drapery into brackets. Adjust rod and drapery to desired position.

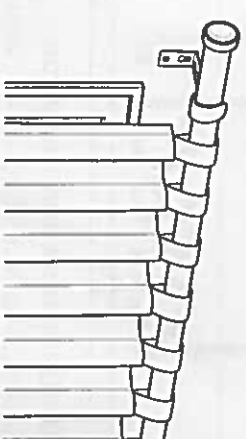

2A For wood trim or wall stud—Drill the pilot holes

- Use 1/8" bit to drill pilot holes.

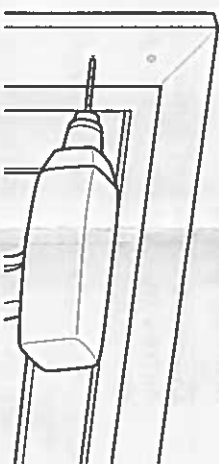


2B For drywall or non-wood surfaces—Drill the pilot holes

- Use 1/4" bit to drill pilot holes.




- Push or gently hammer plastic anchors into holes until flush against wall surface.

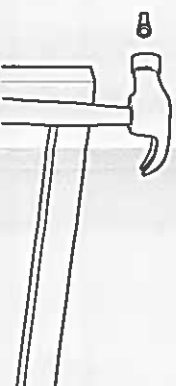


4 Place drapery on rod

- Place drapery treatment onto rod.

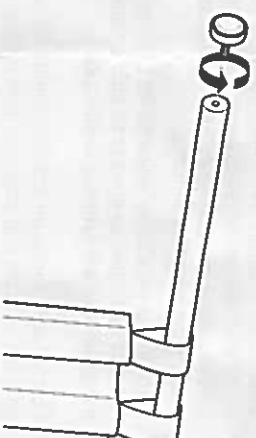

- Lock rod in position by tightening screws into back of bracket.

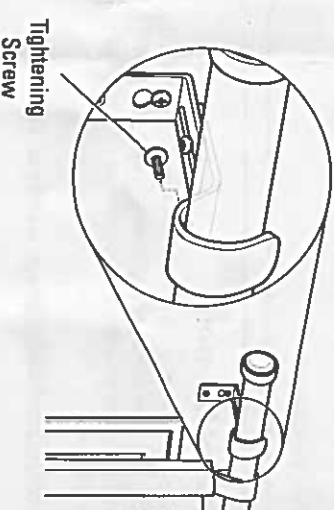

Contact Us

Contact Kirsch customer service regarding any question or concerns you may have about your new drapery hardware. You may reach us at:

1-800-225-1988 (9:00 a.m. – 6:00 p.m. EST)

www.kirsch.com