

CHAMFER CLIPS

for a
"PRE-CAST" FINISH

NOW YOU CAN MAKE YOUR WALL CAP PROJECTS LOOK LIKE
"PRE-CAST" STONES. THESE RE-USABLE EDGING MOLDS
ALLOW YOU TO HAVE A DEEP JOINTER MARK OVER ALL THE
WALL CAP EDGES.

Never again wonder what to do when you get to the edge.
Use Chamfer Clips by Stegmeier Corp.




**CLARK CONCRETE
FORMS**

682-224-2812

To Order Please Visit:
clarkconcreteforms.com



CHAMFER CLIP INSTRUCTIONS

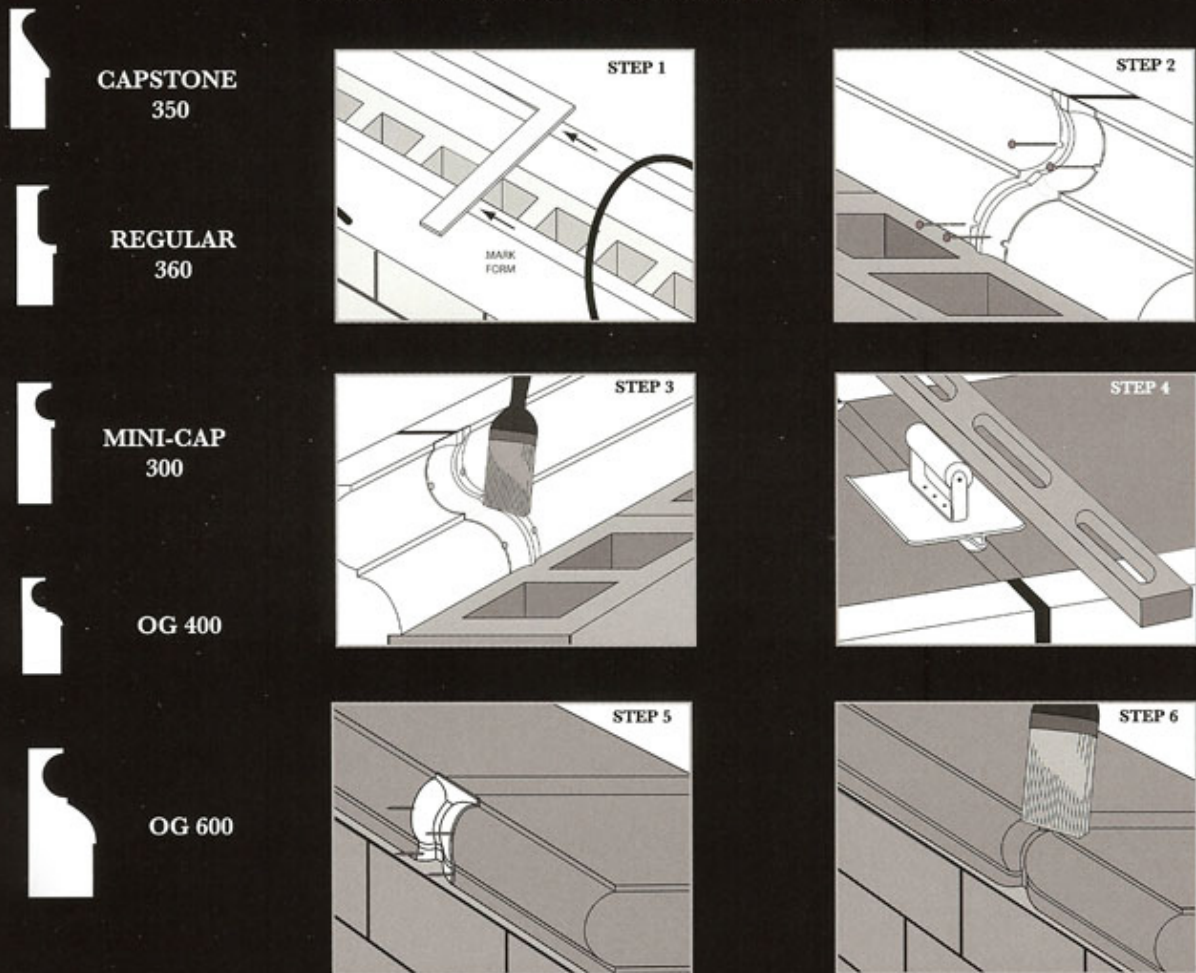

- Step 1.** Using a framing square, mark the location of the joints to be tooled.
- Step 2.** Place the Chamfer Clip into the form and pin in place with the nails provided.
- Step 3.** Apply a coat of "Frontier Release Agent" to Chamfer Clip and allow to dry.*
- Step 4.** Tool the joints at the appropriate time using the lay-out marks as a guide.
- Step 5.** Strip the Wall Cap form, exposing the Chamfer-Clip. Carefully remove the Chamfer Clip and wipe clean immediately for re-use.
- Step 6.** Joints may be finished with a damp brush if desired.

*If Wall Cap forms are to be stripped at a later date, a coating of Frontier Release Agent is required on forms as well.