

#1: Draw reference Line
using the upper and lower
wing skins


TOP of wing spar ROOT END

1.5"

#2: Draw vertical line parallel
to red reference line
1.5" outboard from red line

3.0"

#3: Center of spar bolt
hole is 3.0" up from
the bottom of the spar

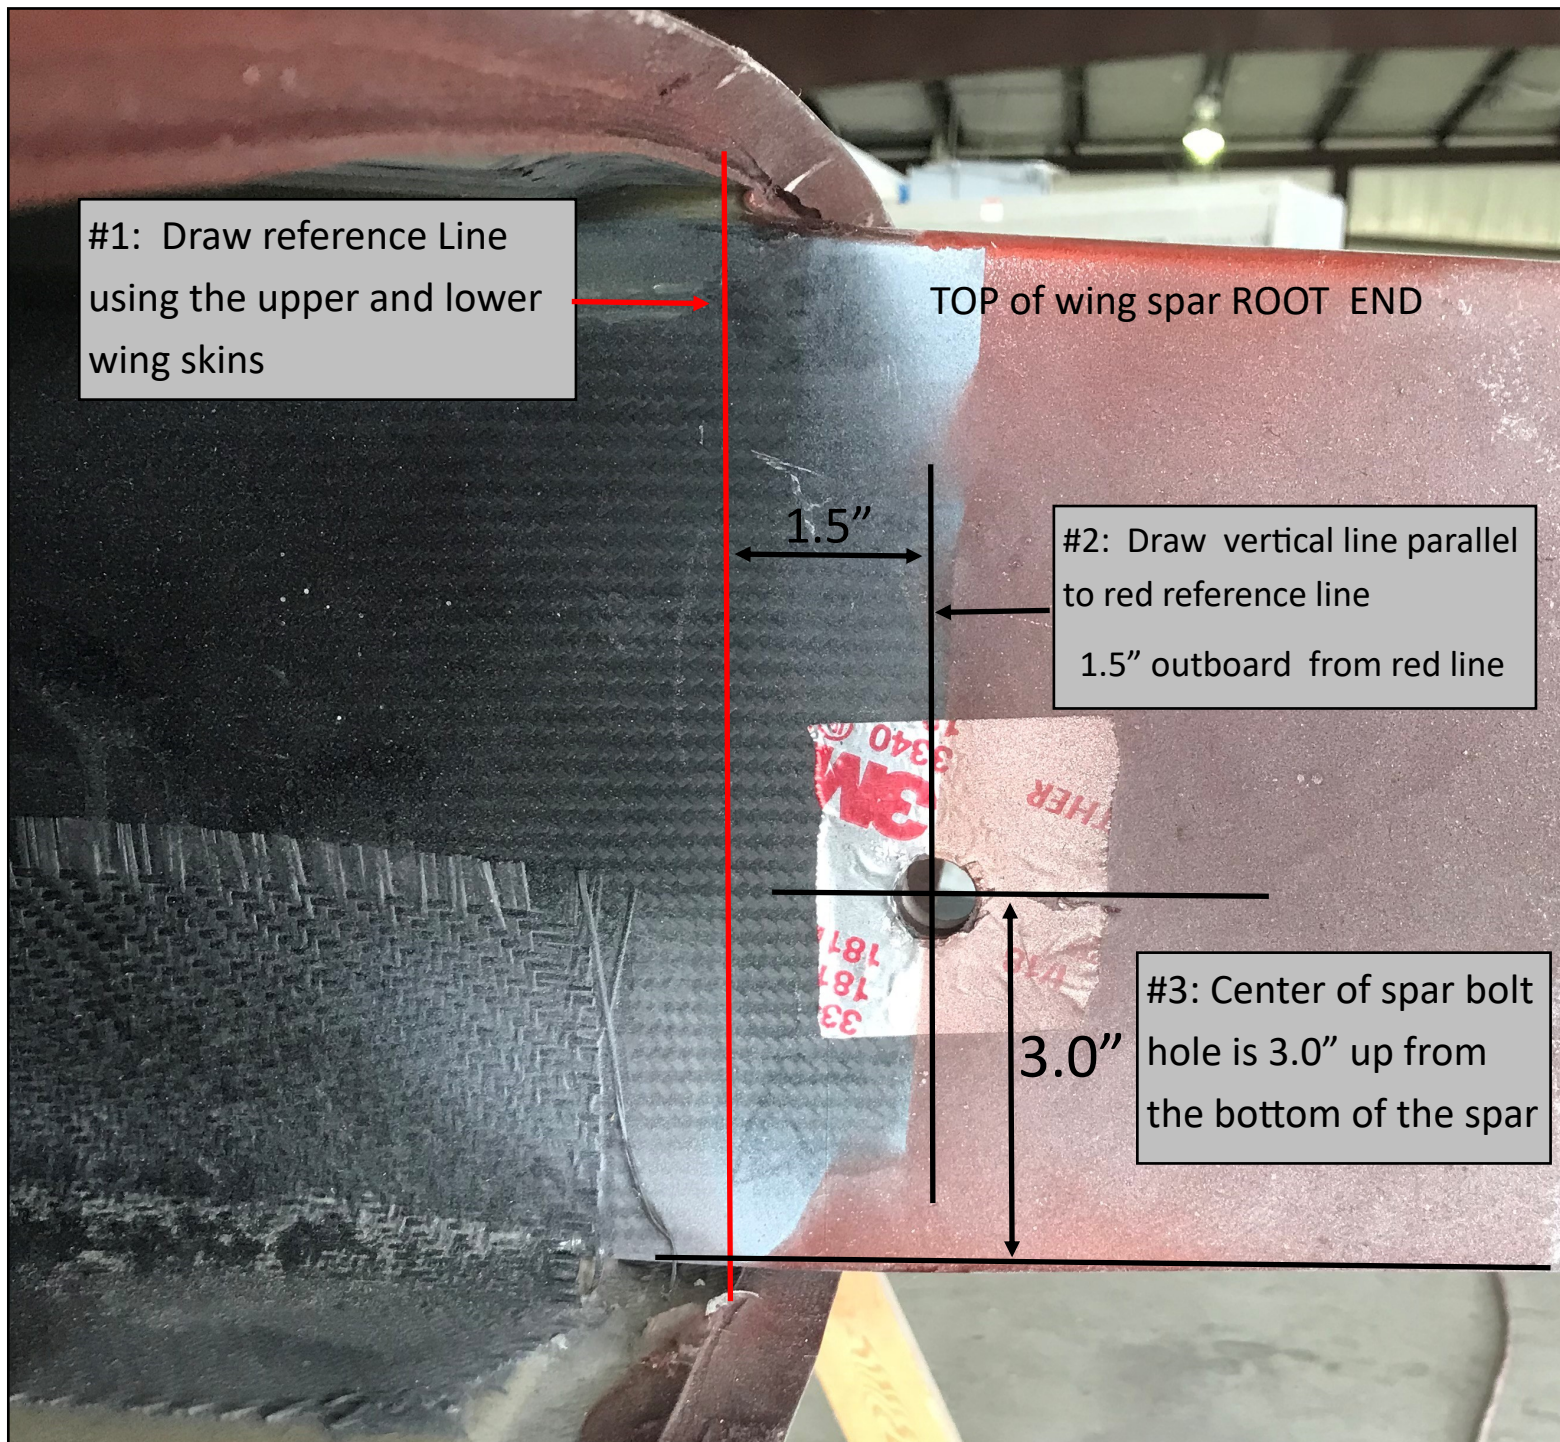

SPAR TIP TOP SIDE

#2: Distance of hole outboard is set by using the spar box as a drill guide

2.5"

#1: Draw a Line , 2.5" up and parallel to the bottom of the spar.

