

Centering & Locking Master Carriers

kirsch®

“I installed my Kirsch rod but only half of the drapery is working...”

“One side of my drapery doesn’t move at all...”

“Kirsch sent me a defective rod, one side is completely broken...”

- 1) To ensure master carriers are centered, traverse carriers to far outside/open position
- 2) “Lock” the secondary master carrier by pulling cord over hook on back of carrier
- 3) Recommend, twist cord once before locking for best performance

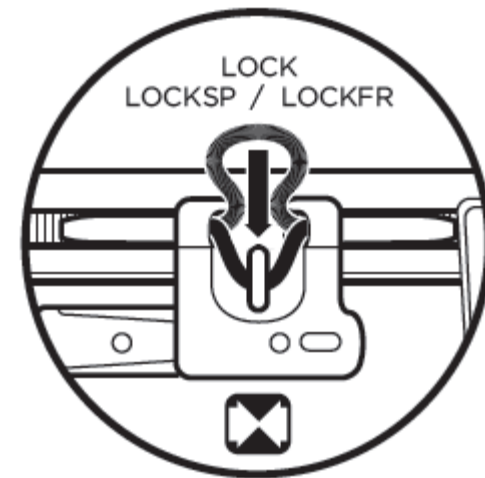


Image shows back of Kirsch Superfine Master Carrier

