


Visit Us Online

For more information about Basalite paving stones, retaining walls, accessories, patterns or installation instructions visit us online at basalite.com.

Offered by:



355 Greg Street
Sparks, NV 89431
888-296-3719

CALIFORNIA • COLORADO • IDAHO • NEVADA • WASHINGTON • ALBERTA • BRITISH COLUMBIA

www.basalite.com



©2013 Basalite® Concrete Products, LLC. All trademarks ® are registered trademarks.
The U.S. Green Building Council Member logo is a trademark owned by the U.S. Green Building Council and is used by permission.



ARTISAN FLAGSTONE



www.basalite.com




ARTISAN FLAGSTONE

Interlocking Paving Stones

Available in a range of beautiful earth tone colors, Artisan Flagstone features five unique surface textures and patterns that naturally appear in flagstone. Installation is easy due to its unique spacer design and alignment grooves. Rich with texture, shape, and color, the Artisan Flagstone will complete any space or hardscape plan.

Above: Artisan Flagstone in Venice
Cover: Artisan Flagstone in Positano


Specifications

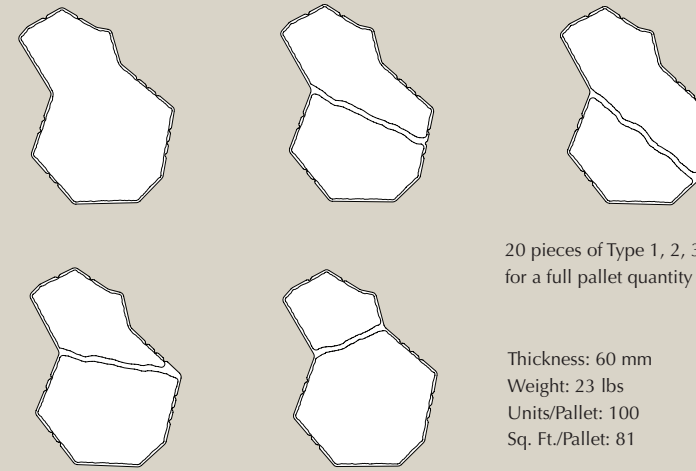

20 pieces of Type 1, 2, 3, 4 and 5 units are on one pallet, for a full pallet quantity of 100 pieces.


Thickness: 60 mm
Weight: 23 lbs
Units/Pallet: 100
Sq. Ft./Pallet: 81

Patterns

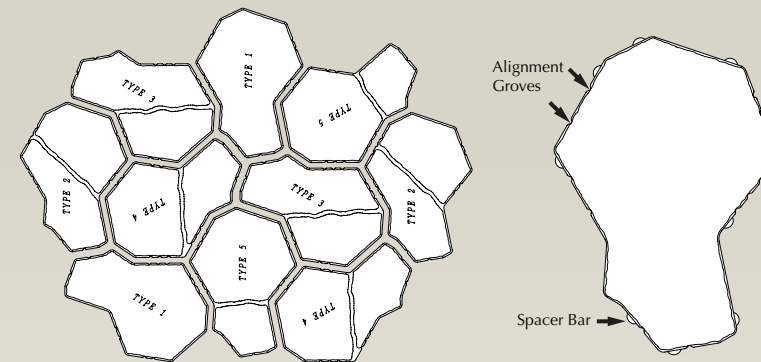

Typical Paver Installation*

1. Excavate unsuitable, unstable or unconsolidated subgrade material and compact the area which has been cleared. Backfill and level with dense graded aggregate suitable for base material (typically 3" - 6" for pedestrian/light vehicular traffic and 8" - 10" for driveway applications), or as otherwise directed by site engineer/architect/landscape architect.
2. Install edge restraint using concrete curb, concrete toe or edging.
3. Place bedding course of sharp normal weight screening or concrete sand to a uniform depth of approximately 1" leveled to grade.
4. Install Basalite Pavers hand tight with joints approximately 1/8". Where required, cut stones with an approved cutter to fit accurately.
5. Tamp pavers with mechanical vibrator uniformly level true to grade and free of movement.
6. Fill voids in joints by sweeping, dry, fine, sharp sand over pavers.

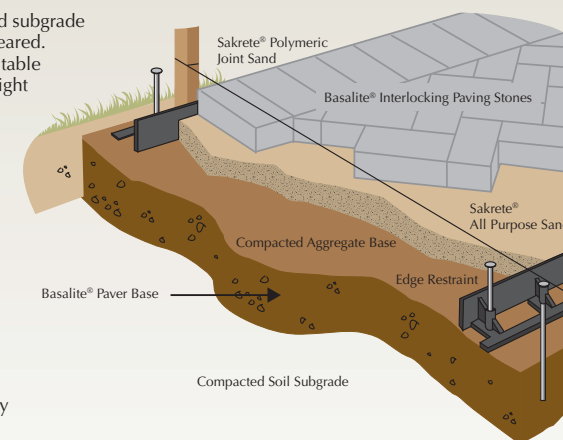

*The installation instructions and illustrations shown are a basic overview of paver installation methods. Because of the variety of applications, please refer to the Basalite® installation guide, or visit us online at basalite.com.

Colors



Positano



Venice



Torino
(Special Order**)



Genoa
(Special Order**)

**Torino and Genoa are available by special order, please allow sufficient lead time. For more information, please contact your local Basalite Representative.

NOTE: Printed colors shown in this brochure may vary from actual product colors. We recommend color selection be made from actual product samples.