

BUCKEYE ARIZONA ROASTING COMPANY



SETTING UP THE PHIDGET ON A BC-1 ROASTER:

THE BC-1 COMES WITH A BUILT IN PROFILING SYSTEM FOR BT ONLY.

IF YOU WANT TO ADD BT & ET YOU WILL NEED TO BUY THE PHIDGET KIT FROM BUCKEYE COFFEE ROASTERS WHICH COMES WITH A PHIDGET, PHIDGET CASE, 2- 30MM THERMOCOUPLES AND BOLTS AND VELCRO TO ATTACH TO UNIT ON A COOL SPOT THAT DOES NOT GET HOT.

HERE IS A VIDEO FOR INSTRUCTIONS:

[HTTPS://YOUTU.BE/XQVHBDDQp08](https://youtu.be/xqVHBDDQp08)


YOUR KIT INCLUDES THE FOLLOWING ITEMS:

TWO 30MM THERMOCOUPLES

PHIDGET



**INSIDE KIT IS
VELCRO TO
ATTACH
PHIDGET TO A
COOL LOCATION
ON ROASTER**

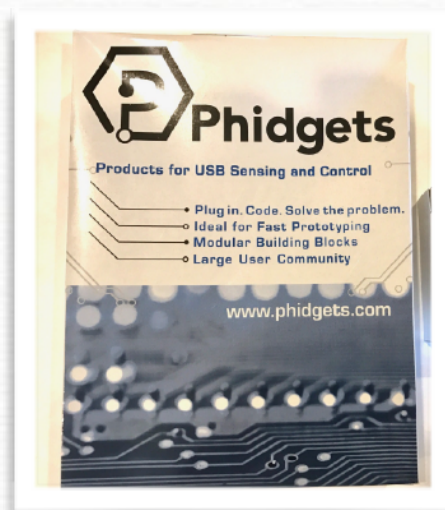

- 1. YOU WILL NEED TO CLIP OFF THE ENDS OF WIRE PLUGS**
- 2. THEN ATTACH WIRES TO PHIDGET STARTING ON CORRECT POST (WIRE COLORS MAY VARY)**

REPEAT SAME PROCEDURE FOR THE NEXT THERMOCOUPLE. BE SURE THE FIRST SLOT IS USED FOR THE BT THERMOCOUPLE (OR ELSE YOU CAN CHANGE THIS IN THE ARTISAN SOFTWARE)

A SET UP GUIDE FOR INSTALLING PHIDGET IS FOUND ON OUR TECH PAGE PLUS DOWNLOAD LINKS FOR DRIVERS, SOFTWARE AND OTHER GUIDES AND VIDEOS. IF YOU HAVE QUESTIONS EMAIL: TECH@BUCKEYECOFFEE.COM