

Remote Prism Installation Instructions

FOUR VERY IMPORTANT STEPS FOR PROPER INSTALLATION

- 1) **Mount to the back of the TV, do not mount the Remote Prism on the front bezel of the TV**
- 2) **If possible, mount toward the center of the TV. The chosen mounting area must be clean and dry**
- 3) **Push firmly and hold in place for 10 seconds, bond strength is dependent on the pressure applied**
- 4) **Route the wire so there isn't any pressure pulling on the bonded Remote Prism**

The Remote Prism should be mounted to the BACK OF THE TV with only 1/8" – 1/4" visible from the front – See Figure 1

The Remote Prism should be mounted facing downward, so the 45 degree angle is facing toward the back of TV and the wire is coming out toward the top of the TV. Between 1/8" and 1/4" of the prism should be protruding below the TV and have clear line of sight access the room.

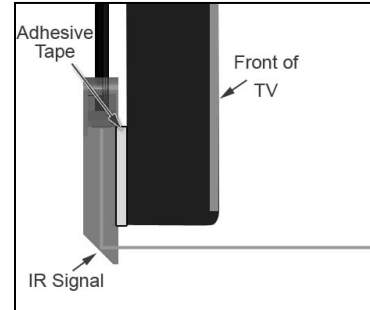


Figure 1 - Back of TV Installation

Connections

Plug the connector into the Set Top or Set Back Box's IR input connector. Ensure that there isn't any pressure from the wire pulling on the prism, it must be loose. Properly route the wire so it is neat and secure. Make sure any excess wire cannot be seen from the front of the TV.

Support

The contact information is listed below. Please see our website, email, or call M-F 8am – 5pm PST.

ProTVSolutions LLC | 31938 Temecula Parkway Suite A331, Temecula CA 92592

support@ProTVSolutions.com | 858 663 2595 | www.ProTVSolutions.com