

Installation Instructions for Performance Sheeting

Included with your Water Glide is a performance shield package which consists of 8' 4" long aluminum sheets that are mounted from the back of the engine pod, forward covering 12 to 16 feet on each side of the Water Glide.

This is easily mounted within minutes using self-tapping stainless steel screws that are included with the performance package.

When using the performance shield in conjunction with the Water Glide, the bottom of the boat dry will be kept dry and you will see better performance from your boat.

Standard Package:	5 Sheets	8'4" X 24"	Included
Additional sheeting:			Call For Price.

Additional sheeting, when purchased with the Water Glide, will be shipped free of charge! *(Performance Shield shipped by itself is prohibitive)*




Install the 8' 4" x 2' aluminum sheets with 3/4" stainless steel self tapping screws that are provided in bag 2. Starting at the back of the boat, place performance sheeting to underneath side of floor joist / cross members and fasten with self tapping screws. (If you have existing sheeting at back of boat, start to overlap with new performance sheeting at that point.)

Place the bent side down towards your pontoons to cover the riser that is on top of your pontoons and screw to riser. Press sheeting at the bent side tightly into crease of bend against decking and riser.



Mount sheeting with screws along floor joist / cross members moving towards center of boat where Water Glide will be mounted. **DO NOT PLACE SCREWS** to outer edge of sheeting where rails on Water Glide will be mounted.

Trim sheeting around the transom pod. Make sure it is mounted tightly against pod, not showing any floor joist / cross members.

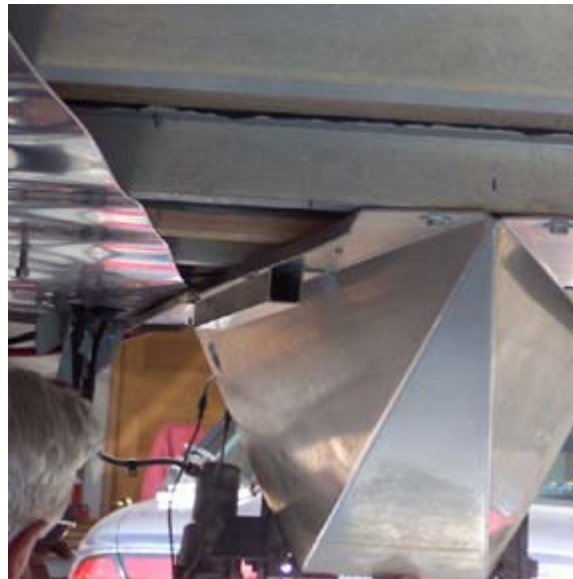

Overlap each sheet moving forward from back of boat decking so that your last sheet will stop at the desired floor joist / cross member. (**DO NOT EXTEND SHEETING PAST FLOOR JOIST / CROSS MEMBER**). The performance sheeting should run at least to the next floor joist / cross member past the front of the Water Glide.

Hardware in Bag 2 - (To Mount Performance Sheeting)

- 130 Stainless steel 3/4" self tapping screws



For assistance please call 1-888-311-8313

Helpful Hints:

- It sometimes helps to drill a small pilot hole for the self tapping screws.
- Small clamps may be used to hold the sheeting in place prior to installing the screws.
- Make sure that you have good smooth edges when finish, so that water will flow smoothly across the surface.
- If any screws vibrate loose, use a thread locker on them.