

PICTURE LAYOUT FOR CIH RMTCIH12 N SITE TUBE



STEP 1

Remove the factory press wheel bolt.




STEP 2

Locate the proper side bracket and line up the side hole at the top to secure the tube to. Insert the longer provided bolt through the spring support and arm. Leave the bolt loose to allow the lower wheel bolt to be inserted.



STEP 3

Insert the new supplied 10" long bolt through the tube bracket, closing arm, spacer and wheel.

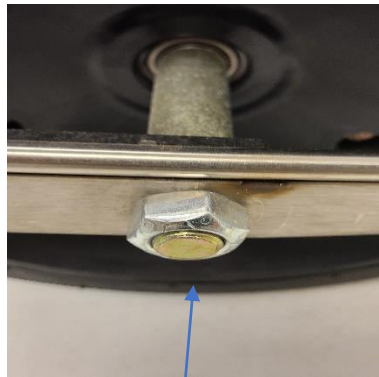

STEP 4

Install supplied locknut on thread side of bolt. Torque to 100 ft #s.



STEP 5

Ensure The Tube Spacing Off Row Center Matches Desired Distance.



PROUDLY SERVING THE AG COMMUNITY SINCE 1973!

1-800-358-8070

***CONSULT YOUR AGRONOMIST FOR PROPER PRODUCT USE, RATES, AND APPLICATION SPACING. GOOD COMMUNICATION WILL INSURE THE BEST OUTCOME AND SUCCESS FOR FERTILIZER TUBE USE.**

***R.E. SKILLINGS SUPPLIES INC IS NOT LIABLE FOR ANY DAMAGE OR HARM TO CROPS OR EQUIPMENT FROM THE USE OF THE N-SITE TUBE AND ASSOCIATED EQUIPMENT.**

THANK YOU FOR CHOOSING THE N-SITE TUBE FOR YOUR FERTILIZER PLACEMENT!