

Drapery Hardware Solutions:


Decorative Traverse over Decorative Traverse
 Designer Metals 1 3/8" over Designer Metals 1 3/8"

Kirsch® DH Solutions




1. Start with 2 Designer Metals 1 3/8" Traverse Rods

(Note: rods come with wall brackets)

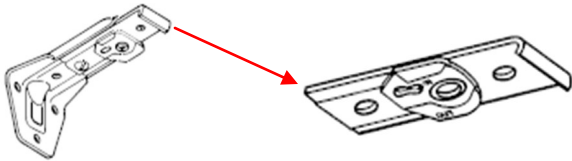

2. Remove fore-part from all Traverse Rod brackets

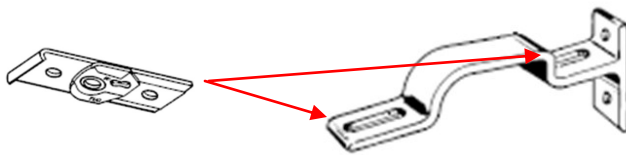

3. Add fore-part(s) to Double Bracket (part # 71134110)

Benefits of Layered Drapery Treatments

Creates beautiful "Depth" in window

Treatment Offers More Light Control

Better Energy Efficiency

Easy Operation Over Large Windows

Top Hole Mount Location and Pin Settings

Top Hole Mounting Location = +3 1/16" to finished drapery length

Front and Back Draperies pin setting = 1/2"

