
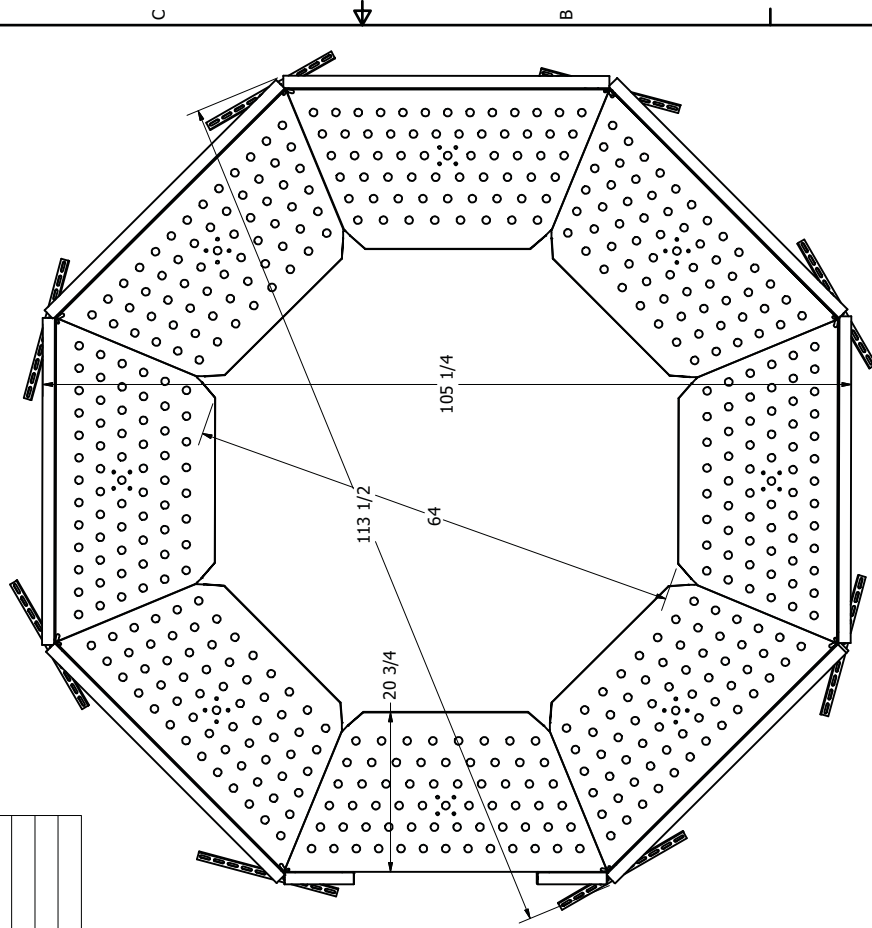


51009 9' Safety Walkaround 8 Section

| Parts List | | | |
|------------|-----|-------------------------------|-------------|
| ITEM | QTY | PART NUMBER | DESCRIPTION |
| 1 | 1 | 50167 9' Entry Section | |
| 2 | 7 | 50168 9' Intermediate Section | |
| 3 | 8 | 50121 Walk Post | |
| 4 | 8 | 50122 Mounting Bracket | |
| 5 | 14 | 10189 Peak Handrail | |
| 6 | 1 | 50141 Right Entry Post | |
| 7 | 1 | 50142 Left Entry Post | |
| 8 | 4 | 50181 Short Handrail | |

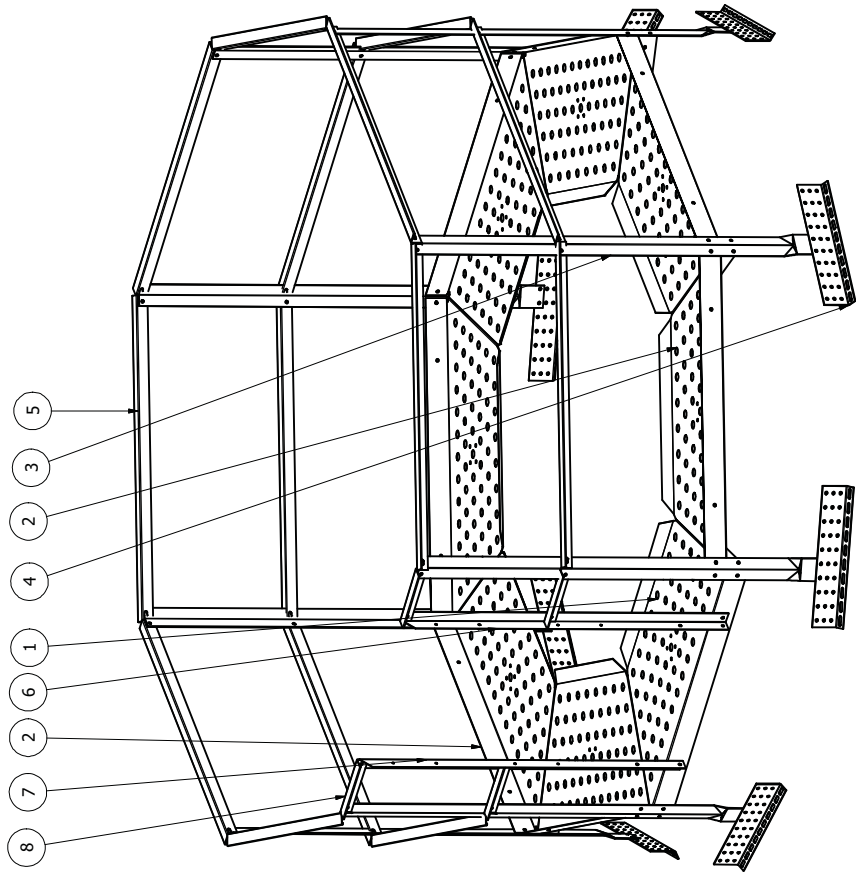

| | | | |
|------------------------|------------|-----------------------------|--------|
| DRAWN Rex A. Greene | 12/23/2004 | Greene Welding and Hard Inc | |
| CHECKED QA | | TITLE | |
| MFG | | SCALE | |
| APPROVED | | SIZE C | DWG NO |
| | | Walkaround Instructions | |
| | | SHEET 2 OF 4 | |

Peak Walkaround Assembly

Step 1: On the ground: Bolt together (3) pieces of walkaround using (2) 5/16" x 3/4" bolts through the bottom flanges of each joint. Assemble the remaining sections to like assemblies.

Step 2: Once these ground-assembled walkaround sections are on the bin roof, fasten them together using 5/16" x 3/4" hardware to form a ring. Be sure to locate the walkaround entry at the roof stairs or ladder. **Note:** The walkaround entry is the section with the down turned flange on the outer diameter.

Step 3: Center the walkaround on the bin. Fasten the walkaround to the roof by using *TEK SCREWS in the flanges on the inside diameter of the walkaround where they contact a roof rib.

Step 4: To fasten handrail posts and mounting brackets to walkaround deck, bolt through the walkaround flange and the handrail post, placing the mounting bracket at the hole option to set the deck level. Attach to roof using 5/16" bin bolt. Repeat this procedure around the entire assembly. Refer to Figure 1.

Step 5: Fasten Entry Post and Entry handrails to Entry Section. Flange out so that a Roof Stair or a Roof Ladder handrail can be attached.

Step 6: Fasten handrails to handrail post using 5/16" X 3/4" bolts using a washer on the slots.

Step 7: Make sure that all bolts and screws are tight. **Caution:** Do not over tighten Tek Screws

*TEK SCREW. A self-drilling, self-tapping screw.

| Parts List | | | | |
|------------|----|-----|-------|----------------------------------|
| 7' | 9' | 10' | 13'6" | Walkaround |
| 1 | | | | 50165 7' Entry section |
| | 1 | | | 50167 9' Entry section |
| | | 1 | | 50161 10' Entry section |
| | | | 1 | 50163 13'6" Entry section |
| 7 | | | | 50166 7' Intermediate section |
| | 7 | | | 50168 9' Intermediate section |
| | | 8 | | 50162 10' Intermediate section |
| | | | 11 | 50164 13'6" Intermediate section |
| 14 | | | | 50190 33" Handrail |
| | 14 | 16 | 22 | 10189 42" Handrail |
| 4 | | | | 50182 4 1/2" Handrail |
| | 4 | 4 | 4 | 50181 8" Handrail |
| 8 | 8 | 9 | 12 | 50120 Walkaround Post 56" |
| 8 | 8 | 9 | 12 | 50122 Mounting Bracket |
| 1 | 1 | 1 | 1 | 50141 Entry Post Right 45° |
| 1 | 1 | 1 | 1 | 50142 Entry Post Left 45° |
| 1 | 1 | 1 | 1 | Hardware Package |

