

Drapery Hardware Solutions:


Decorative Traversing Treatment over Decorative Stationary Treatment
Designer Metals 1 3/8" over Designer Metals 1 3/8"

Kirsch® DH by Application




1. Start with 2 Designer Metals 1 3/8" Traverse Rods

(Note: rods come with wall brackets)

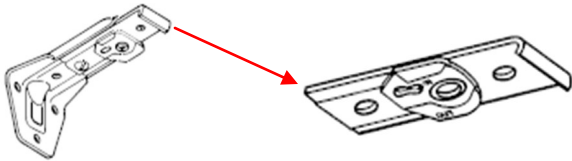

2. Remove fore-part from all Traverse Rod brackets

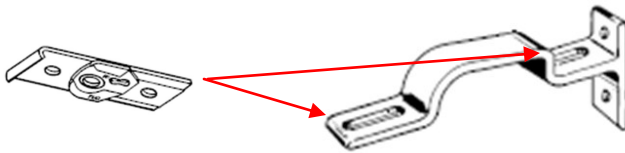

3. Add fore-part(s) to Double Bracket (part # 71134110)

Layered Drapery Treatments

Creates beautiful "Depth" in window

Treatment Offers More Light Control

Better Energy Efficiency

Easy Operation Over Large Windows

Setting a layer as stationary:

Convert a layer of the drapery treatment to stationary by simply removing the cords from the appropriate Designer Metals Traverse Rod

This is a great way to create:

Stationary pleated valances over traversing sheers or panels (make front rod stationary)

OR

Traversing draperies panels over stationary sheers or panels (make back rod stationary)