




### Kirsch® DH by Application



1. Start with a Single Traverse One Way Draw (Part # 336025)






2. Lay rod face down and pull sections apart.  
Free cord from Right master; slide it off; discard

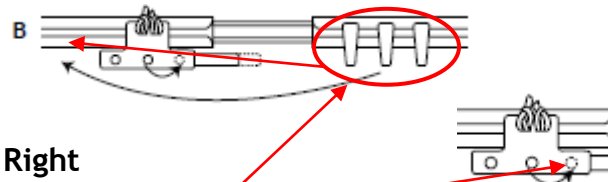

#### 3. Cord & Stack Right

- Move master arm in remaining master to right screw hole; slide off.
- Move all slide to outside (large) rod section.
- Replace master; rejoin rod.

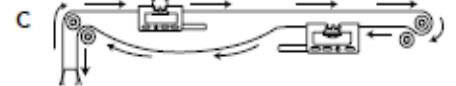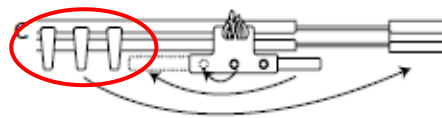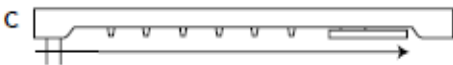

#### 3. Cord & Stack Left

- Untie cord left, remove cord guide....restring cord & re-knot
- Untie cord on right & pull down between wheels on right
  - Add guide restring & re-knot
- Change screw in master, reverse arm; slide off
- Move all slides to inside (small) rod section
- Replace master; rejoin rod

