
## DFT - Unit Maintenance

## Harley™



- #1 Grease the four zerk fittings on the lower control arms (ARROW #1) when engine oil is changed.
- #2 Grease the four zerk fittings on the universal joints (ARROW #2) when engine oils is changed.
- #3 Change oil in differential (ARROW #3) at 5000 7500 miles. Drain oil thru the fill plug and refill with 4 oz. of 80 90 wt. gear lube.
- #4 Brake pads recommended for the all Harley's dated 1985-1999 are Galfer Brake pads number FD125G1054. Harley's dated 2000-2007 are Galfer Brake pads number FD235G1370. Harley's dated 2008-present use same as stock.

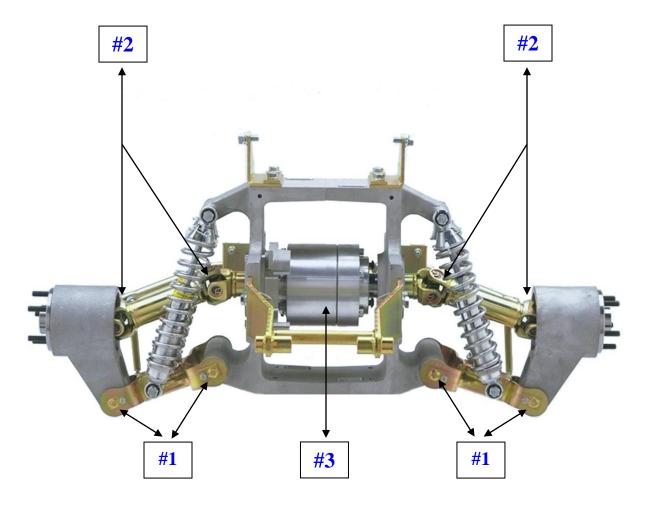