

 PORTER
PRESTON



DUAL

SHADES

Effective February 4, 2019

design simplified™

TABLE OF CONTENTS

Product Overview

- Features & Benefits 3
- Collection Information 4-5
- Color Chart 6

Pricing Groups

- Pricing Group 1-5 7-8
- Motorization Surcharges and Options 9

Product Specifications

- Product Specifications 10
- Finished Dimensions. 11
- Simplicity Rechargeable Motorization 12
- PowerWand Motorization 13
- RemoteLift™ Motorization. 14-15
- Quick Motorization Programming Guide. 16
- Product Components. 17-18

FEATURES & BENEFITS



- A soft shade that combines the light control of a blind with the soft beauty of a fabric shade.
- Uniquely designed fabric has alternating bands of sheer or mesh fabric with translucent or room darkening solid fabric within the same shade.
- The bands of fabric can be aligned or offset providing total light and privacy control as well as UV protection.
- Large selection of decorative styles in a wide ranging color palette to blend with any décor.
- A matching fabric insert in the headrail is standard and provides a finished look.
- Innovative bottomrail allows the fabric to slide through for precise positioning.
- Continuous cord loop is standard.
- Choose from three motorization options:
 - Simplicity Rechargeable – great option for those hard to reach places. Rechargeable battery eliminates the external battery wand.
 - PowerWand – low cost, rechargeable motorized system raises and lowers at the touch of a button on the wand.
 - RemoteLift – trouble free operation at the touch of a button.
- **NEW** Smoove 1 RTS surface mounted wall switch option now available.
- **NEW** myLink RTS Interface now available.
- Limited Lifetime Warranty ensures your customers' satisfaction.

COLLECTION INFORMATION

	Continuous Cord Loop
Minimum Width (NET)	15"
Minimum Height	24"

	Simplicity Rechargeable
Minimum Width (NET)	19"
Minimum Height	20"

	RemoteLift
Minimum Width (NET)	18"
Minimum Height	24"

	PowerWand
Minimum Width (NET)	21"
Minimum Height	20"

Maximum widths and heights for continuous cord loop and battery operated motorization noted below.

Pattern Name	Family Code	Band Height	Fabric Composition	Opacity	Maximum Width	Maximum Height	Price Group
Advance	DS1	3"	100% Woven Polyester	Translucent	94"	120"	4
Anastasia	DS2	3"	100% Polyester	Translucent	100"	120"	4
Beaumont	DS3	3"	100% Polyester	Translucent	96"	120"	1
Cinema	DS4	2.75"	85% Polyester / 15% Linen	Translucent	92"	120"	3
Definition	DS6	3"	100% Polyester	Room Darkening	90"	120"	5
Diversion	DS21	4.625"	100% Polyester	Room Darkening	102"	120"	5
Epicure	DS7	3"	100% Polyester	Translucent	100"	120"	3
Extravagance	DS8	5.5"	100% Polyester	Translucent	100"	120"	4
Glorious	DS18	4.75"	100% Polyester	Translucent	90"	120"	2
Humber	DS19	3"	100% Polyester	Translucent	102"	120"	2
Impulse	DS20	3"	100% Polyester	Translucent	90"	96"	2
Luxury	DS10	3"	100% Polyester	Translucent	100"	120"	4
Nomad	DS12	3"	100% Polyester	Translucent	102"	100"	3
Obscure	DS13	4"	100% Polyester	Room Darkening	96"	100"	5
Palladian	DS14	3"	100% Polyester	Translucent	100"	120"	3
Reveal	DS15	2.75"	100% Polyester	Translucent	102"	120"	2
Strande	DS16	2.75"	100% Polyester	Translucent	100"	120"	2
Sublime	DS17	3"	100% Polyester	Translucent	90"	100"	2

SIDE-BY-SIDE VANE ALIGNMENT

When Dual Shades are installed side by side, vane alignment can be guaranteed within 3/8" only if:

- Shades are ordered at the same time and are identical style, color and height.
- Shades that need to be aligned are specified on the order form (a note must be included in Special Instructions).

ORDERING NOTE

- Finished blind height will always be in the full privacy position – with bands offset
- When you align bands to the view through position, the bottom rail will raise slightly off the window sill – the gap between the sill and bottomrail is approximately 1/2 the band width.

COLLECTION INFORMATION – 2 ON 1 HEADRAIL

Minimum Width Per Panel:

- Continuous Cord Loop – 15" NET
- 2 on 1 is not available with any Motorization System
- Center Gap – 1/2"

Minimum Height:

- All Styles – 24"

Minimum widths and heights for continuous cord loop noted below.

Pattern Name	Family Code	Minimum Width per panel	Maximum Overall Width	Maximum Height
Advance	DS1	15" Net	94"	90"
Anastasia	DS2	15" Net	106"	90"
Beaumont	DS3	15" Net	96"	90"
Cinema	DS4	15" Net	92"	90"
Definition	DS6	15" Net	106"	90"
Diversion	DS21	15" Net	106"	90"
Epicure	DS7	15" Net	106"	90"
Extravagance	DS8	15" Net	108"	90"
Glorious	DS18	15" Net	106"	90"
Humber	DS19	15" Net	106"	90"
Impulse	DS20	15" Net	106"	90"
Luxury	DS10	15" Net	108"	90"
Nomad	DS12	15" Net	106"	90"
Obscure	DS13	15" Net	96"	90"
Palladian	DS14	15" Net	106"	90"
Reveal	DS15	15" Net	108"	90"
Strande	DS16	15" Net	106"	90"
Sublime	DS17	15" Net	108"	90"

2-on-1 is not available with RemoteLift, Simplicity Rechargeable, or PowerWand motorization

SIDE-BY-SIDE VANE ALIGNMENT

When Dual Shades are installed side by side, vane alignment can be guaranteed within 3/8" only if:

- Shades are ordered at the same time and are identical style, color and height.
- Shades that need to be aligned are specified on the order form (a note must be included in Special Instructions).

ORDERING NOTE

- Finished blind height will always be in the full privacy position – with bands offset
- When you align bands to the view through position, the bottom rail will raise slightly off the window sill – the gap between the sill and bottomrail is approximately 1/2 the band width.

COLOR CHART

Material Name	Color Name	Color #	Cassette Color
Advance	Anthracite	DS1-3310	Black
Advance	Cognac	DS1-3308	Dark Brown
Advance	Haze	DS1-3305	Black
Advance	Mist	DS1-3301	Silver
Anastasia	Cream	DS2-2302	Beige
Anastasia	Honey	DS2-2303	Beige
Anastasia	Ice	DS2-2301	White
Beaumont	Black	DS3-2413	Black
Beaumont	Bone	DS3-2402	Beige
Beaumont	Café	DS3-2420	Dark Brown
Beaumont	Eggplant	DS3-2429	Black
Beaumont	Linen	DS3-2412	Beige
Beaumont	Mushroom	DS3-2419	Dark Brown
Beaumont	Pewter	DS3-2407	Silver
Beaumont	Raffia	DS3-2423	Beige
Beaumont	Silver	DS3-2416	Silver
Beaumont	Steel	DS3-2414	Black
Beaumont	White	DS3-2401	White
Cinema	Bamboo	DS4-5104	Beige
Cinema	Ecru	DS4-5103	Beige
Cinema	Granite	DS4-5125	Silver
Cinema	Linen	DS4-5122	Beige
Cinema	Mesa	DS4-5124	Dark Brown
Definition	Arctic	DS6-2550	Silver
Definition	Charcoal	DS6-2505	Black
Definition	Dusk	DS6-2503	Silver
Definition	Fawn	DS6-2501	Beige
Definition	Gunmetal	DS6-2504	Silver
Definition	Sable	DS6-2502	Dark Brown
Diversion	Arctic	DS21-6520	Silver
Diversion	Ivory	DS21-6521	Silver
Diversion	Fawn	DS21-6522	Beige
Diversion	Sable	DS21-6523	Dark Brown
Diversion	Dusk	DS21-6524	Silver
Diversion	Gunmetal	DS21-6525	Silver
Diversion	Charcoal	DS21-6526	Black
Epicure	Coffee	DS7-9708	Dark Brown
Epicure	Opal	DS7-9702	White
Epicure	Quartz	DS7-9701	White
Epicure	Sambuca	DS7-9713	Black
Epicure	Storm	DS7-9710	Silver
Epicure	Taupe	DS7-9704	Dark Brown

Material Name	Color Name	Color #	Cassette Color
Extravagance	Caraway	DS8-2605	Beige
Extravagance	Dove	DS8-2603	Silver
Extravagance	Horizon	DS8-2606	White
Extravagance	Opal	DS8-2602	Beige
Extravagance	Quartz	DS8-2601	White
Glorious	Snow	DS18-6210	White
Glorious	Canvas	DS18-6211	Beige
Glorious	Malt	DS18-6212	Dark Brown
Glorious	Greystone	DS18-6213	Silver
Glorious	Sable	DS18-6214	Dark Brown
Humber	Glacier	DS19-6300	Silver
Humber	Barley	DS19-6301	Beige
Humber	Pewter	DS19-6302	Black
Humber	Midnight	DS19-6304	Black
Impulse	Aztec	DS20-6411	Dark Brown
Impulse	Onyx	DS20-6413	Black
Luxury	Caraway	DS10-2805	Beige
Luxury	Dove	DS10-2803	Silver
Luxury	Honey	DS10-2804	Beige
Luxury	Horizon	DS10-2806	White
Luxury	Opal	DS10-2802	Beige
Luxury	Quartz	DS10-2801	White
Nomad	Coffee	DS12-5104	Dark Brown
Nomad	Flannel	DS12-5101	Silver
Nomad	Midnight	DS12-5103	Black
Nomad	Stucco	DS12-5102	White
Obscure	Acorn	DS13-2902	Dark Brown
Obscure	Barley	DS13-2907	Beige
Obscure	Bleach	DS13-2901	White
Obscure	Hickory	DS13-2905	Dark Brown
Obscure	Truffle	DS13-2909	Dark Brown
Palladian	Cognac	DS14-0908	Dark Brown
Palladian	Fawn	DS14-0904	Dark Brown
Palladian	Glacier	DS14-0901	White
Palladian	Ivory	DS14-0902	White
Palladian	Shadow	DS14-0910	Silver
Reveal	Beeswax	DS15-8601	Dark Brown
Reveal	Espresso	DS15-8608	Dark Brown
Reveal	Natural	DS15-8602	Beige
Reveal	Sand	DS15-8604	Beige
Reveal	Teak	DS15-8607	Dark Brown
Strande	Canyon	DS16-3102	Beige
Strande	Coconut	DS16-3101	White
Strande	Espresso	DS16-3104	Dark Brown
Strande	Java	DS16-3103	Dark Brown
Sublime	Ice	DS17-6100	White
Sublime	Opal	DS17-6101	Beige
Sublime	Silver	DS17-6102	Silver
Sublime	Charcoal	DS17-6103	Black
Sublime	Coffee	DS17-6104	Dark Brown
Sublime	Raven	DS17-6105	Black

GROUP 1

• Beaumont (96")

WIDTH TO:	24"	30"	36"	42"	48"	54"	60"	66"	72"	76"	84"	90"	96"
HEIGHT TO:													
40"	\$229	255	285	309	334	359	388	413	444	476	497	521	572
50"	238	265	295	322	349	377	409	435	468	503	524	552	605
60"	245	276	309	336	365	394	427	457	493	528	553	582	637
70"	252	285	319	351	382	411	448	478	516	555	581	612	670
80"	261	295	331	364	398	431	469	502	541	581	611	643	703
90"	268	305	343	377	413	448	488	523	565	607	639	673	735
100"	277	315	355	392	430	468	510	546	589	635	666	704	767
110"	285	326	368	407	446	485	530	568	614	661	695	735	799
120"	293	335	379	421	461	503	550	590	637	687	723	764	832

GROUP 2

• Glorious (90") • Humber (102") • Impulse (90") • Reveal (102") • Strande (100") • Sublime (90")

WIDTH TO:	24"	30"	36"	42"	48"	54"	60"	66"	72"	76"	84"	90"	96"	102"
HEIGHT TO:														
40"	\$289	326	363	398	432	467	507	540	583	625	655	689	754	777
50"	302	342	383	420	459	496	540	578	623	670	702	740	809	834
60"	316	358	403	444	486	528	575	615	664	713	750	790	863	890
70"	329	375	423	468	512	557	608	653	704	758	797	841	917	947
80"	343	392	444	492	540	588	642	690	745	803	845	893	973	1004
90"	355	409	463	515	567	620	676	726	786	846	893	944	1027	1061
100"	369	426	484	539	594	649	711	765	827	890	942	996	1082	1118
110"	382	442	504	562	621	679	744	801	867	934	988	1047	1136	1175
120"	395	459	524	585	648	710	777	838	907	979	1036	1097	1190	1231

GROUP 3

• Cinema (92") • Epicure (100") • Nomad (102") • Palladian (100")

WIDTH TO:	24"	30"	36"	42"	48"	54"	60"	66"	72"	76"	84"	90"	96"	102"
HEIGHT TO:														
40"	\$300	339	379	416	454	491	535	571	615	661	694	729	798	822
50"	316	358	402	444	485	528	575	613	662	713	749	790	863	889
60"	331	377	427	471	517	562	612	657	711	765	805	850	926	955
70"	346	396	450	499	549	597	653	701	758	816	861	909	990	1022
80"	362	416	474	528	580	633	693	745	806	867	915	970	1054	1089
90"	377	436	496	553	611	669	733	789	854	920	971	1028	1118	1156
100"	394	456	520	581	644	704	772	833	902	971	1028	1089	1181	1222
110"	409	475	544	609	674	741	811	877	949	1023	1084	1147	1245	1288
120"	423	494	567	637	705	776	851	920	996	1074	1139	1208	1308	1354

OPTIONS: NO CHARGE – SPECIFY ON ORDER

- 2 on 1 Headrail (price as two separate shades)
- Non-wrapped bottomrail option (fabric-wrapped bottomrail standard)
- Hold-Down Brackets
- Metal Bead Chain Option

(Please note: when metal bead chain option is selected, the tensioner color will coordinate with the cassette headrail color. If the cassette headrail is silver, the tensioner will be white)

See page 8 for motorization surcharges

GROUP 4

• Advance (94") • Anastasia (100") • Extravagance (100") • Luxury (100")

WIDTH TO:	24"	30"	36"	42"	48"	54"	60"	66"	72"	76"	84"	90"	96"	100"
HEIGHT TO:														
40"	\$323	368	415	457	501	544	592	636	685	737	776	818	893	922
50"	343	392	444	493	541	589	645	693	748	805	849	897	976	1007
60"	363	419	475	528	583	637	696	749	810	873	922	975	1060	1095
70"	383	443	507	564	624	683	748	806	873	939	995	1052	1143	1181
80"	403	469	536	601	665	729	800	864	935	1007	1067	1131	1227	1269
90"	423	494	567	637	705	776	851	921	997	1075	1139	1209	1309	1356
100"	444	519	599	673	748	822	904	978	1060	1143	1213	1288	1393	1442
110"	464	545	628	708	789	869	955	1035	1121	1211	1285	1365	1477	1530
120"	484	571	660	745	830	915	1006	1091	1184	1278	1357	1444	1559	1616

GROUP 5

• Definition (90") • Diversion (102") • Obscure (96")

WIDTH TO:	24"	30"	36"	42"	48"	54"	60"	66"	72"	76"	84"	90"	96"	102"
HEIGHT TO:														
40"	\$335	383	435	481	528	575	628	673	728	782	824	870	949	979
50"	359	412	469	520	575	628	685	738	797	859	907	959	1043	1078
60"	382	442	504	562	621	680	745	803	869	937	990	1048	1139	1177
70"	405	470	539	603	669	734	804	867	939	1013	1072	1137	1233	1276
80"	427	499	575	645	716	787	863	933	1010	1090	1156	1227	1328	1374
90"	451	528	609	685	762	838	922	998	1082	1167	1239	1315	1423	1474
100"	474	557	645	726	810	893	981	1064	1153	1245	1322	1404	1518	1574
110"	496	586	679	768	857	946	1039	1128	1224	1321	1405	1493	1613	1672
120"	519	615	714	809	903	998	1098	1192	1294	1398	1487	1582	1708	1771

OPTIONS: NO CHARGE – SPECIFY ON ORDER

- 2 on 1 Headrail (price as two separate shades)
- Non-wrapped bottomrail option (fabric-wrapped bottomrail standard)
- Hold-Down Brackets
- Metal Bead Chain Option

(Please note: when metal bead chain option is selected, the tensioner color will coordinate with the cassette headrail color. If the cassette headrail is silver, the tensioner will be white)

See page 8 for motorization surcharges

**SIMPLICITY RECHARGEABLE AND POWERWAND OPTIONS:
EXTRA CHARGE – SPECIFY ON ORDER
USE APPROPRIATE DUAL SHADE GRID FOR SHADE PRICE, THEN ADD EXTRA CHARGE(S) BELOW.**

- Simplicity Rechargeable Motoradd \$322 per shading
 - 5 Channel Remote Control (Black or White).....(Black Part #CS5138 or White Part #CS5138W).....add \$50 each
 - Solar Paneladd \$175 each
 ***Motor is only available on the right side for Simplicity Rechargeable
- PowerWandadd \$134 per shading
 - PowerWand Options (must be specified):
 - 1) Control Side (Left or Right)
 - 2) Wand Color (Black or White)
 - 3) Wand Length:
 - 1 foot (12")
 - 2 feet (24")
 - 3 feet (36")
 - 4 feet (48")
 - 5 feet (60")
- Plug-in Charger (Can be used for both Simplicity Rechargeable and PowerWand).....add \$36 each

**REMOTELIFT OPTIONS: EXTRA CHARGE – SPECIFY ON ORDER (Must select RemoteLift power source* when ordering)
USE APPROPRIATE DUAL SHADE GRID FOR SHADE PRICE, THEN ADD REMOTELIFT EXTRA CHARGE(S) BELOW.**

***MOTOR IS ONLY AVAILABLE ON THE RIGHT SIDE FOR REMOTELIFT.

- Radio Frequency (RF) RemoteLift Motorization Upgrade add \$373 per shade
- Radio Frequency (RF) Remote Control – 1 Channel Part #RC445069 add \$118 each
- Radio Frequency (RF) Remote Control – 5 Channel Part #RC445079 add \$151 each
- Radio Frequency (RF) Remote Control – 16 Channel ** available as a separate part order only**..... Part #1811081..... add \$540 each
- Radio Frequency (RF) Remote Control – Telis Modulis 1 Channel Part #1811234..... add \$224 each
- Radio Frequency (RF) Remote Control – Telis Modulis 5 Channel Part #1811235..... add \$253 each
- Radio Frequency (RF) Wireless Wall Switch – 1 Channel Part #1810897 add \$298 each
- Radio Frequency (RF) Wireless Wall Switch – 5 Channel Part #1810813 add \$298 each
- Radio Frequency (RF) Programmable Timer – 1 Channel..... Part #1805237A..... add \$474 each
- RTS – Smoove 1 RTS..... Part #1811533 add \$154 each
- RTS – myLink RTS interface..... Part #1811403 add \$442 each
- Radio Frequency (RF) Reloadable Single Battery Wand** Part #RC445268 add \$159 each
- Radio Frequency (RF) Reloadable Dual Battery Wand** Part #RC445268 add \$322 each
- Dual Wand Y Harness (required)..... Part #9018625 add \$13 each
- Radio Frequency (RF) Transformer..... Part #1822445 add \$160 each
- Radio Frequency (RF) Battery Wand Extension Wire – 10"..... Part #9018686A..... add \$12 each
- Radio Frequency (RF) Battery Wand Extension Wire – 48"..... Part #9016736 add \$17 each
- Radio Frequency (RF) Battery Wand Extension Wire – 96"..... Part #9018624 add \$22 each
- Radio Frequency (RF) Lithium Batteries (Reloadable Wand – 8 each) Part #9014834 add \$53 each
- Solar Recharge Kit (batteries NOT included)Part #9019034.....add \$293 each
(Includes solar panel, 10" Y harness, 12v reloadable battery tube, tube mounting clips, glass mount adhesive tape, solar panel mounting brackets – 4 qty.)
- NiMh Rechargeable Batteries (quantity of 10).....Part #9018621.....add \$83 each
- Plug-in AC Battery Rapid Charger (for solar recharge kit only) (includes 12" cable).....Part #9018620.....add \$290 each
- 48" Extension Cable for Y HarnessPart #9016374.....add \$19 each

Notes: * RemoteLift power source options: Reloadable Single Battery Wand, Reloadable Dual Battery Wand, and Transformer (plugs into standard wall outlet)


** Each Reloadable Battery Wand comes with a set of 8 AA lithium batteries on initial shade orders. The part numbers above reference the battery wands only. The part # for replacement pack of 8 AA lithium batteries is #9014834.

When ordering multiple motorized shades/remotes, please provide programming instructions. Otherwise, all shades will be programmed to one remote.

PRODUCT SPECIFICATIONS

Cassette Measurement

- 3-5/8" wide x 3" high



Mounting Requirements

Inside Mount

- Minimum shallow mounting surface: 1-1/2"
- Minimum flush inside mounting including brackets for cassette: 3-3/4"

Outside Mount

- Minimum outside mount surface: 1-1/2"

Hardware Colors

Cassette available in white, beige, black, dark brown and anodized silver.

- A matching fabric insert in headrail is a standard feature
Please Note: on certain fabrics with narrower bands, the fabric insert will feature both the solid fabric and the sheer.
- Fabric-wrapped bottomrail is a standard feature (non-wrapped bottomrail optional)
- Universal metal bracket will be supplied
- Cord loops and tensioners are color-coordinated


Metal Bead Chain Option

- Metal Chain optional in the following colors: White, Black, Antique Brass, Oil Rubbed Bronze, Stainless Steel, and Nickel
(Please note: when metal bead chain option is selected, the tensioner color will coordinate with the cassette headrail color.
If the cassette headrail is silver, the tensioner will be white)

Cord Loop, Metal Beaded Chain Lengths

SHADE HEIGHT	LOOP DROP
24" - 39 7/8"	24" loop
40" - 59 7/8"	36" loop
60" - 83 7/8"	48" loop
84" - 107 7/8"	60" loop
108" - 120"	72" loop

Please Note: Environmental conditions, such as heat, humidity, etc., may result in light bowing, puckering and dimpling of the fabric which is considered normal. Some fabrics may lightly fray which is considered normal and within specifications.

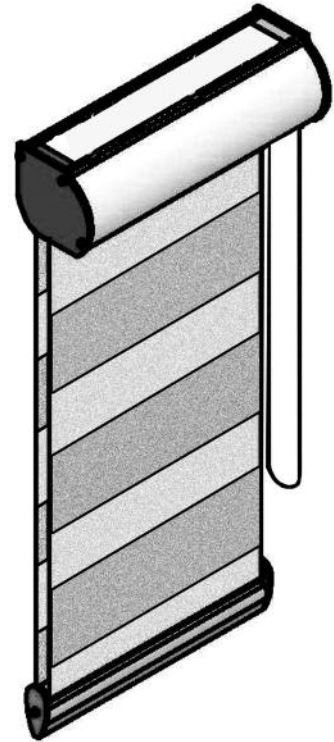

FINISHED DIMENSIONS

	Continuous Cord Loop	RemoteLift	Simplicity Rechargeable	PowerWand
	INSIDE MOUNT			
Cassette width	minus 1/4"	minus 1/4"	minus 1/8"	minus 1/8"
Tube Width	minus 1-1/8"	minus 1-1/8"	minus 1"	minus 1"
Fabric width	minus 1-1/4"	minus 1-1/4"	minus 1-1/8"	minus 1-1/8"
Bottom rail outer width	minus 1-3/16"	minus 1-3/16"	minus 1-1/16"	minus 1-1/16"
Bottom rail inner width	minus 1-3/8"	minus 1-3/8"	minus 1-1/4"	minus 1-1/4"

Deductions noted are taken from **Ordered Width**

	Continuous Cord Loop	RemoteLift	Simplicity Rechargeable	PowerWand
	OUTSIDE MOUNT			
Cassette width	ordered width	ordered width	ordered width	ordered width
Tube Width	minus 7/8"	minus 7/8"	minus 7/8"	minus 7/8"
Fabric width	minus 1"	minus 1"	minus 1"	minus 1"
Bottom rail outer width	minus 5/16"	minus 5/16"	minus 5/16"	minus 5/16"
Bottom rail inner width	minus 1-1/8"	minus 1-1/8"	minus 1-1/8"	minus 1-1/8"

Deductions noted are taken from **Ordered Width**


For IB and OB, Shade Height is **Ordered Height**

	Continuous Cord Loop	RemoteLift	Simplicity Rechargeable	PowerWand
Minimum Width (NET)	15"	18"	19"	21"
Minimum Height	24"	24"	20"	20"

SIMPLICITY RECHARGEABLE MOTORIZATION: OVERVIEW

Simplicity Rechargeable

- The Rechargeable Simplicity motor program features an integrated rechargeable lithium ion battery in the motor casing and is fully concealed by the inner tube.
- Rechargeable battery is included with the motor. The average battery charge will last 6-12 months based on an average sized shade raised and lowered once per day. The life of the battery charge will vary based on the type of window covering selected, the size and weight of the window covering and the number of times the shade is operated on a daily basis. The battery can be recharged up to 500 times. It takes approximately 5 hours to recharge the motor when fully depleted.

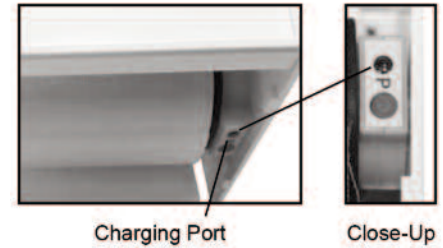

Battery Charger

- An 8.4 Volt charger requires a standard power outlet to recharge the battery. The charger must be specified when ordering Simplicity Rechargeable Motorized shade option. The charger plugs into the charging port of the motor. The charger is black and comes with a 156" wire. The dimensions are 1" wide x 2-1/2" length x 1-3/4" deep. Sold separately.



Solar Panel Recharge Option

- Plugs in to any Simplicity Rechargeable motorized shading (does not work with PowerWand). Provides constant trickle charge to 7.4v Li-ION Rechargeable battery packs. Does not require direct sunlight, but performs best in regular direct sunlight applications. Will prolong the life of the charge of the 7.4v rechargeable battery packs, and in some applications will maintain charge indefinitely.
- Life of charge is subject to application variables such as, size and weight of shade, frequency of use, amount of direct sunlight exposure, etc.



5 Channel Remote

- The remote can operate up to five shadings simultaneously, individually or in groups. Remotes and holders are available in white or black. The remote comes with a holder which can be mounted to a wall for easy storage. The range of the remote is approximately 80 feet.



Please Note:

- Motor is only available on the right side.
- Not all motors run at the same rate of speed.
- Simplicity motors have a "Favorites" position setting. To set a "Favorites" position, follow instructions provided in the installation instructions.

POWERWAND MOTORIZATION: OVERVIEW

PowerWand™ Motorization


- Dual Shades can be fabricated with the PowerWand Rechargeable Push Button Control option. The PowerWand Rechargeable option is an easy, cord free motorized operation for the budget savvy homeowner. PowerWand Rechargeable uses Simplicity motors and components.

PowerWand Rechargeable Shades Operation

- Press the up or down button on the pendant to raise or lower the shading to your desired position. No programming is required with PowerWand as upper and lower limits are set at the factory. If desired, upper and lower limits can be adjusted in the field.
- Please refer to the installation instructions for instructions on resetting the upper and lower limits and setting a favorites position can be programmed on-site.

PowerWand Appearance

- The PowerWand Rechargeable wand and pendant is attached to the head rail and requires no additional mounting.
- The wand and pendant hangs down the front of the shades from the head rail.
- Pendant is 2-1/2" long.
- The pendant does not need to be mounted to the wall to operate the shade.

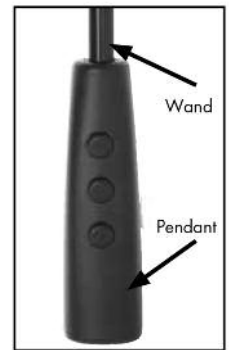

PowerWand Options

- Wand is available in Black or White (there is no default)
- Wand is available in 1 foot increments from 1 to 5 feet (there is no default)
- Wand is available on either the right or left side of the shade (there is no default)



White



Black Shown with
Plug-In Charger

PowerWand Battery Life

- The battery life will vary based on the type of window covering selected, the size and weight of the window covering and the number of times you operate the blind on a daily basis.

Battery Charger

- 8.4 Volt charger requires a standard power outlet to recharge the battery. The charger must be specified when ordering the PowerWand motorization option. The charger plugs into the charger port on the side of the pendant. The charger is black and comes with a 156" wire. The dimensions are 1" wide x 2-1/2" length x 1-3/4" deep.



REMOTELIFT™ MOTORIZATION: OVERVIEW

With RemoteLift™ motorized shades, enjoy a better quality of life and have more time to enjoy life's daily pleasures. At the touch of a button, window coverings can be instantly adjusted to changing activities or the varying sun conditions.



An ideal solution is to manage glare with a RemoteLift hand-held remote control. At the simple touch of a button, shades will open or close to adjust to the changing sunlight in a room.



RemoteLift Radio Frequency (RF) motorized shades provide ultra-quiet operation. The system can operate shades from virtually anywhere in the house without direct line of sight. Similar to how a garage door opener operates, radio signals travel through walls and make it possible to control multiple coverings throughout the home alone or as a group. The RF system is also available in a 5-channel version. The multi-channel RF system allows for independent control of individual shades and/or group control.

RemoteLift motorization systems provide many benefits, such as improving energy efficiency, providing easily controllable privacy and also enhancing home security.



The RemoteLift RF timer allows users to program specific times of the day to automatically adjust shades in different areas of the house, protecting interiors from the fading effects of direct sunlight. This feature provides added security to an unoccupied home by creating a lived in look even while homeowners are away on vacation.



The battery powered RemoteLift RF wireless wall switch allows shades to be controlled when entering or exiting a room, just like the lights. The switch may be seamlessly installed without wiring next to any light switch or stand alone, and is never misplaced. This one touch privacy helps create the ideal environment whether preparing for a bath, relaxing in bed or enjoying time with the family at home.



The Smoove® 1 RTS surface-mounted wall switch avoids cutting into drywall. This single channel, battery-operated solution is easy to install, and doesn't require an electrician. It's an intuitive, surface mount control.



The myLink™ RTS Smartphone and Tablet Interface is a WiFi to Radio Technology Somfy® (RTS) bridge that can control up to 5 channels of RTS motorized products using the Somfy myLink apps for iOS and Android devices. Through the app, users can send immediate RTS commands, create scenes (a group of motorized products working together) and schedules (timed events). Users may access their myLinks from anywhere with the app's remote access feature. Though the myLink is a single-zone controller, multiple myLinks can be joined within the same system for multi-zone control.

RemoteLift motorized shades are powered by Somfy, an industry leader in automated window coverings. All motorized products are backed by a 5 year warranty.



REMOTELIFT™ MOTORIZATION: FEATURES & OPTIONS








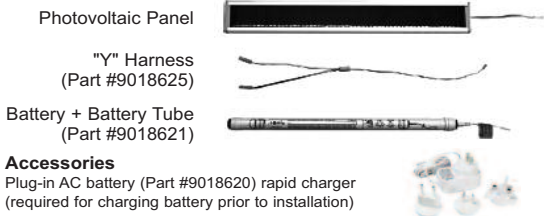


RADIO FREQUENCY (RF) MOTORIZATION FEATURES:

- Highest quality patent protected design by Somfy
- Advanced motor, capable of lifting shades up to 12 LBS.
- Quiet operation
- Motor is fully enclosed within the headrail
- Installs with standard installation hardware
- RF motor is programmable

Note: The power source must be selected when ordering. The options are: reloadable single or dual battery wand, and the plug-in transformer.



	Radio Frequency (RF) RemoteLift Motor Motor (Part #1002481) Crown (Part #9018588A) Drive (Part #9018477)	<ul style="list-style-type: none">• Fully concealed motor unit• Flexible and programmable operation• 12 Volt System• Motor is only available on the right side
	Radio Frequency (RF) Remote Control (must order separately) Color: 2 tone white and gray 2 Types: programmable 1-channel and programmable 5-channel (1-Channel: Part #RC445069) (5-Channel: Part #RC445079) (Telis Modulis 5-Channel: Part #1811235) (16-Channel: Part #1811081 – available as a separate part order only)	<ul style="list-style-type: none">• Controls shade operation• Programmable features• Easy shade positioning up to 90 feet away• 5-channel remote allows for multiple and independent shade operation• 5-channel remote programming can be done by special request prior to shipping. Contact customer service with your programming instructions otherwise all shades will be programmed on channel 1.
	Single Battery Wand (reloadable) and Installation Clips Wand (Part #RC445268) Clips (Part #9013263) 8 AA Lithium Batteries (not shown) (Part #9014834)	<ul style="list-style-type: none">• On initial shade orders, the reloadable wand comes with 8 AA lithium batteries• Comes with mounting installation clips• For parts ordering the reloadable wand INCLUDING 8 AA lithium batteries, order both part #s• Replacement 8 AA lithium batteries may also be ordered separately
	Optional, Dual Battery Wand (reloadable) and Installation Clips (Part #RC445268) (Clips: Part #9013263) (Y-Harness: Part #9018625) (Y-Harness Ext. Cable: Part #9016374)	<ul style="list-style-type: none">• On initial shade orders, the reloadable wands come with 16 AA lithium batteries• Combines (reloadable) Single Battery Wands for added lifting capacity and/or extended life• Comes with mounting installation clips
	Transformer 10' Cable (Part #1822445)	<ul style="list-style-type: none">• Plug-in operation, no batteries required• Works in standard wall outlet (10' wire length)
	Battery Wand Extension Cables Color: White (10" Cable: Part #9018686A) (48" Cable: Part #9016736) (96" Cable: Part #9018624)	<ul style="list-style-type: none">• Available in 10", 48" and 96"• Allows battery wand installation away from headrail
	Wireless Wall Switch Color: white 2 Types: programmable 1-channel and 5-channel (1 Channel: Part #1810897) (5 Channel: Part #1810813)	<ul style="list-style-type: none">• Control wireless operation from the wall up to 90 feet away• Works like turning a light on/off
	Programmable Timer 1 Type: programmable 1-channel (Part #1805176)	<ul style="list-style-type: none">• Program operation based on pre-set times• Excellent home security feature
	Smoove 1 RTS – single channel surface mount control Color: Pure (Part #1811533)	<ul style="list-style-type: none">• Battery operated• Tactile buttons for UP/DOWN/MY/STOP control• LED for visual feedback
	myLink Interface Color: White (Part #1811403)	<ul style="list-style-type: none">• Smartphone and Tablet Interface 120V AC• App Control• Remote Access• Compatible and controls all Radio Technology Somfy RTS products.• Can control up to 5 channels of RTS motorized products using myLink apps for iOS and android devices.
	WireFree™ Solar Pack Kit – Batteries NOT included (Part #9019034) Photovoltaic Panel "Y" Harness (Part #9018625) Battery + Battery Tube (Part #9018621) Accessories Plug-in AC battery (Part #9018620) rapid charger (required for charging battery prior to installation)	<ul style="list-style-type: none">• Uses sunlight to power a motorized shade.• Easy to install. Low profile, easy to conceal.• Solar Recharge Kit (batteries NOT included) (Part #9019034) – Includes solar panel, 10" Y harness, 12v reloadable battery tube, tube mounting clips, glass mount adhesive tape, solar panel mounting brackets – 4 qty.)• NiMh Rechargeable Batteries (quantity of 10) (Part #9018621)• Plug-in AC Battery Rapid Charger (for solar recharge kit only) (includes 12" cable) (Part #9018620)• 48" Extension Cable for Y Harness (Part #9016736)

QUICK MOTORIZATION PROGRAMMING GUIDE

Programming Mode

Before you begin

Motors are shipped without limit settings and transmitter ID's. Steps 1 to 7 must be completed to ensure proper shade programming and functionality. Power should ONLY be connected to current shade being programmed. All other shades should be disconnected from their respective power while programming

STEP 1: Connect power

With the motor installed in shade, connect power to the motor



STEP 2: Initiate programming

Press both and at the same time until the shade jogs. **A jog is a brief up and down motion.** In Programming Mode, the shade will move only when the or is held



STEP 3: Check directions

Press or . When pressing product should go down or out. To change direction press and hold (Stop) until the shade jogs. **A jog is a brief up and down motion.**



STEP 4: Set the limits

Bring the shade to desired **upper** limit stop point. Press both (Stop) and until the motor moves, then release. (If the shade stops when the buttons are released take it back to the upper limit and repeat) Stop the motor when reaching the desired **lower** limit. You can adjust by pressing or



STEP 5: Set the limits

Press both (Stop) and at the same time until the shade moves, then release. The shade will stop at the original upper limit.



STEP 6: Confirm limit settings

Press and hold (stop) until the shade jogs to confirm the limit settings. **A jog is a brief up and down motion.**



STEP 7: Set user mode

Press and hold the programming button on the back of the transmitter until the shade jogs. The shade is now in User Mode. In User Mode, the shade will operate with a brief press on or Double check limit settings as a precaution.

Adjusting the limits in User Mode



To change the lower limit

Send the shade to it's current lower limit.



Press both and at the same time until the shade jogs. Adjust to a new lower limit position.

Press until the shade jogs



To change the upper limit

Send the shade to it's current upper limit.



Press both and at the same time until the shade jogs. Adjust to a new upper limit position.

Press until the shade jogs



Setting an Intermediate Position (Preferred Position)

Setting

Press the or to operate shade. At the desired intermediate (preferred) position press (Stop) to stop the shade.

Once the desired Intermediate position is reached, Press and hold (stop) until the shade jogs. The Intermediate position is now added to memory



Using

Send the shade to the intermediate position by pressing (stop) from ANY shade position.

Note: Shade should be stationary prior to activating intermediate position function.

Note

If shade is actively moving (in-motion) Should be pressed twice.

To Delete: Activate shade to intermediate position, then press and hold (stop) for 5 seconds. Shade will jog to confirm deletion.

Adding or deleting a Transmitter or a Channel



Programmed Transmitter

STEP 1: Using already programmed transmitters select the transmitter (single channel) or the channel, (1-5) of a multi-channel transmitter.

STEP 2: Press and hold the programming button of that transmitter until the shade jogs.


Transmitter to add or delete

STEP 3: Select the transmitter (single channel) or the channel, (1-5) of a multi-channel transmitter, to be added or deleted.


STEP 4: Press and hold the programming button of that transmitter until the shade jogs.



PRODUCT COMPONENTS – STANDARD

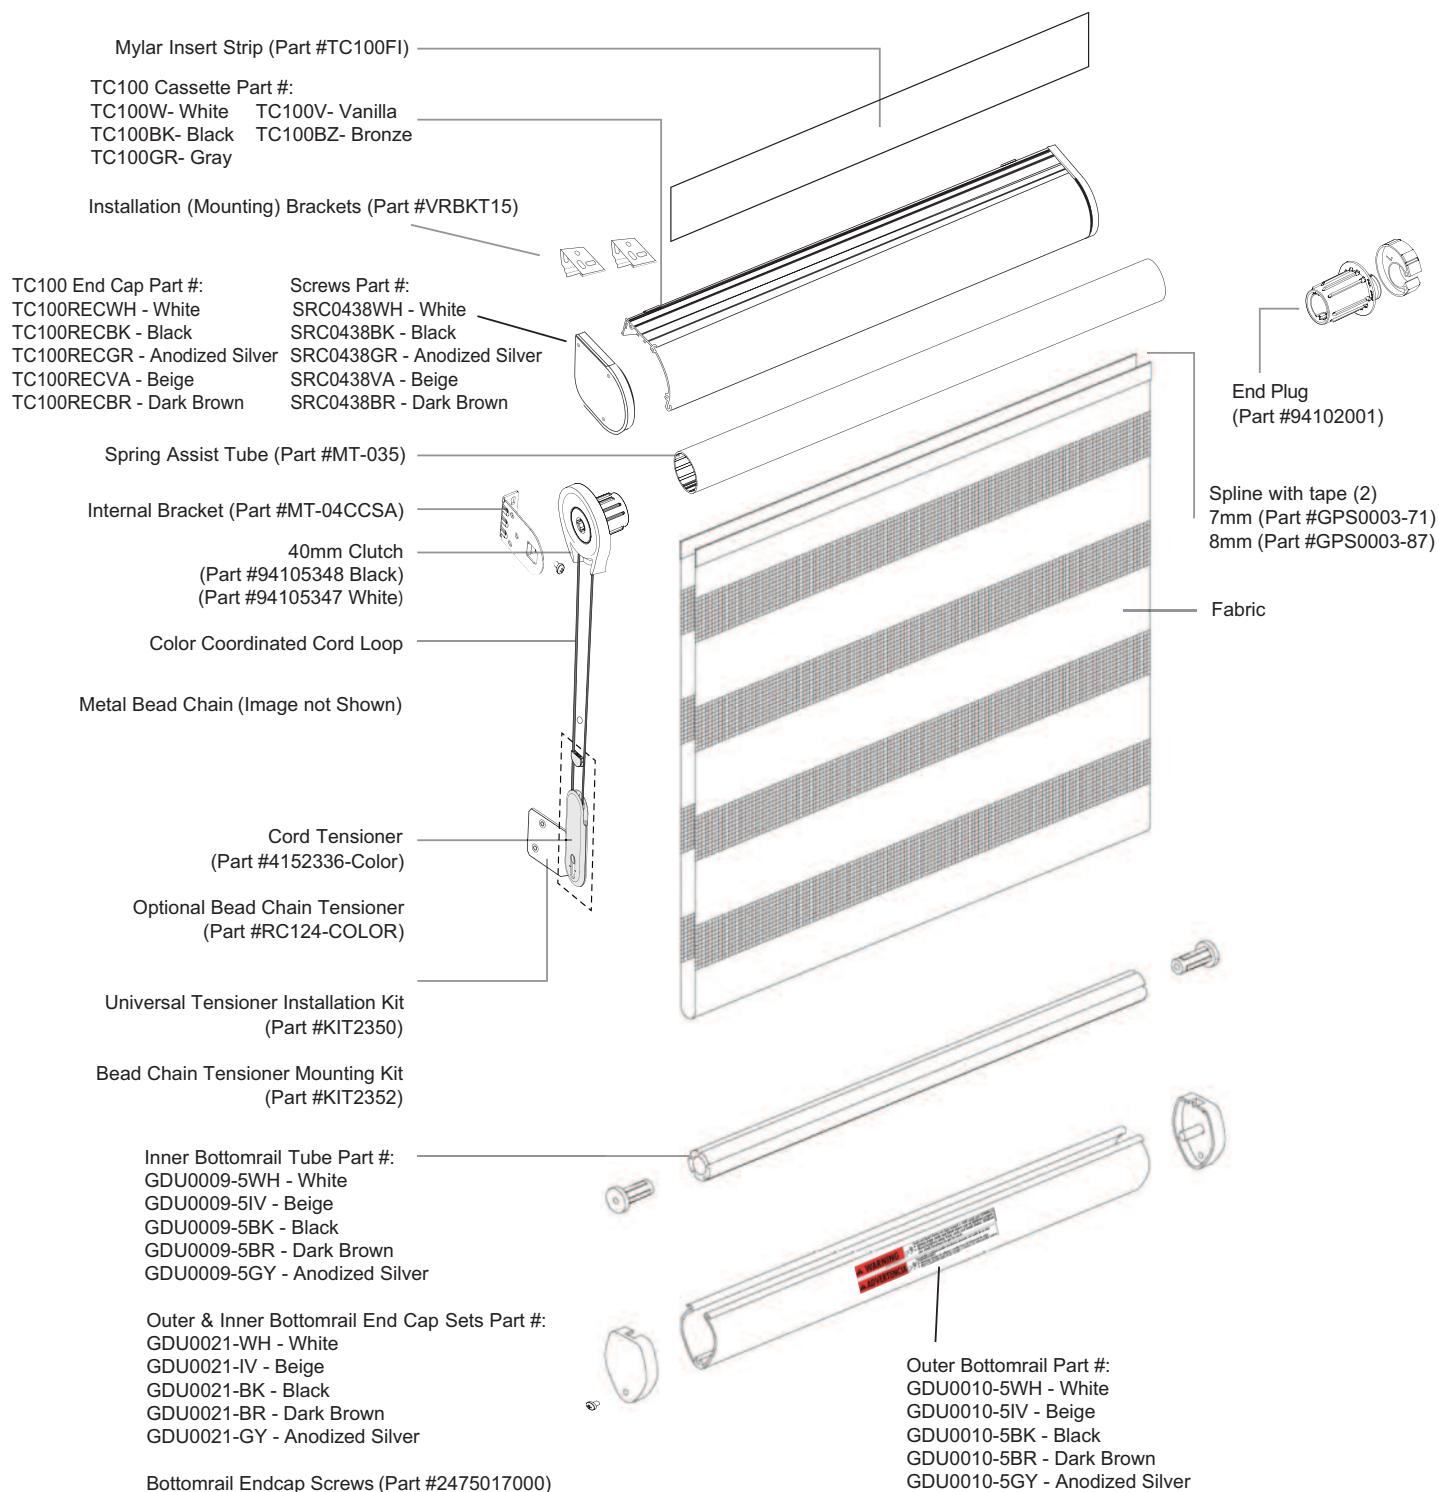

PRODUCT COMPONENTS – SIMPLICITY RECHARGEABLE MOTORIZATION

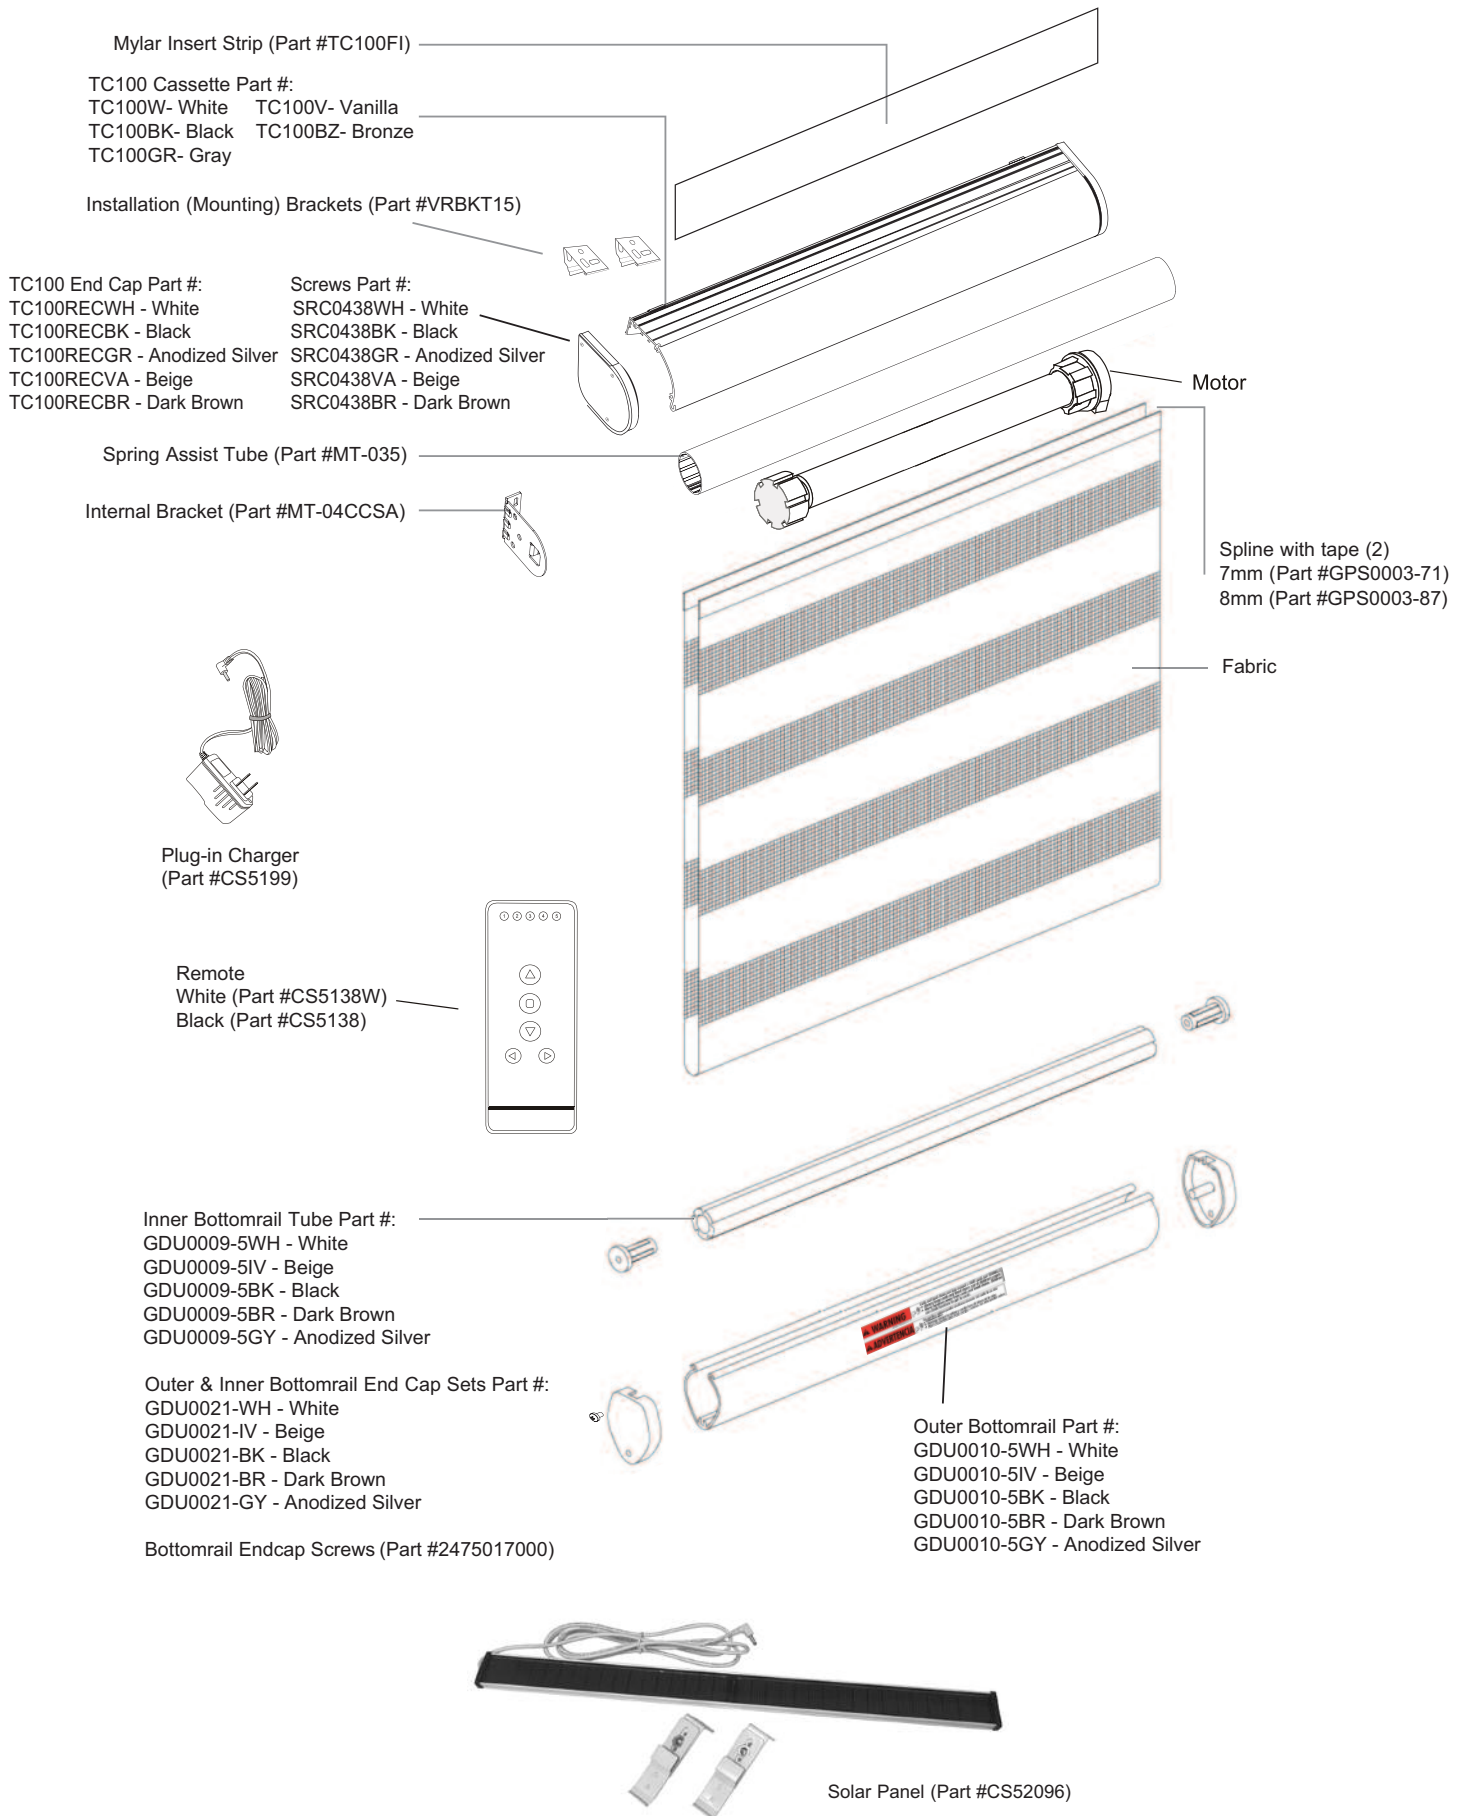

PRODUCT COMPONENTS – POWERWAND MOTORIZATION

