


# Operation Instructions

## Zip Dee Relax 12v

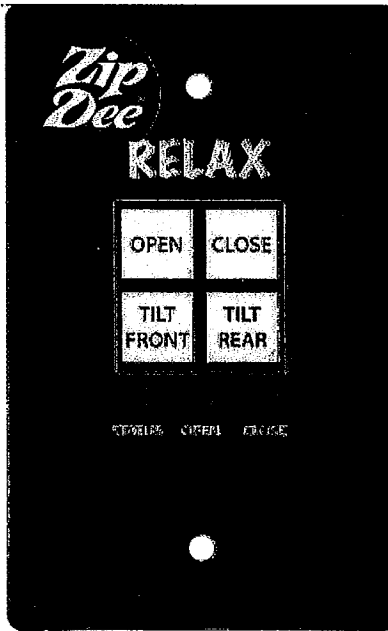

Operation of this awning is fairly straightforward and self-explanatory, but this guide will highlight the important details and give some tips on mastering its use. Please read through this guide carefully and familiarize yourself with all the functions of the awning before attempting to use.

### Basic Operation

- **Open-** To open your awning, simply press the "OPEN" button. The awning will roll out and the arms will come out to their full extension.
- **Tilt-** This awning has the ability to tilt to the front or rear to allow for water runoff. In order to use the tilt function, the awning must be completely open (the green light must be lit up above "OPEN" on the wall switch). Press the "TILT" button (front or rear) and the awning will drop the corresponding side. To un-tilt, press the same "TILT" button.
- **Close-** The awning is designed to be able to close from any position by pressing the "CLOSE" button. If the awning is tilted, do not be alarmed that only one arm begins to retract, the awning will level itself out before both arms continue to retract in unison.

### Tips and Advanced Operation


- **Interrupting-** Any button on the keypad will pause the awning in any process that it is performing. Once the process is interrupted, you can either continue the process it was performing by pressing the corresponding button (eg. If you stop the awning when it is halfway out, and want it to open the rest of the way, press "OPEN") or you can close the awning at any time by pressing "CLOSE".

- **Partial Open Position-** This awning is unique in that it has support against the wind in any partially open position. This allows you to open your awning in confined spaces. Simply press **any button** to stop the open process at the desired extension. Note: From a partially open position, the tilt function is not available. "OPEN" will continue to open the awning to its fully open position, "CLOSE" will close the awning, but "TILT" will produce no result.
- **Partial Tilt-** By default, when you press the "TILT" button, the corresponding arm drops 10 inches. If you desire less tilt, you can interrupt the process by pressing any button. When the awning is partially tilted, you can either continue to tilt the awning by pressing the same "TILT" button, open it back to its full open position by pressing "OPEN", or close it by pressing "CLOSE".
- **Reset-** The awning is designed so all of the sensors re-calibrate every time it completely closes. If the awning seems to be working improperly, run a complete close cycle to reset it.
- **Power Cycle:**

## Very Important

**Any time there is a gap in power to the awning, RUN A CLOSE CYCLE before attempting any other functions on the awning.** This allows all the sensors to reset and ensures that the awning knows its position and will function properly.

### Optional Remote:

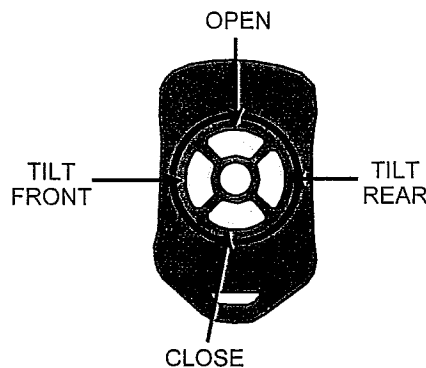

### Note:

The remote operates the same way as the keypad. However the center button will not stop any process of the awning.