



Part #	Part Name	Qty.	Item#
EA900H	Honda 4 Stroke Engine	1	1
RT600	Throttle Assembly	1	2
RL500*	Rattler Flex Hose	1	3
RL550*	Rattler Drive Cable	1	4
RL250	Rattler Vibrator Head Assembly	1	5
TL650	Shoulder Strap Assembly	1	6

\*Rattler flex hose and drive cable can be cut to specified length


We now have a part called the Rattler Whip. This includes part# 3,4, &5. You can use your current Rattler engine and interchange the whips to get the desired length you need for the job!!

### Rattler Whip

Part#	Description	Part#	Description
RL304	4'Rattler Whip	RL310	10'Rattler Whip
RL305	5'Rattler Whip	RL311	11'Rattler Whip
RL306	6'Rattler Whip	RL312	12'Rattler Whip
RL307	7'Rattler Whip	RL313	13'Rattler Whip
RL308	8'Rattler Whip	RL314	14'Rattler Whip
RL309	9'Rattler Whip		


For pricing and a dealer near you, call Lindley Inc. @ 800-788-5997

Figure 1  
EA900H and TL324 (Honda Clutch Complete)

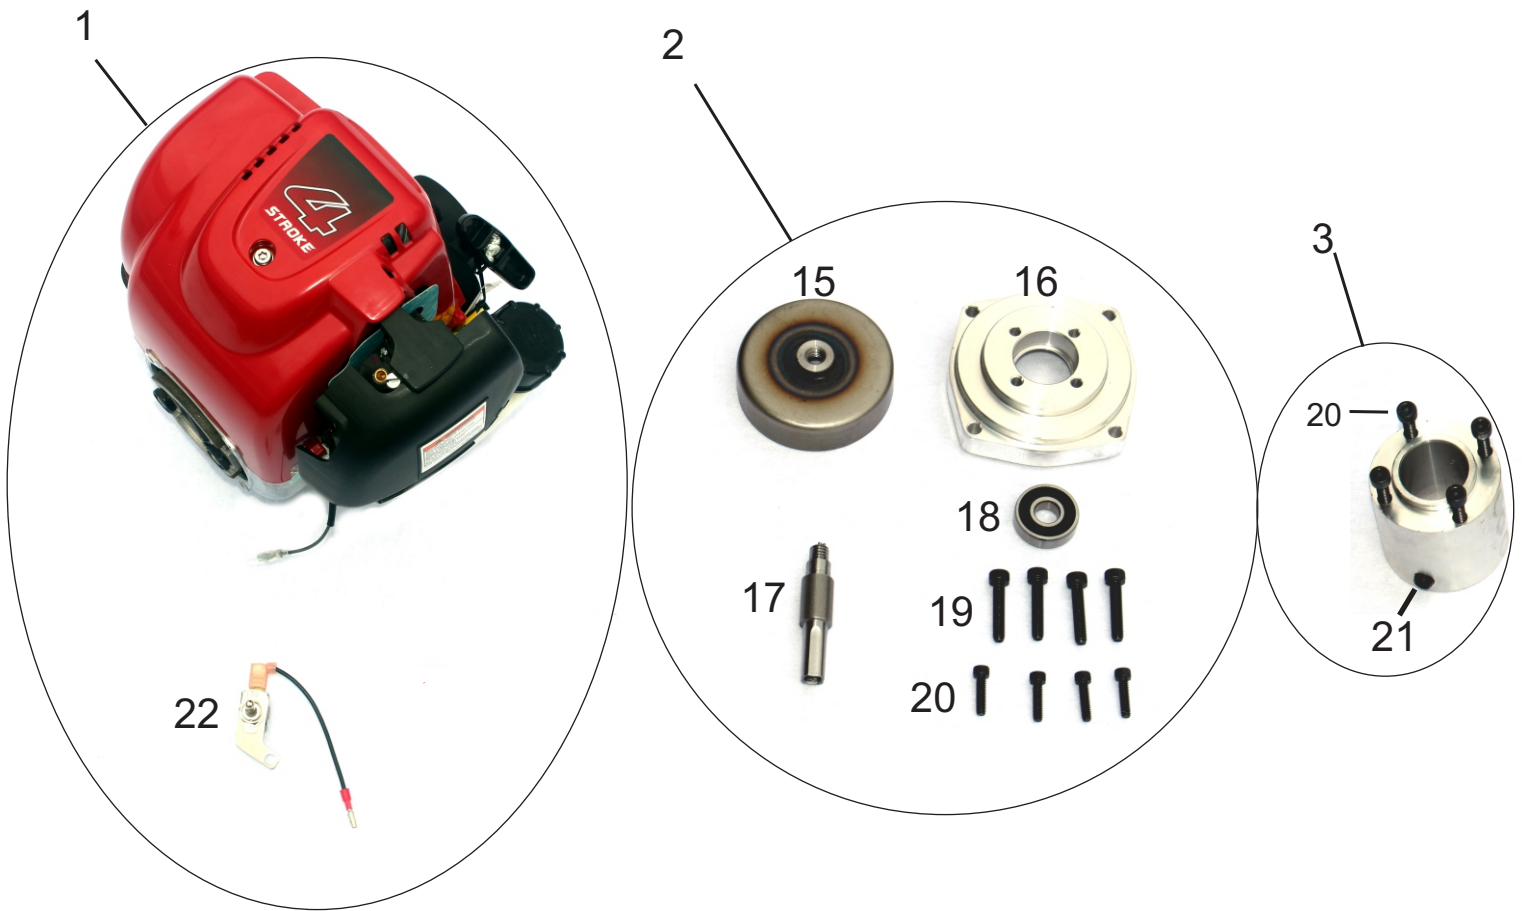

Item	Part Number	Description
1	EA900H	VS1,VSII, & Rattler Honda Engine with ON/OFF Switch
2	TL324	VSI,VSII, & Rattler Honda Clutch Complete
3	TL320	VSI & Rattler Clutch Adapter Nosepiece (VSI and Rattler Only)
15	TL316	VSI,VSII, & Rattler Honda Clutch Drum
16	TL317	VSI,VSII, & Rattler Honda Engine Clutch Adapter
17	TL319	VSI,VSII, & Rattler Honda Clutch Shaft
18	TL329	VSI,VSII, & Rattler Honda Clutch Bearing
19	TL314	VSI,VSII, & Rattler Honda Engine Mounting Screw
20	TL071	VSI,VSII, & Rattler Honda Clutch Adapter Mounting Screw
21	TL012	VSI & Rattler Clutch Adapter Nosepiece Set Screw 5/6-18 X 3/8
22	TL605	VSI,VSII, & Rattler Honda Engine ON/OFF Switch

# Rattler Vibrator Head Assembly

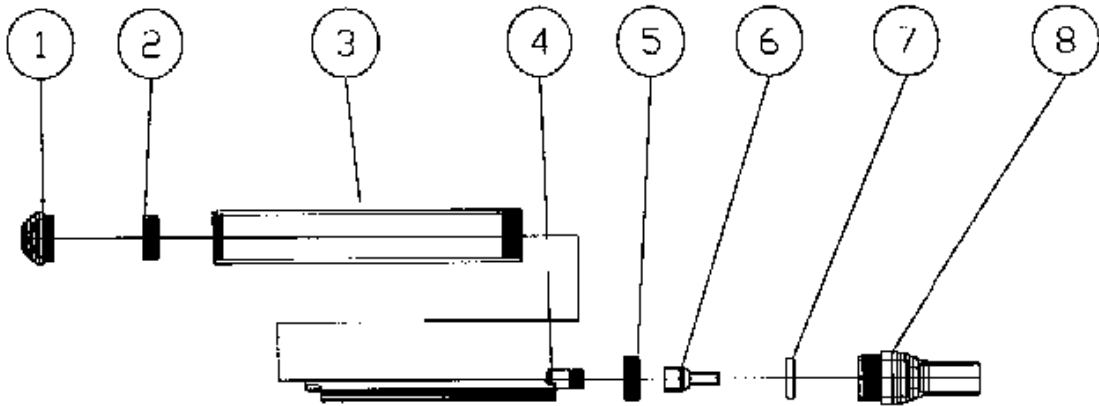

Part#	Part Name	Item#
RL0015	End Cap	1
RL0025	6003RS Bearing	2
RL0035	Vibrator Shaft Housing	3
RL0045	Vibrator Shaft	4
RL0065	Flex Shaft Connector	6
RL0075	Seal	7
<b>RL0085</b>	<b>Flex Shaft Housing Connector</b>	<b>8 (Not Sold Separately)</b>
RL250	Vibrator Assembly Complete	1-7
TL052	Vibrator Shaft 202 Bearing	5

For pricing and a dealer near you call 800-788-5997

## Rattler Hose and Cable Lengths

<u>Rattler Length</u>	<u>Honda/ Robin 4 Stroke Hose</u>	<u>Robin 2 Stroke Hose</u>	<u>Cable Length</u>
4'	28.25"	27.25"	40"
5'	40.25"	39.25"	52"
6'	52.25"	51.25"	64"
7'	64.25"	63.25"	76"
8'	76.25"	75.25"	88"
9'	88.25"	87.25"	100"
10'	100.25"	99.25"	112"
11'	112.25"	111.25"	124"
12'	124.25"	123.25"	136"
13'	136.25"	135.25"	148"
14'	148.25"	147.25"	160"
15'	160.25"	159.25"	172"
16'	172.25"	171.25"	184"

**When measuring your Rattler hose when assembled, the length of the hose will be about 3 inches shorter than the hose lengths above. This is because about 1 ½" of the hose goes up into the engine end and about 1 ½" goes into the vibrator head. The hose length you measure will help you determine the Rattler Length that you have. You can then just call us and tell us that you need a Honda or Robin Hose for a ?' Rattler. Example: You measure your hose and find that it is 25.25 inches when assembled. This means you have a 4' Honda Rattler. When you call and tell us you need a 4' Honda hose, we will cut the hose to a length of 28.25 inches.**

**For pricing and a dealer near you, call Lindley, Inc. @ 800-788-5997**