

## Versa-Pak Motor Drive Monitor Hook Up

These instructions are for the Eaton MMX Motor Drive that PSI Waste currently uses in our 1Ph panels.


**BE CAREFUL!!!** If you hook 120V up to the wrong terminal, you will **FRY** the motor drive. If you have any questions, please call us at 352-742-4774.

### ONEPLUS:

- (H) Black wire goes on Versa-Pak terminal block #2.
  - (G) Ground wire goes on Versa-Pak green (ground) terminal block.
  - (N) White wire goes on Versa-Pak terminal block #1.
- Waste Edge does NOT use a motor starter wire so you are done!

### Waste Management Monitor:

- (HOT) Black wire goes on Versa-Pak terminal block #2.
  - (NEUT) White wire goes on Versa-Pak terminal block #1.
  - (GRD) Green wire goes on Versa-Pak green (Ground) terminal.
  - (MOTOR) Violet wire goes to motor drive terminal block #23.
- Run an additional wire from Versa-Pak terminal block #4 to motor driver terminal block #22

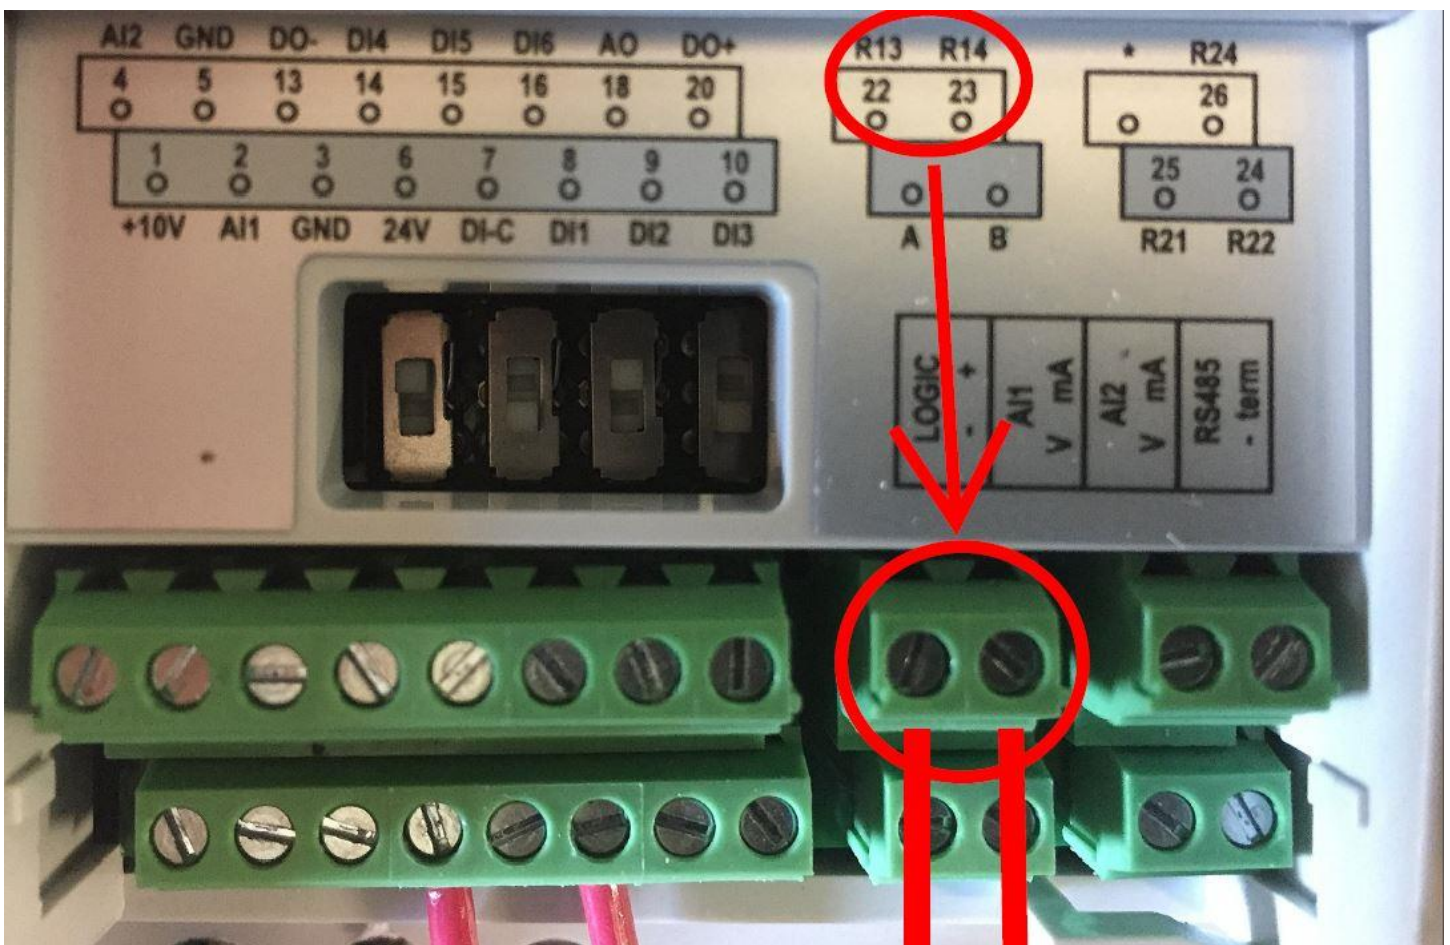

WM Monitor ONLY: Versa-Pak Terminal Block #4 ↑      ↑ Monitor signal wire