


UNIVERSAL AWNING OPERATION

TO OPEN THE AWNING


Step 1 UNLOCK Z-LOCK

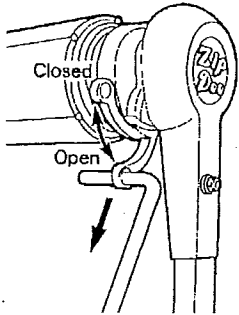

Insert the pull rod into the Z-Lock lever and pull down.


WARNING: LEAVE Z-LOCK OPEN WHEN AWNING IS OPEN TO AVOID DAMAGE

Step 2 UNLOCK TRAVEL LATCH

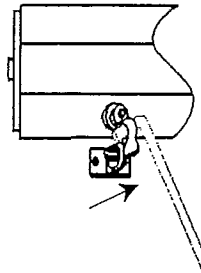


Insert the pull rod into the travel latch loop and rotate open

Step 3 UNROLL FABRIC

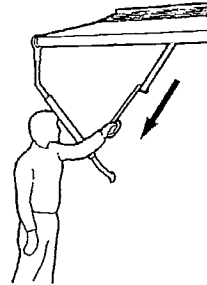


Insert the pull rod into the loop of the center strap and unroll the awning by pulling it toward you. Step under the awning and fold or roll the center strap and tuck into fabric loop.

Step 4 RELEASE AND EXTEND RAFTER

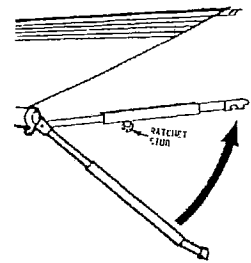


Standing under the awning, release the Rafter arm by pulling outward on the cap of the ratchet stud. Raise the arm upward toward the case.

Step 5 SET CLAW IN PLACE

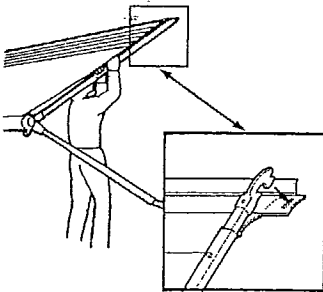


Extend the arm and set the claw shaped end into the slot of the rafter lock.

Step 6 LOCK RAFTER EXTENDED

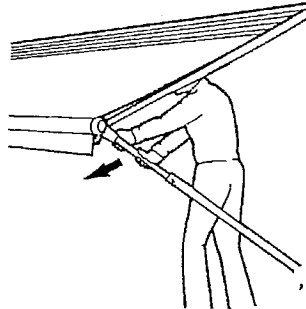

Lock the rafter arm in position by pressing down on the steel main arm bar until the ratchet stud clicks. At this point the fabric will be taut.

Step 7 RAISE ROLLER

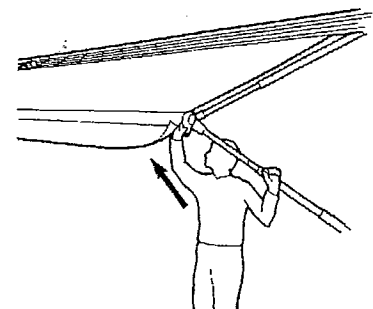

Raise the awning to the desired height by releasing the snap stud on the main arm and pushing up and outward on the roller assembly.

REPEAT STEPS 3 - 6 FOR THE OTHER END OF THE AWNING.

SEE REVERSE SIDE FOR "CARAVAN" POSITION INSTRUCTIONS
AND FOR CLOSING AWNING INSTRUCTIONS


PARTIAL EXTENSION OR "CARAVAN" POSITION

Step 1

Follow Step 1 on front page.

Step 2


PARTIALLY UNROLL FABRIC

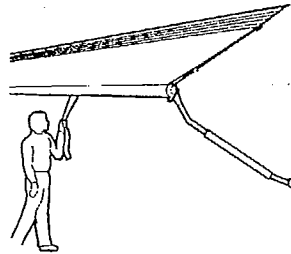

Insert the pull rod in the loop of the center control strap and unroll the awning to the desired extension.

Step 3


LIFT & PLACE RAFTER ARM

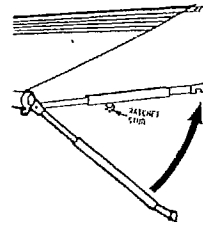

To prevent billowing, release and raise the rafter arm and hook the claw of the arm into the slot of the rafter lock. This will require that the awning be extended approximately four and one half feet.

Step 4

RAISE ROLLER

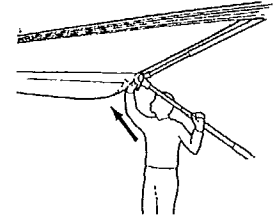


Raise the awning to the desired height by releasing the snap stud on the main arm and pushing up and outward on the roller assembly.

TO CLOSE THE AWNING

Step 1


LOWER ROLLER

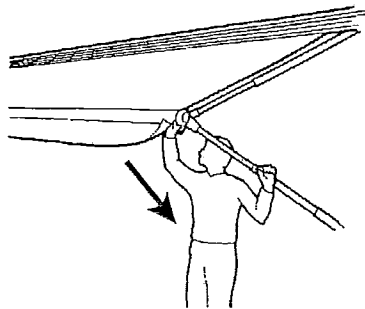

Release the snap stud of the main arm and lower the awning to its lowest position.

Step 2


RELEASE RAFTER

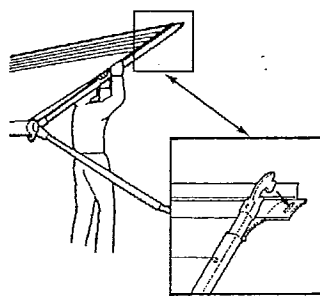

Release the ratchet stud on the rafter arm by pulling outward on the cap. Lift the claw out of the rafter hook. (Pull back, then up)

Step 3


STORE RAFTER & LOCK

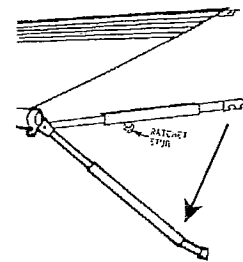

Place the claw casting on the protruding height adjustment stud. To lock the assembly in a travel position, push the other tube downward until the ratchet stud snaps closed.

Step 4


ROLLER CLOSED

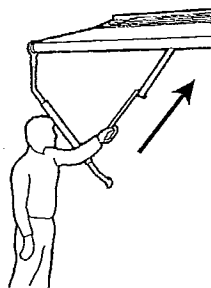

Face the awning and hold the end of the center strap firmly in one hand then push the roller up briskly with a rolling motion until you feel the spring take over. Control the speed by holding the center strap until all but 6 inches of the fabric has been rolled up. Release the strap and let the awning roll freely the rest of the way.

Step 5

ENGAGE ALL TRAVEL LOCKS

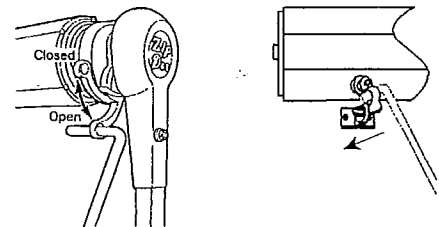

Lock the awning in place by flipping the Z-Lock lever into the "closed" position using the pull rod.

Insert pull rod into travel latch loop and twist shut.

Repeat Steps 1 through 3 for the other end of the awning