


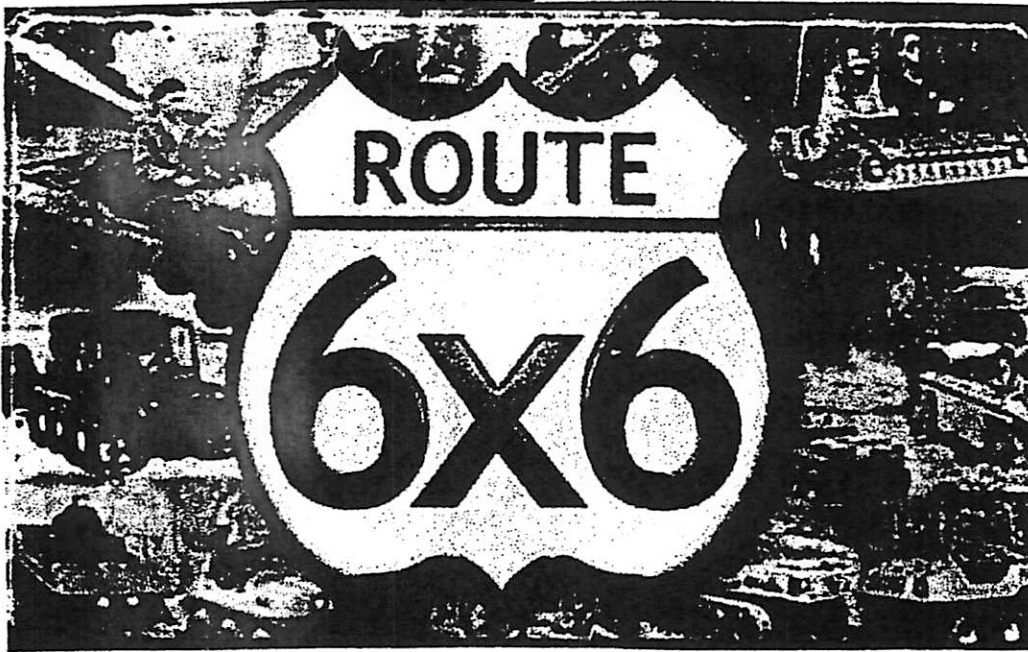

NEW HOURS

812-944-1643

8am-6pm Weekdays

**Visa Mastercard
Accepted**

Sir:

Thanks for your recent parts purchase. Keep in mind that I have the largest inventory of new, reproduction and used parts for All Terrain Vehicles around. Most of my parts are for machines

that are equipped with Borg Warner T-20 or Argo transmissions.

I have a large inventory of Borg Warner T-20 parts. Most Clutches in stock at all times. Wheel adapters, Wheels and Tires.

Have available the largest stock of new parts for the ATTEX machine


Check out my web site called ROUTE6x6 its address: www.route6x6.com

My phone number is 812-944-1643 afternoon calls are best.

My email address: richard@route6x6.com

Thanks Richard Clark 4846 Quarry Rd New Albany IN 47150 USA

Scrambler Inc.

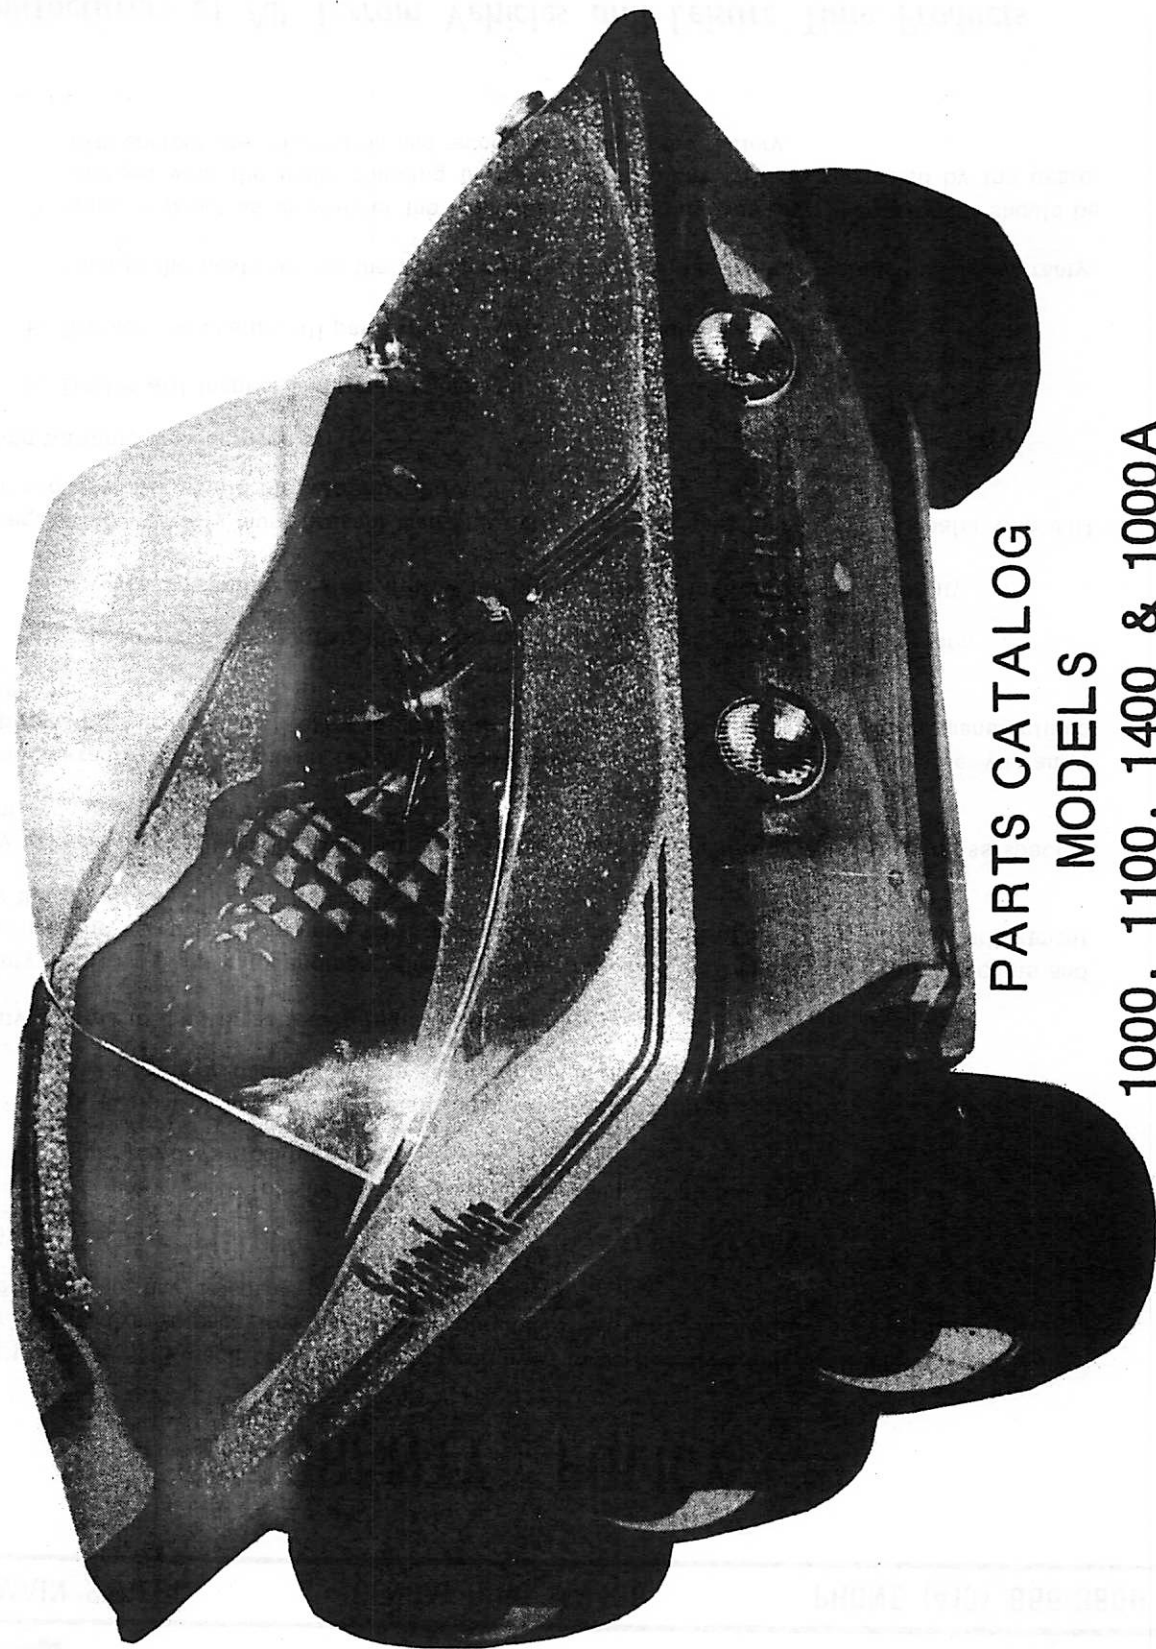

PARTS CATALOG

MODELS

1000, 1100, 1400 & 1000A

Scrambler Inc.

126 SOUTH MAIN STREET

GENOA, OHIO, 43430

PHONE (419) 855-3800

WARRANTY POLICY

SCRAMBLER INC., warrants each vehicle manufactured by it to be free from defects in material and workmanship for a period of 90-days from the date of purchase. We will, through our dealer, organizations, replace free of charge, any defective part F.O.B. the factory.

PROVIDING:

1. The factory copy of the warranty card has been completed and returned to the factory within ten days from purchase date.
2. The equipment has not previously been repaired or altered so as to effect its operation, or has not been damaged due to accident, misuse or neglect.

This warranty applies to the warranty card registration only.

This warranty shall not apply to engines, tires* nor the axles as to bending, and all sprockets and chains, the life and conditions of these parts being almost entirely dependent upon proper adjustment and use by the owner.

NOTE: Any vehicle that is used for competitive racing will not be covered by warranty, unless specifically authorized, in writing, by the factory.

There are no warranties which extend beyond the description on the face hereof*. No other warranty, whether expressed or implied, shall exist in connection with the sale or use of any vehicle manufactured by this company.

- * For engine service, contact the engine manufacturer's local service headquarters.
- * For warranty service on tires, follow the procedures outlined in the tire warranty.

Customer requesting warranty must present warranty card or bill of sale to authorized dealer who will determine if request falls within the warranty period.

1. Performing Warranty Service (Dealer)

- A. Dealer will inspect and repair equipment.
- B. Replace, no charge, all parts which are found to be defective.
- C. Charge the customer for the replacement of parts which are not included under warranty.
- D. When in doubt as to whether the repairs are covered by warranty, the customer should be charged with the understanding that a warranty claim will be submitted by the dealer with appropriate information and recommendation to the factory.


Manufacturers of All Terrain Vehicles and Leisure Time Products

TABLE OF CONTENTS

Axles, Chains and Mounting	2, 3
Body, Rear Seat, Etc.	4, 5
Clutch Shaft and Mounting	6, 7
Engine and Mounting	8, 9
Fuel Tank and Mounting	10, 11
Jackshaft and Mounting	12, 13
Accelerator and Mounting	14, 15
Ignition and Choke Control	16, 17
Lights and Mounting	18, 19
Muffler and Mounting	20, 21
Brakes and Mounting	22, 23
Steering and Mounting	24, 25, 26, 27
Tires and Mounting	28, 29
Floor and Front Seat	30, 31
Slave Cylinder Assemblies	32, 33
Master Cylinder Assemblies	34, 35
Miscellaneous and Optional Equipment	36

AXLES, CHAINS & MOUNTING
Model 1100 & 1400


REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D.
1	102115	Axle - Front & Rear	4
2	102201	Axle - Center	2
3	910023	Bearing Retainer	6
4	910011	Bearing	6
5	900254	Snap Ring	6
6	910010	Bearing Seal	6
7	102106	Plate - Rear	1
8	102118	Support - Engine Frame	1
9	102105	Plate - Front & Center	2
10	102104	Support - Center	3
11	900022	5/16-18 x 1" Hex Head Cap Screw	42
12	900527	5/16" Brass Washer - Large	18
13	900406	5/16-18 Nylok Nut	54
14	900023	5/16-18 x 3/4" Hex Head Cap Screw	12
15	900525	5/16" Plain Washer	12
16	102410	Spacer	6
17	910001	Flange - Inner	6
18	910002	Gasket	6
19	910029	Bearing	6
20	910000	Flange - Outer	6
21	910012	Seal	6
22	900038	Grease Fitting	6
23	900526	5/16" Brass Washer - Small	24
24	102505	Wheel Hub	6
25	900025	5/16" x 2-1/2" Roll Pin	12
26	105501	Chain Assembly - Center to Front	2
27	105502	Chain Assembly - Jackshaft to Center	2
28	105503	Chain Assembly - Jackshaft to Rear	2
29	105504	Chain Assembly - Clutch to Jackshaft	2
30	101152	Adjusting Bracket Assembly	2
31	105507	Connecting Link	As Required

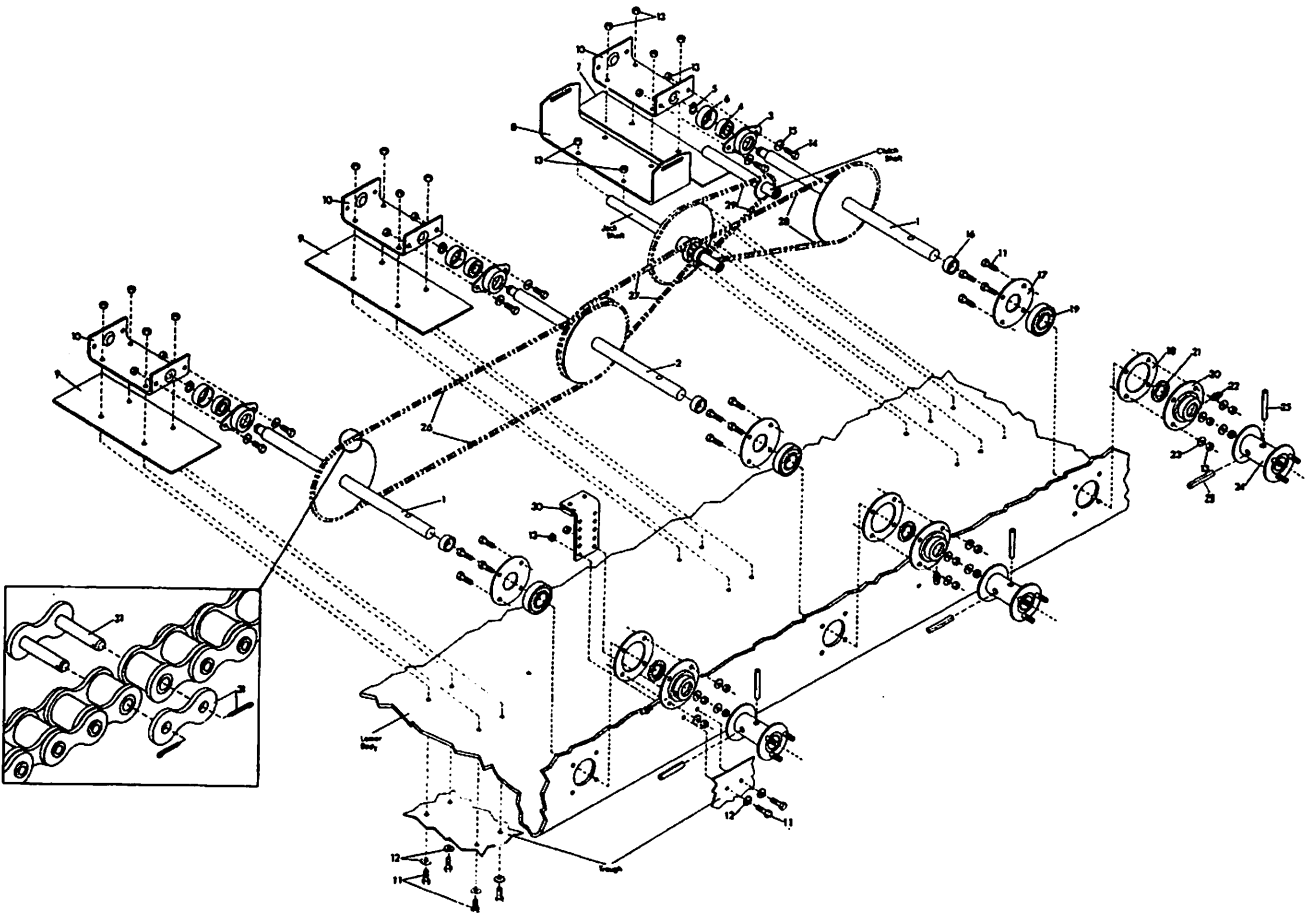

BODY, REAR SEAT, ETC.

Model 1100 & 1400


REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D:
1	111001	Lower Body - Drilled (Specify Color) - Model 1100 Only	1
1	141001	Lower Body - Drilled (Specify Color) - Model 1400 Only	1
2	101004	Trough	1
3	101005	Moulding - Trough	1
4	900067	Rivet	121
5	101113	Drain Insert	2
6	900001	11/16" I.D. x 1-1/4" O.D. x 16 Ga. Flat Washer	4
7	900094	3/8" N.P.T. Lock Nut	2
8	900083	Drain Plug	2
9	900516	#8 Finish Washer	8
10	101253	Decal - Action-Age	1
11	103008	Adaptor - Heat Hose	1
12	101256	Decal - Caution Chain	1
13	111002	Upper Body - Drilled (Specify Color) - Model 1100 Only	1
13	141002	Upper Body - Drilled (Specify Color) - Model 1400 Only	1
14	101120	Channel	1
15	900016	#8-32 Esna Nut	8
16	900062	#8-32 x 3/4" Oval Head Machine Screw	8
17	900138	Staple	24
18	101110	Grill	1
19	900085	Release Stud	4
20	900086	Special Lock Washer	4
21	900087	Release Receptacle	4
22	900088	Receptacle Nut	4
23	101108	Moulding - Dash	1
24	900068	Rivet	2
25	107537	Filler Neck Gromet	1
26	101264	Decal - Dash	1
27	101121	Moulding - Rear Seat	3
28	101119	Strap	1
29	900406	5/16-18 Nylok Nut	2
30	101257	Decal - Caution Water	1
31	101258	Decal - Scrambler	2
32	900022	5/16-18 x 1" Hex Head Cap Screw	2
33	101125	Moulding - Body	1
34	101105	Seat - Rear	1
35	101109	Moulding - Rear Seat	1
36	101112	Moulding - Rear Seat	2
37	101116	Lower Clip	2
38	101123	Upper Clip - L.H.	1
39	101124	Upper Clip - R.H.	1
NOTE: See Page 30 for Floor & Front Seat.			

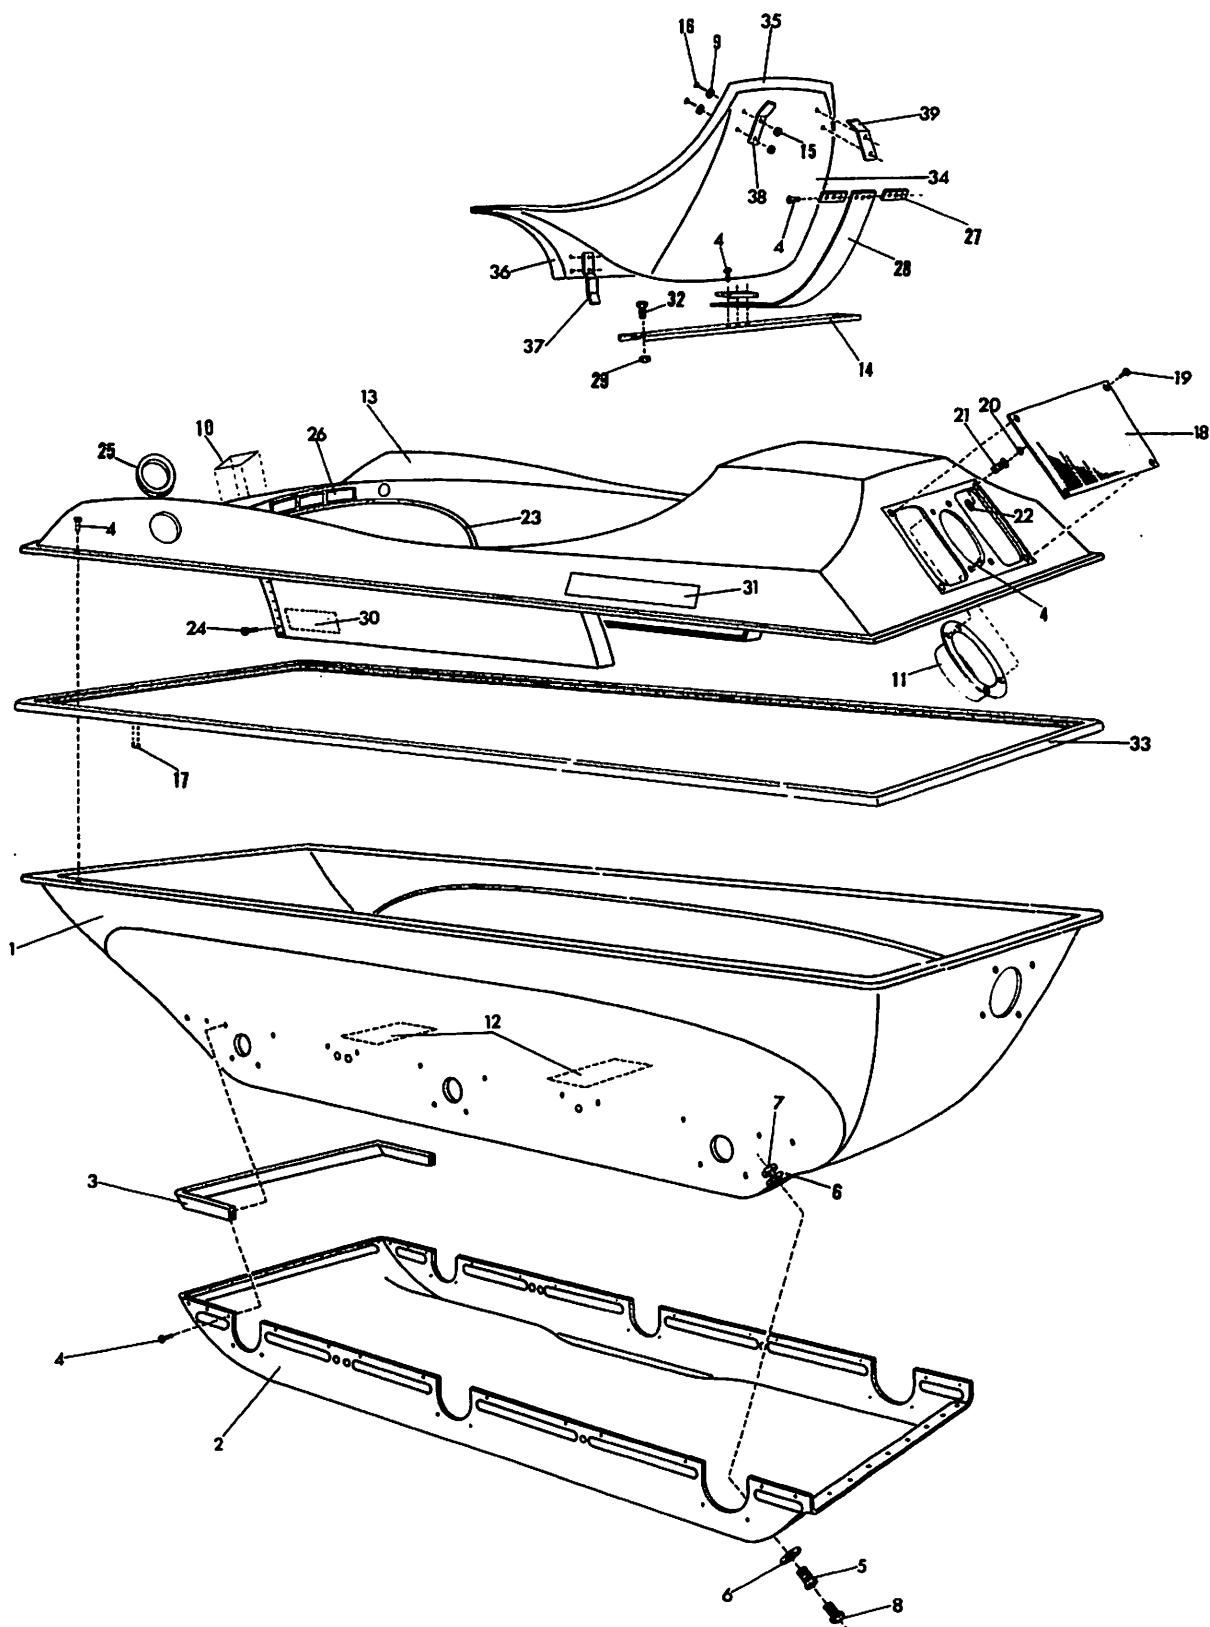

CLUTCH SHAFT & MOUNTING


Model 1100 & 1400

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D.
1	104001	Clutch Shaft	1
2	900021	Woodruff Key	1
3	103503	Driven Pulley	1
4	900040	Locking Collar W/Set Screw	2
5	900020	Locking Collar W/Set Screw	2
6	104015	Support Weldment R.H.	1
7	104016	Support Weldment L.H.	1
8	900041	1-5/16" I.D. x 2-1/8" O.D. x 16 Ga. Flat Washer	2
9	910026	Bearing	2
10	910031	Spacer	2
11	910030	Bearing Retainer	2
12	900660	7/16-14 x 1" Hex Head Cap Screw	4
13	900403	7/16-14 Esna Nut	4
14	104050	Drive Disk Assembly	2
15	900106	3/16" x 1-1/4" Roll Pin	2
16	104070	Brake Spring — Model 1100 Only	2
17	104003	Driven Disk Weldment	2
18	910017	Bearing	2
19	910018	Bearing	2
20	104042	Brake Arm Assembly	2
21	900253	Snap Ring	4
22	910013	Bearing Retainer	4
23	104010	Clutch Lever	2
24	104044	Bushing	4
25	910021	Bearing	2
26	900631	5/16-18 x 1-1/4" Hex Head Cap Screw	4
27	900401	5/16-18 Esna Nut	8
28	900042	1-1/32" I.D. x 1-1/2" O.D. x 16 Ga. Flat Washer	4
29	900302	Adjusting Ring	As Required
30	900252	Snap Ring	2
31	900043	17/32 I.D. x 1" O.D. x 16 Ga. Flat Washer	4
32	900301	Adjusting Ring	As Required
33	900105	1/8" x 3/4" Roll Pin	2
34	104005	Clutch Rod	2
35	900104	1/8" x 2" Roll Pin	4
36	104098	Clutch Spring	2
37	900044	13/32" I.D. x 11/16" O.D. x 12 Ga. Flat Washer	2
38	900402	3/8-16 Esna Nut	2
39	103504	Drive Belt	1
40	104002	Cross Bar — Model 1100 Only	1
41	900023	5/16-18 x 3/4" Hex Head Cap Screw	6
42	104043	Lining - Brake Arm Assembly	8
43	104040	Lining - Drive Disk Assembly	24

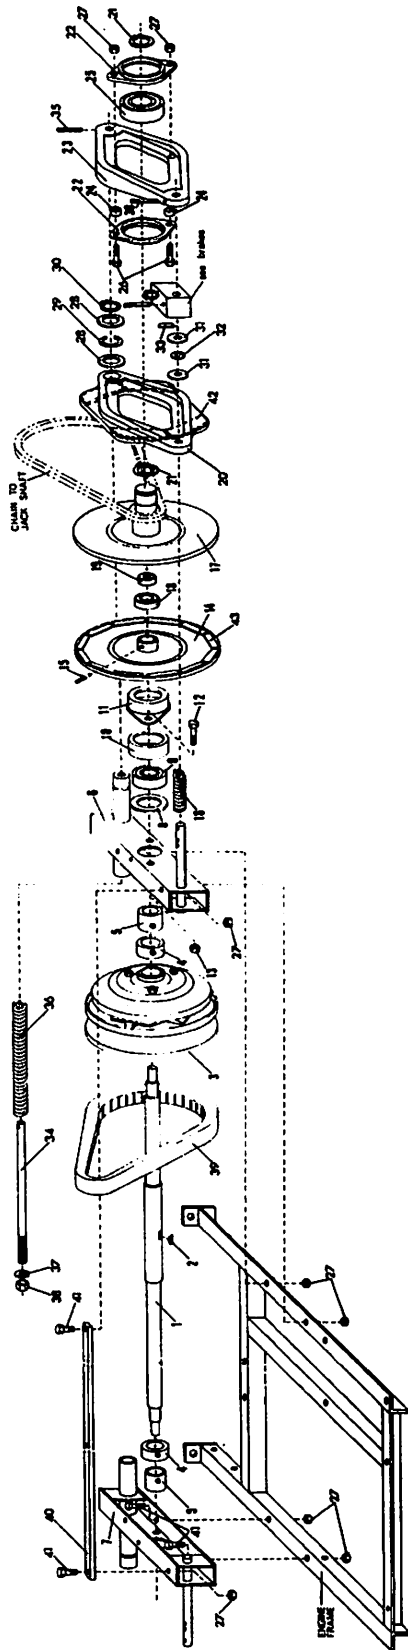


ENGINE & MOUNTING
Model 1100 & 1400

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D.
1	113500	Engine - 8 H.P. Electric Start	1
2	103502	Drive Pulley	1
3	900039	Key - 1/8" x 1/4" x 2-1/2"	1
4	900002	7/16" External Tooth Lock Washer	1
5	103505	Retainer	1
6	900661	7/16-14 x 2-1/2" Hex Head Cap Screw	1
7	103006	Mounting Frame	1
8	900056	5/16-18 x 1-3/4" Hex Head Cap Screw	4
9	900401	5/16-18 Esna Nut	5
10	103010	Spacer Bar	1
11	103007	Hood - Heat Exhaust	1
12	900022	5/16-18 x 1" Hex Head Cap Screw	2
13	900525	5/16" Plain Washer	2
14	900099	1/4-20 x 1-1/4" Hex Head Cap Screw	2
15	900523	1/4" Plain Washer	2
16	103009	Hose - Heat Exhaust	1
17	900632	5/16-24 x 13/16" Oval Head Machine Screw	2
18	900525	5/16" Plain Washer	2
19	900404	5/16-24 Esna Nut	2
20	103014	Brace Angle	1
21	900028	5/16-18 x 4-1/2" Hex Head Cap Screw	1
22	900022	5/16-18 x 1" Hex Head Cap Screw	1
23	900569	7/16" Flat Washer	1
24	103015	Brace Stand	1
25	103016	Spacer	1
26	900112	5/16" Split Lock Washer	1

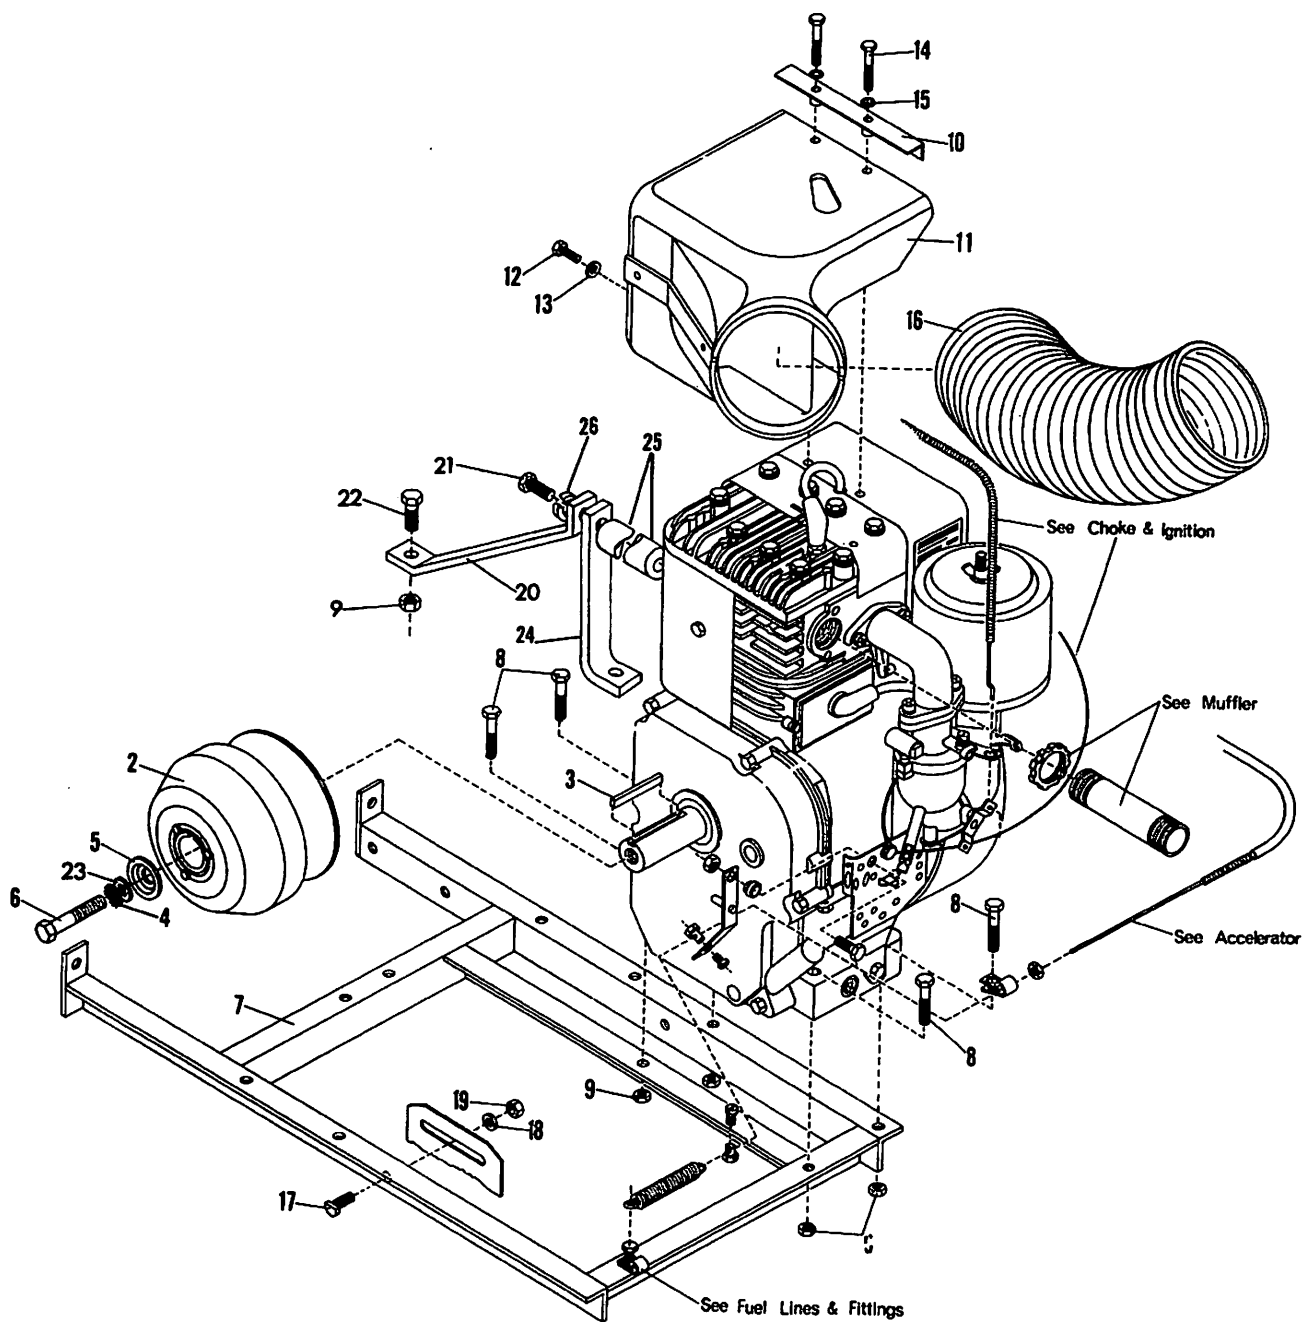

FUEL TANK & MOUNTING
Model 1100 & 1400


REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D.
1	107532	Fuel Tank	1
2	107551	Filler Cap	1
3	900065	3/4" I.D. x 2-1/4" O.D. x 1/8" Thick	1
4	107539	Fuel Shut Off Valve	1
5	900216	Fitting	1
6	900124	Vent Fitting	1
7	107580	Vent Tubing 1/4" O.D. by 15" Length	1
8	900051	Clamp	1
9	900067	Rivet	11
10	107570	Channel	1
11	900007	5/16-18 x 3/4" Round Head Machine Screw	2
12	900525	5/16" Plain Washer	2
13	900406	5/16-18 Nylok Nut	8
14	107571	Upper Strap	2
15	107572	Lower Strap	2
16	900023	5/16-18 x 3/4" Hex Head Cap Screw	6
17	900239	1/4-20 x 2-1/2" Carriage Bolt	2
18	900006	1/4-20 Esna Nut	2
19	107573	Fuel Shut Off Valve	1
20	107583	Fuel Tubing 1/2" O.D. by 12" Length	1
21	900211	Clamp	4
22	107574	Fuel Tubing 1/2" O.D. by 85" Length	1
23	900212	Clip	5
24	107575	Fuel Pump	1
25	900218	Fitting	1
26	107578	Fuel Tubing 5/16" O.D. by 34" Length	1
27	900119	Tee Fitting	1
28	107579	Fuel Tubing 5/16" O.D. by 132" Length	1
29	900115	Tube Clamp	5
30	107585	Vacuum Tubing 1/2" O.D. by 23" Length	1
31	900128	3/8" N.P.T. Fitting	1
32	106224	Cross Channel — Model 1400 Only	1
33	106231	Cross Angle — Model 1400 Only	1
34	104044	Bushing — Model 1400 Only	2
35	900406	5/16-18 Nylok Nut — Model 1400 Only	6
36	900023	5/16-18 x 3/4" Hex Head Cap Screw — Model 1400 Only	4
37	900527	5/16" Brass Washer - Large — Model 1400 Only	2
38	900631	5/16-18 x 1-1/4" Hex Head Cap Screw — Model 1400 Only	2
39	106283	Side Brace — Model 1400 Only	2

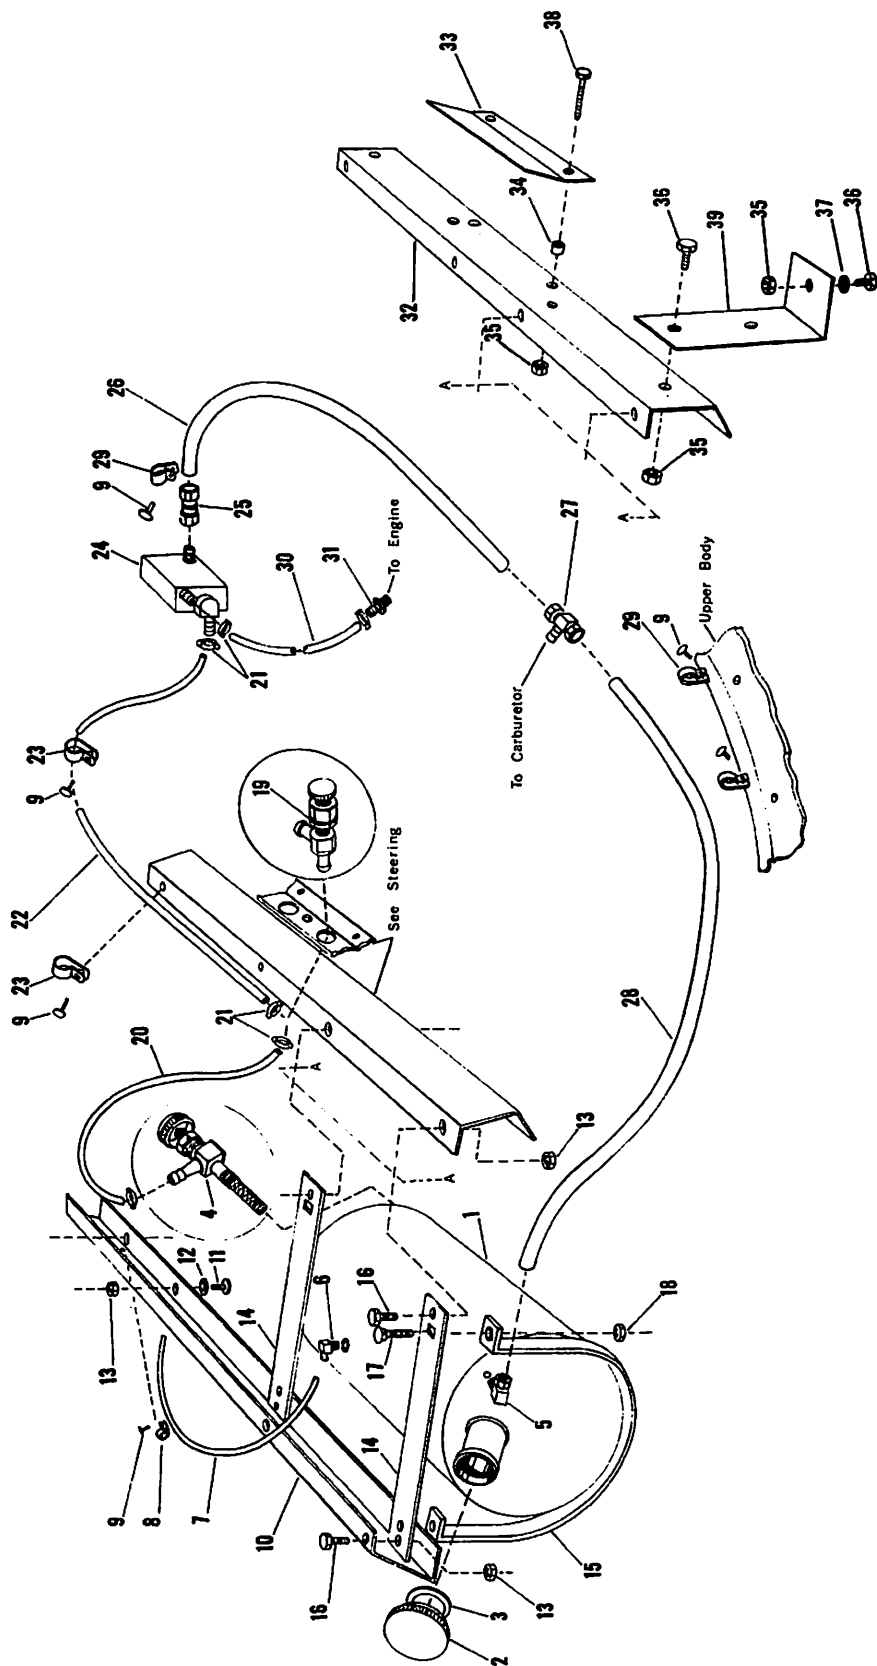

JACKSHAFT & MOUNTING


Model 1100 & 1400

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D.
1	104511	Jackshaft	1
2	104604	Sprocket	2
3	910011	Bearing	2
4	910027	Bearing	4
5	900096	Bearing Spacer	2
6	900097	13/32" I.D. x 31/32" O.D. x 16 Ga. Flat Washer	2
7	104612	Strap	2
8	104610	Bushing	2
9	900524	Snap Ring	2
10	900632	5/16-24 x 13/16" Oval Head Machine Screw	4
11	900525	5/16" Plain Washer	4
12	900404	5/16-24 Esna Nut	10
13	900629	5/16-24 x 4" Hex Head Cap Screw W/2" Thread	2
14	104607	Body Bracket	2
15	900650	5/16-18 x 1-1/4" Hex Head Cap Screw	2
16	900525	5/16" Plain Washer	2
17	900401	5/16-18 Esna Nut	2
18	104608	Angle Bracket	2
19	900098	Spacer	2
20	900036	5/16-18 x 2-1/2" Hex Head Cap Screw W/2-1/4" Thread	4
21	900022	5/16-18 x 1" Hex Head Cap Screw	2
22	900023	5/16-18 x 3/4" Hex Head Cap Screw	4
23	900527	5/16" Brass Washer - Large	2
24	900406	5/16-18 Nylok Nut	6
25	900526	5/16" Brass Washer - Small	4

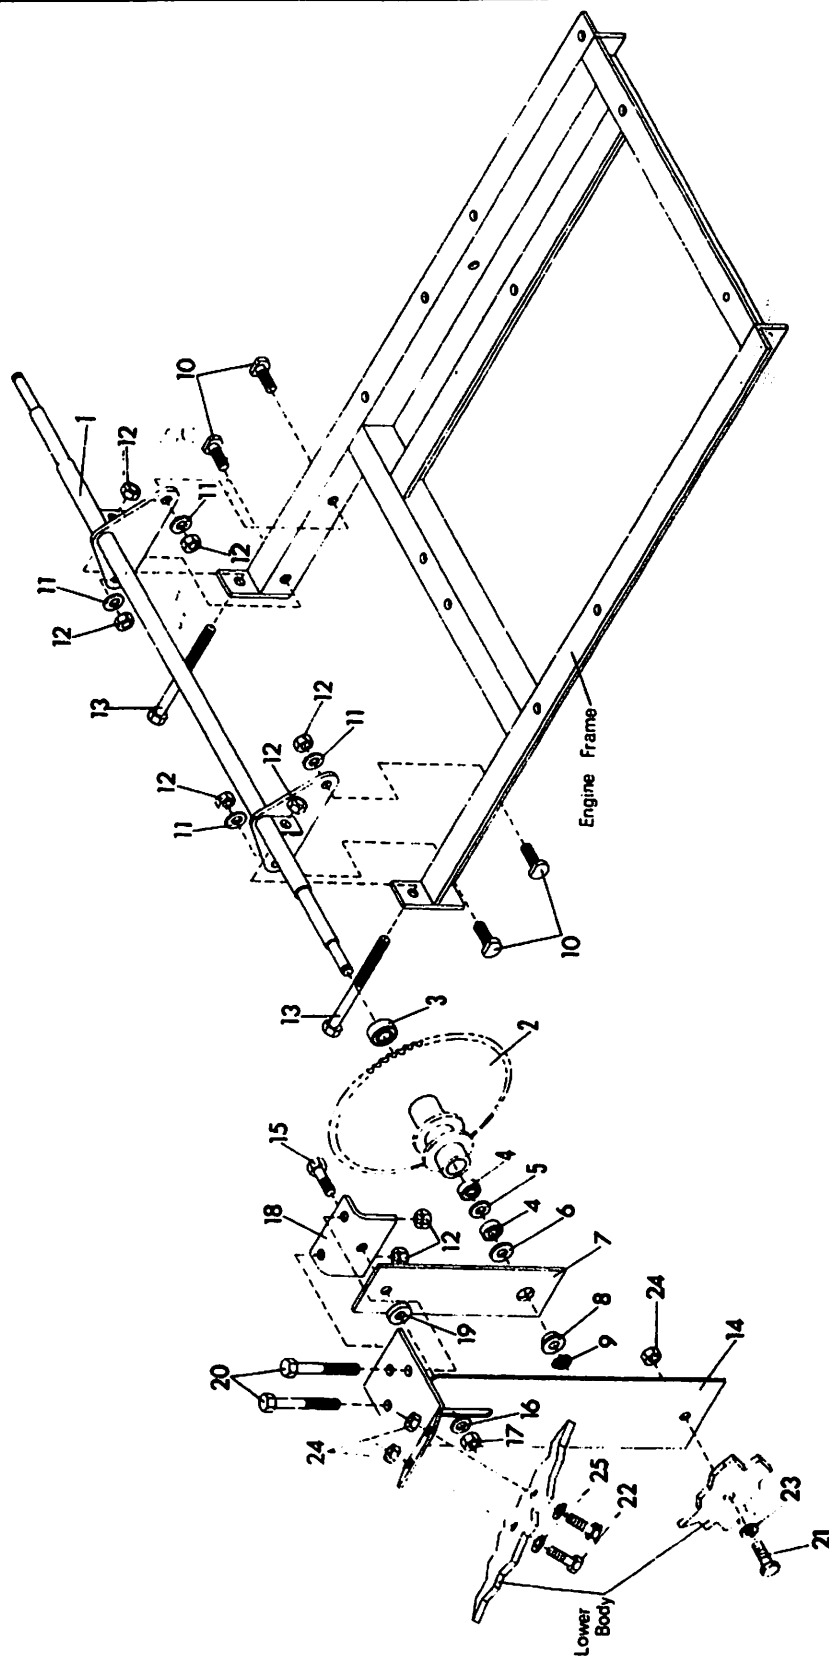

ACCELERATOR & MOUNTING**Model 1100 & 1400**


REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D.
1	106501	Accelerator Pedal	1
2	106502	Mounting Bracket	1
3	106503	Return Spring	1
4	900005	1/4-20 x 2-3/4" Hex Head Cap Screw	1
5	900006	1/4-20 Esna Nut	2
6	900007	5/16-18 x 3/4" Round Head Machine Screw	2
7	900529	5/16" Plain Washer	2
8	900406	5/16-18 Nylok Nut	2
9	900004	Cable Swivel Body	4
10	900003	#8/32 x 1/4" Fillister Head Machine Screw	6
11	106504	Cable Housing	1
12	106505	Cable	1
13	900010	Clamp Plate	1
14	900009	Cable Clamp	1
15	900011	#10/24 x 3/4" Round Head Machine Screw	2
16	900012	#10 Brass Washer	2
17	900013	#10/24 Esna Nut	3
18	900051	Clamp	3
19	900067	Rivet	3
20	900078	Cable Clip	1
21	900079	3/16" Conduit Nut	1
22	900018	1/4-20 x 1" Hex Head Cap Screw	1
23	106508	Step Bushing	1
24	106507	Lever	1
25	106510	Spring	1
26	900084	#10/24 x 1" Hex Head Cap Screw	1
27	900408	#10/24 Hex Nut	1

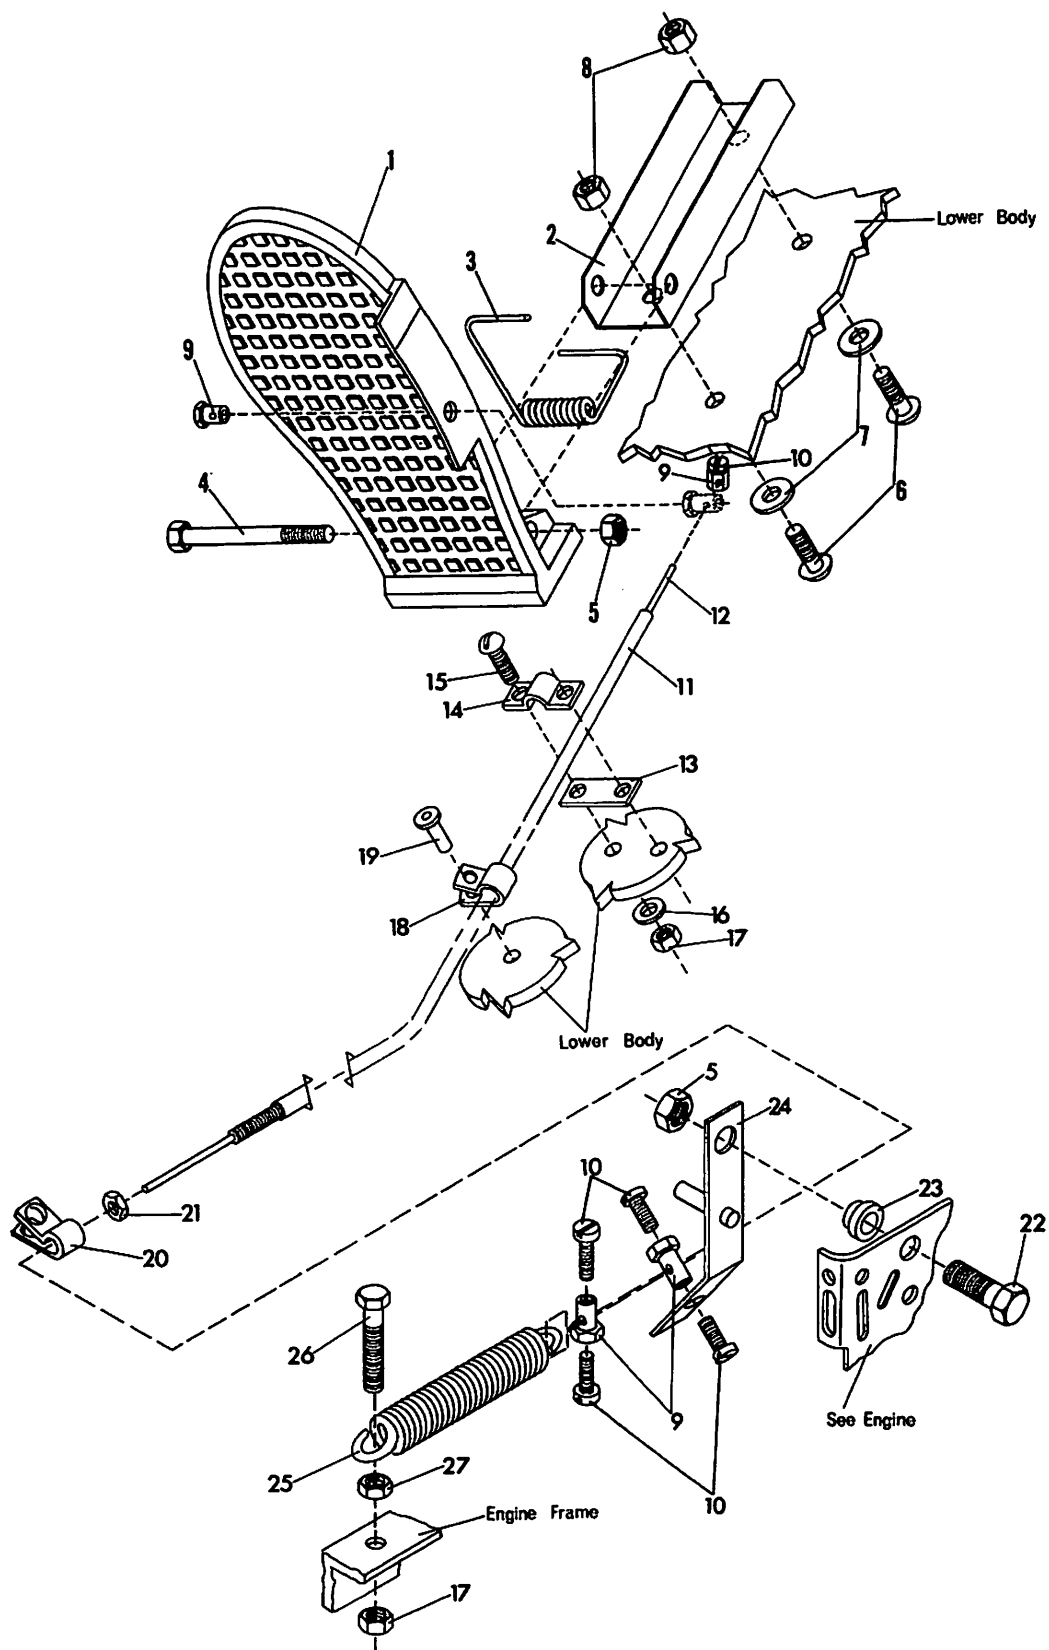

IGNITION & CHOKE

Model 1100 & 1400

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D.
1	126520	Choke Control Assembly	1
2	900072	#4-40 x 1/2" Round Head Machine Screw	2
3	900073	#4-40 Esna Nut	2
4	900051	Clamp	2
5	900067	Rivet	2
6	106522	Wiring Harness	1
7	126565	Fuse	1
8	106556	Starter Cable	1
9	106555	Battery Cable - Negative	1
10	106558	Battery Cable - Positive	1
11	900014	Wire Clamp	1
12	900076	1/4-20 Wing Nut	2
13	107512	Strap	1
14	900006	1/4-20 Esna Nut	4
15	107413	Ignition Switch	1
16	900180	#10-24 x 1/4" Round Head Machine Screw	1
17	900187	3/16" Internal Tooth Lock Washer	1
18	900563	1/2" Wrought Washer	1
19	900164	9/16-24 Hex Lokc Nut	1
20	107461	Ignition Key (Set of 2)	2
21	900095	Wire Tie	6
22	900115	Tube Clamp	1
23	107417	Solenoid	1
24	900091	1/4-20 x 1/2" Hex Head Cap Screw W/Nylok	2
25	107528	Battery Pad	1
26	900177	#10-32 Hex Nut	1
27	900525	5/16" Plain Washer	4
28	900404	5/16-24 Esna Nut	2
29	107515	Battery	1
30	900406	5/16-18 Nylok Nut	3
31	107505	Battery Holder	1
32	900222	1/4-20 x 4" Carriage Bolt	2
33	107525	Battery Bracket	1
34	900024	5/16-18 x 1" Round Head Machine Screw	2
35	900023	5/16-18 x 3/4" Hex Head Cap Screw	1
36	900523	1/4" Plain Washer	1
37	900006	1/4-20 Esna Nut	1

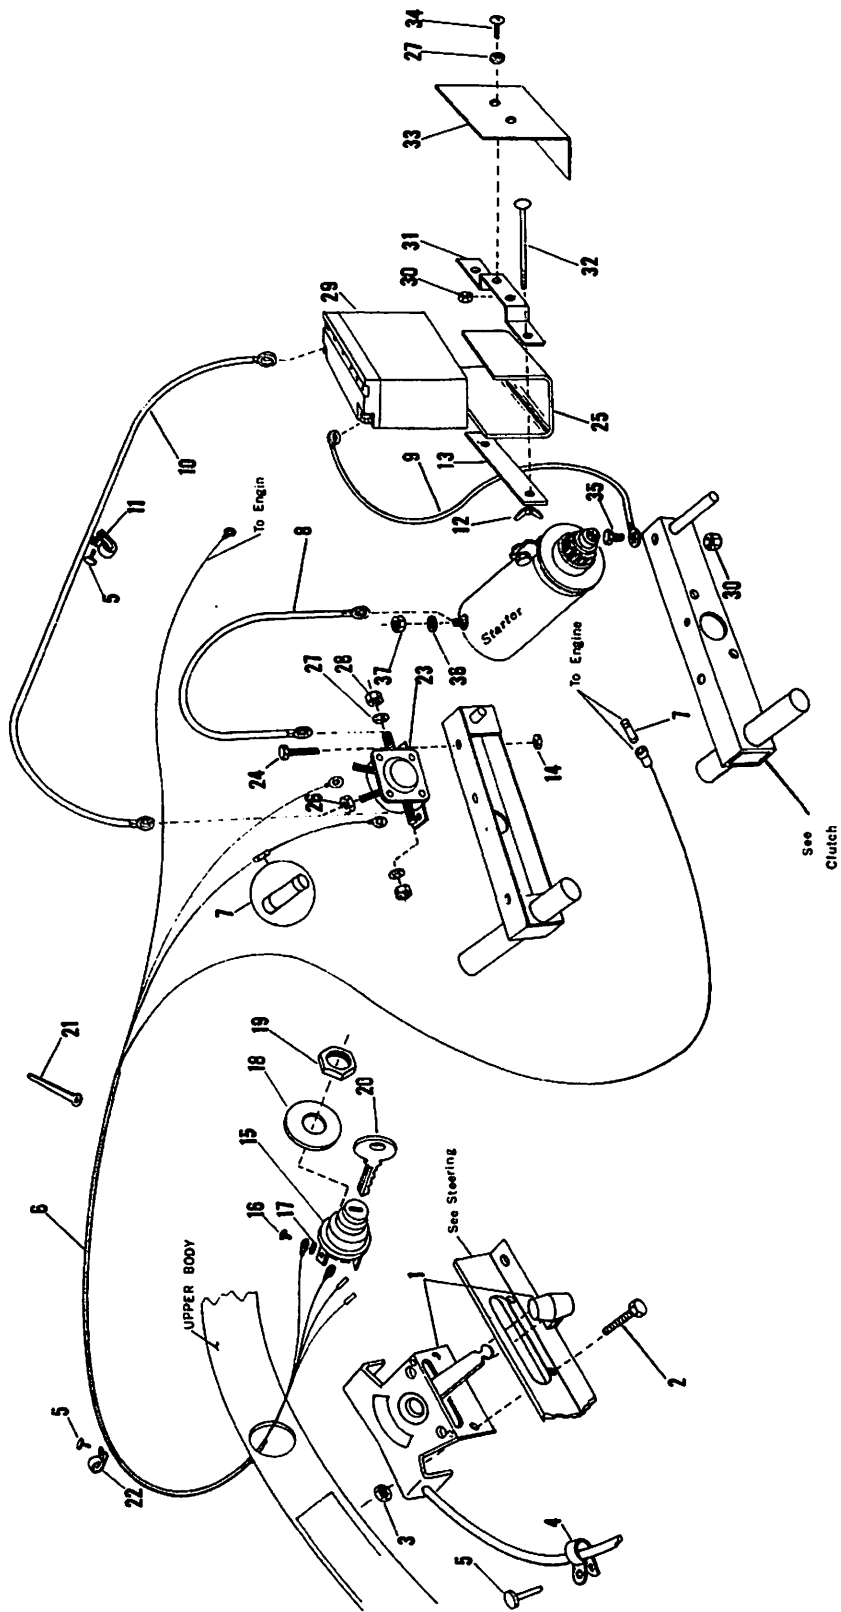


LIGHTS & MOUNTING**Model 1100 & 1400**

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D.
1	107457	Headlight Assembly (Includes Items 5, 6 & 7)	2
2	900100	#8 x 1-1/4" Phillips Oval Head Machine Screw	4
3	900060	Speed Nut	4
4	108348	Front Support	1
5	107503	Retainer	2
6	107502	Headlight Rim	2
7	107523	Sealed Beam Unit	2
8	900406	5/16-18 Nylok Nut	1
9	107513	Wiring Harness	1
10	107516	Wiring Harness	1
11	900014	Wire Clamp	1
12	900067	Rivet	1
13	900114	U Bolt	1
14	900407	5/16-18 Hex Nut	1
15	900113	Cap Plate	2


LIGHTS & MOUNTING**Model 1100 & 1400**

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D.
1	107457	Headlight Assembly (Includes Items 5, 6 & 7)	2
2	900100	#8 x 1-1/4" Phillips Oval Head Machine Screw	4
3	900060	Speed Nut	4
4	108348	Front Support	1
5	107503	Retainer	2
6	107502	Headlight Rim	2
7	107523	Sealed Beam Unit	2
8	900406	5/16-18 Nylok Nut	1
9	107513	Wiring Harness	1
10	107516	Wiring Harness	1
11	900014	Wire Clamp	1
12	900067	Rivet	1
13	900114	U Bolt	1
14	900407	5/16-18 Hex Nut	1
15	900113	Cap Plate	2

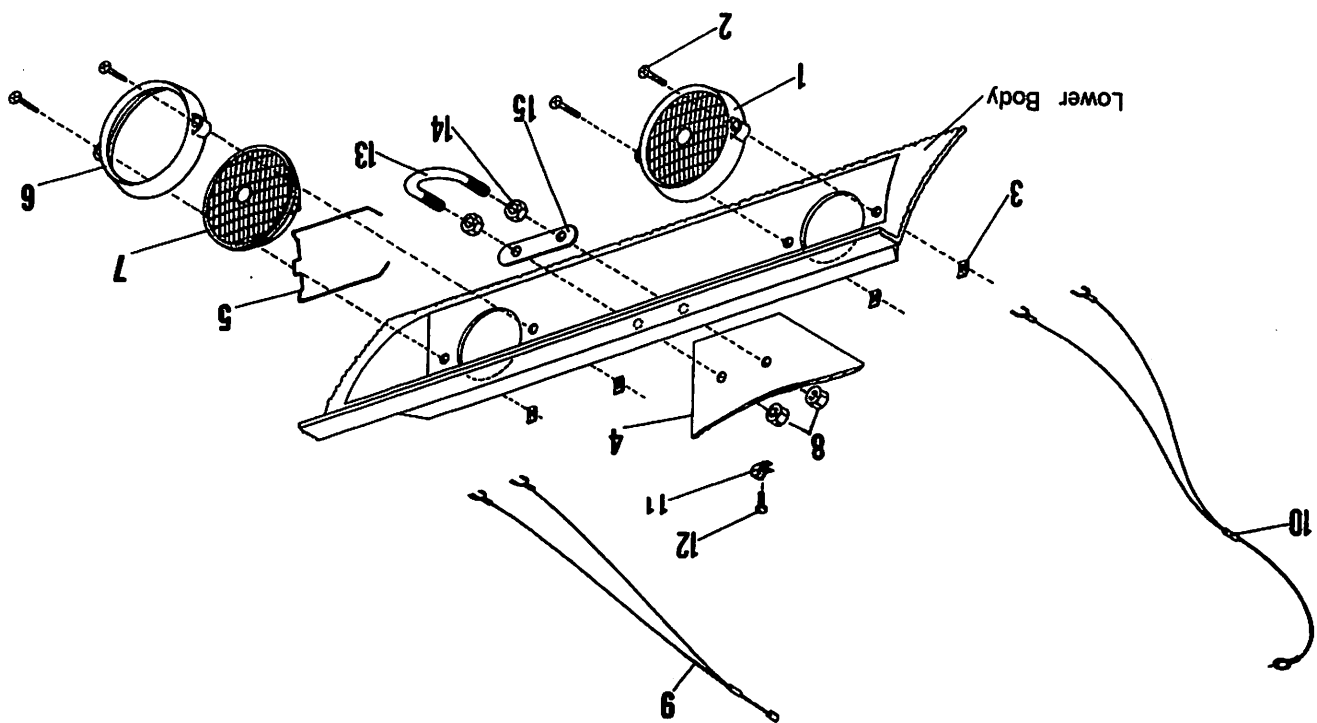

MUFFLER & MOUNTING**Model 1100 & 1400**


REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D.
1	107003	Nipple	1
2	900102	3/4-14 N.P.T. Nut	1
3	107002	Flex Tube	1
4	107004	Bar	1
5	107005	Insulator	1
6	900110	Exhaust Pipe Clamp Assy.	2
7	900109	5/16-18 Self Locking Nut	4
8	107001	Muffler	1
9	107008	Tube	1
10	900090	1/4-20 x 3-1/4" Hex Head Cap Screw	1
11	900409	1/4-20 Self Locking Nut	1
12	107009	Flange	1
13	107010	Gasket	1
14	900007	5/16-18 x 3/4" Round Head Machine Screw	4
15	900525	5/16" Plain Washer	4
16	900406	5/16-18 Nylok Nut	4
17	900112	5/16" Split Lock Washer	4

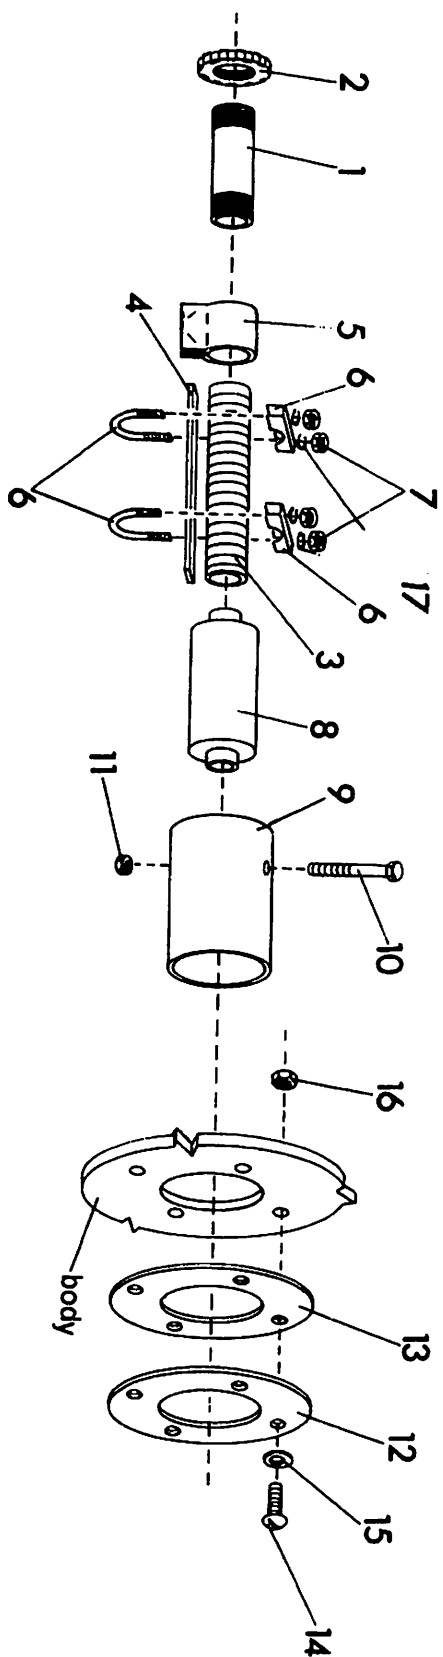

BRAKES & MOUNTING


Model 1100 Only

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D.
1	108300	Brake Master Cylinder Assembly (See Page 34)	1
2	900123	Vent Tee	1
3	108305	Pressure Tubing 3/16" O.D. by 77" Length	1
4	108320	Channel	1
5	108321	Strap	2
6	900056	5/16-18 x 1-3/4" Hex Head Cap Screw	2
7	900401	5/16-18 Esna Nut	4
8	108322	Angle	1
9	900023	5/16-18 x 3/4" Hex Head Cap Screw	1
10	108360	Spring Retainer Bracket	1
11	106510	Spring	1
12	108310	Actuating Rod	1
13	108307	Brake Pedal	1
14	900103	1/4-20 x 2" Hex Head Cap Screw	1
15	900006	1/4-20 Esna Nut	1
16	900104	1/8 x 2" Roll Pin	2
17	900022	5/16-18 x 1" Hex Head Cap Screw	3
18	900051	Clamp	2
19	900067	Rivet	1
20	108340	Brake Slave Cylinder Assembly - R.H. (See Page 32)	1
21	108341	Brake Slave Cylinder Assembly - L.H. (See Page 32)	1
22	900011	#10-24 x 3/4" Round Head Machine Screw	1
23	900013	#10-24 Esna Nut	1
24	108334	Pressure Tubing 3/16" O.D. by 27" Length	1

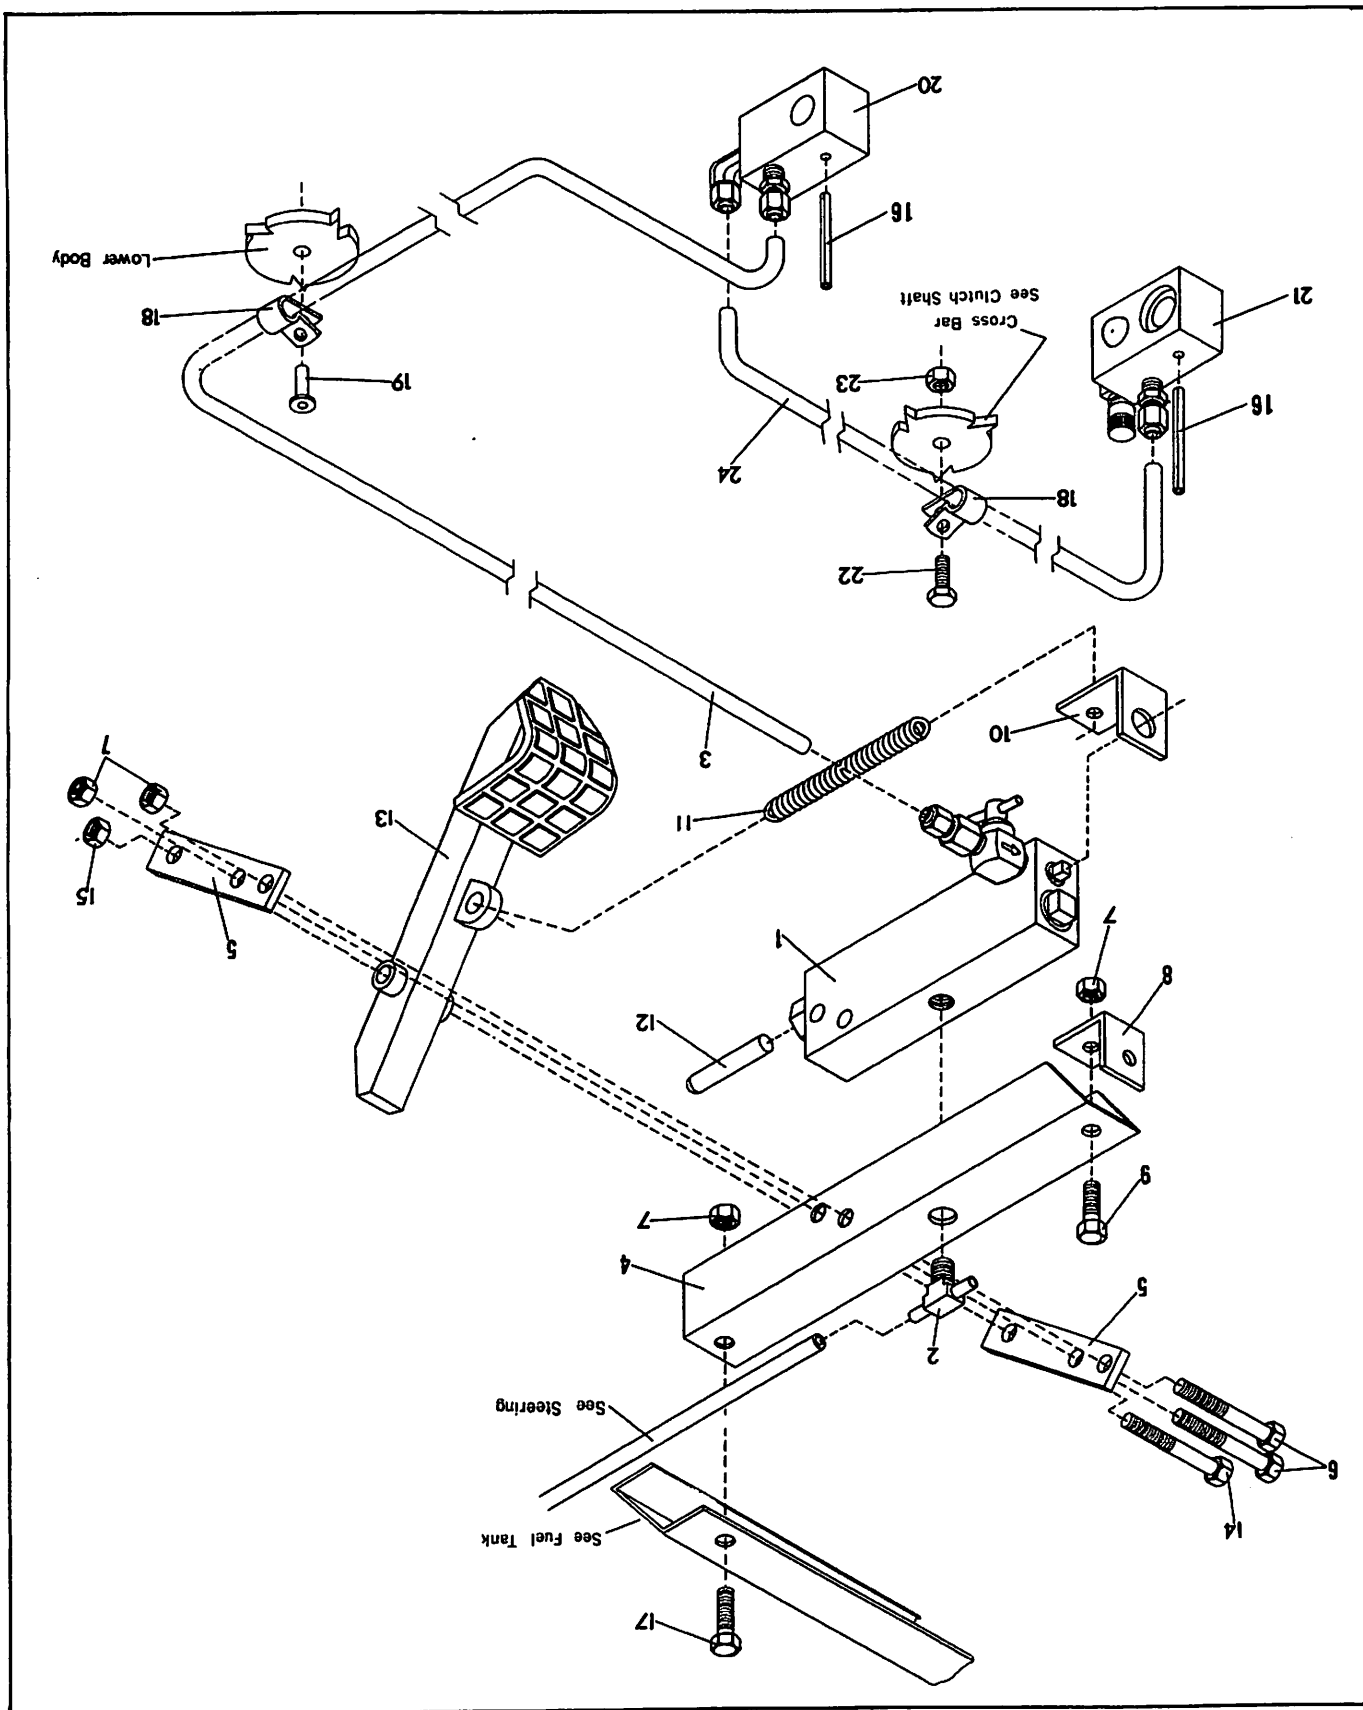

STEERING & MOUNTING
Model 1100 Only


REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D.
1	106233	Steering Master Cylinder Assembly (See Page 34)	2
2	106259	Pressure Tubing 3/16" O.D. by 85" Length	2
3	106234	Vent Tubing 1/4" O.D. by 14" Length	1
4	106286	Vent Tubing 1/4" O.D. by 12" Length	1
5	106228	Actuating Rod Assembly	1
6	106227	Support	1
7	106261	Plate	1
8	900068	Rivet	2
9	106224	Cross Channel	1
10	101115	Pad	2
11	900067	Rivet	4
12	106231	Cross Angle	1
13	900056	5/16-18 x 1-3/4" Hex Head Cap Screw	3
14	900401	5/16-18 Esna Nut	11
15	900057	5/16-18 x 2" Hex Head Cap Screw	3
16	106212	Steering Column	1
17	106290	Flange Bearing, Upper	1
18	106291	Flange Bearing, Lower	1
19	900050	5/16" U.S.S. Flat Washer	4
20	900631	5/16-18 x 1-1/4" Hex Head Cap Screw	4
21	106280	Steering Wheel	1
22	900395	Acorn Nut	3
23	900091	1/4-20 x 1/2" Hex Head Cap Screw W/Nylok	3
24	900515	1/4" Split Lock Washer	3
25	900107	5/16-18 x 1-1/2" Hex Head Cap Screw	1
26	106281	Steering Column Extension	1
27	900055	3/8-16 x 2" Step Bolt	1
28	900563	1/2" Wrought Washer	1
29	106285	Spacer	1
30	106211	Bushing	1
31	900402	3/8-16 Esna Nut	1
32	106283	Side Brace	2
33	900023	5/16-18 x 3/4" Hex Head Cap Screw	4
34	900527	5/16" Brass Washer - Large	2
35	900406	5/16-18 Nylok Nut	4
36	900130	Elbow	1
37	106300	Bracket	1
38	106327	Bottle Assembly	1
39	106304	Retainer Ring	1
40	900076	1/4-20 Wing Nut	1
41	107580	Vent Tubing 1/4" O.D. x 15" Length	1
42	106270	Steering Slave Cylinder Assembly L.H. (See Page 32)	1
43	106271	Steering Slave Cylinder Assembly R.H. (See Page 32)	1
44	106256	Spacer Block	1
45	900051	Clamp	6
46	900067	Rivet	6
47	900124	Vent Fitting	1
48	900123	Vent Tee	1

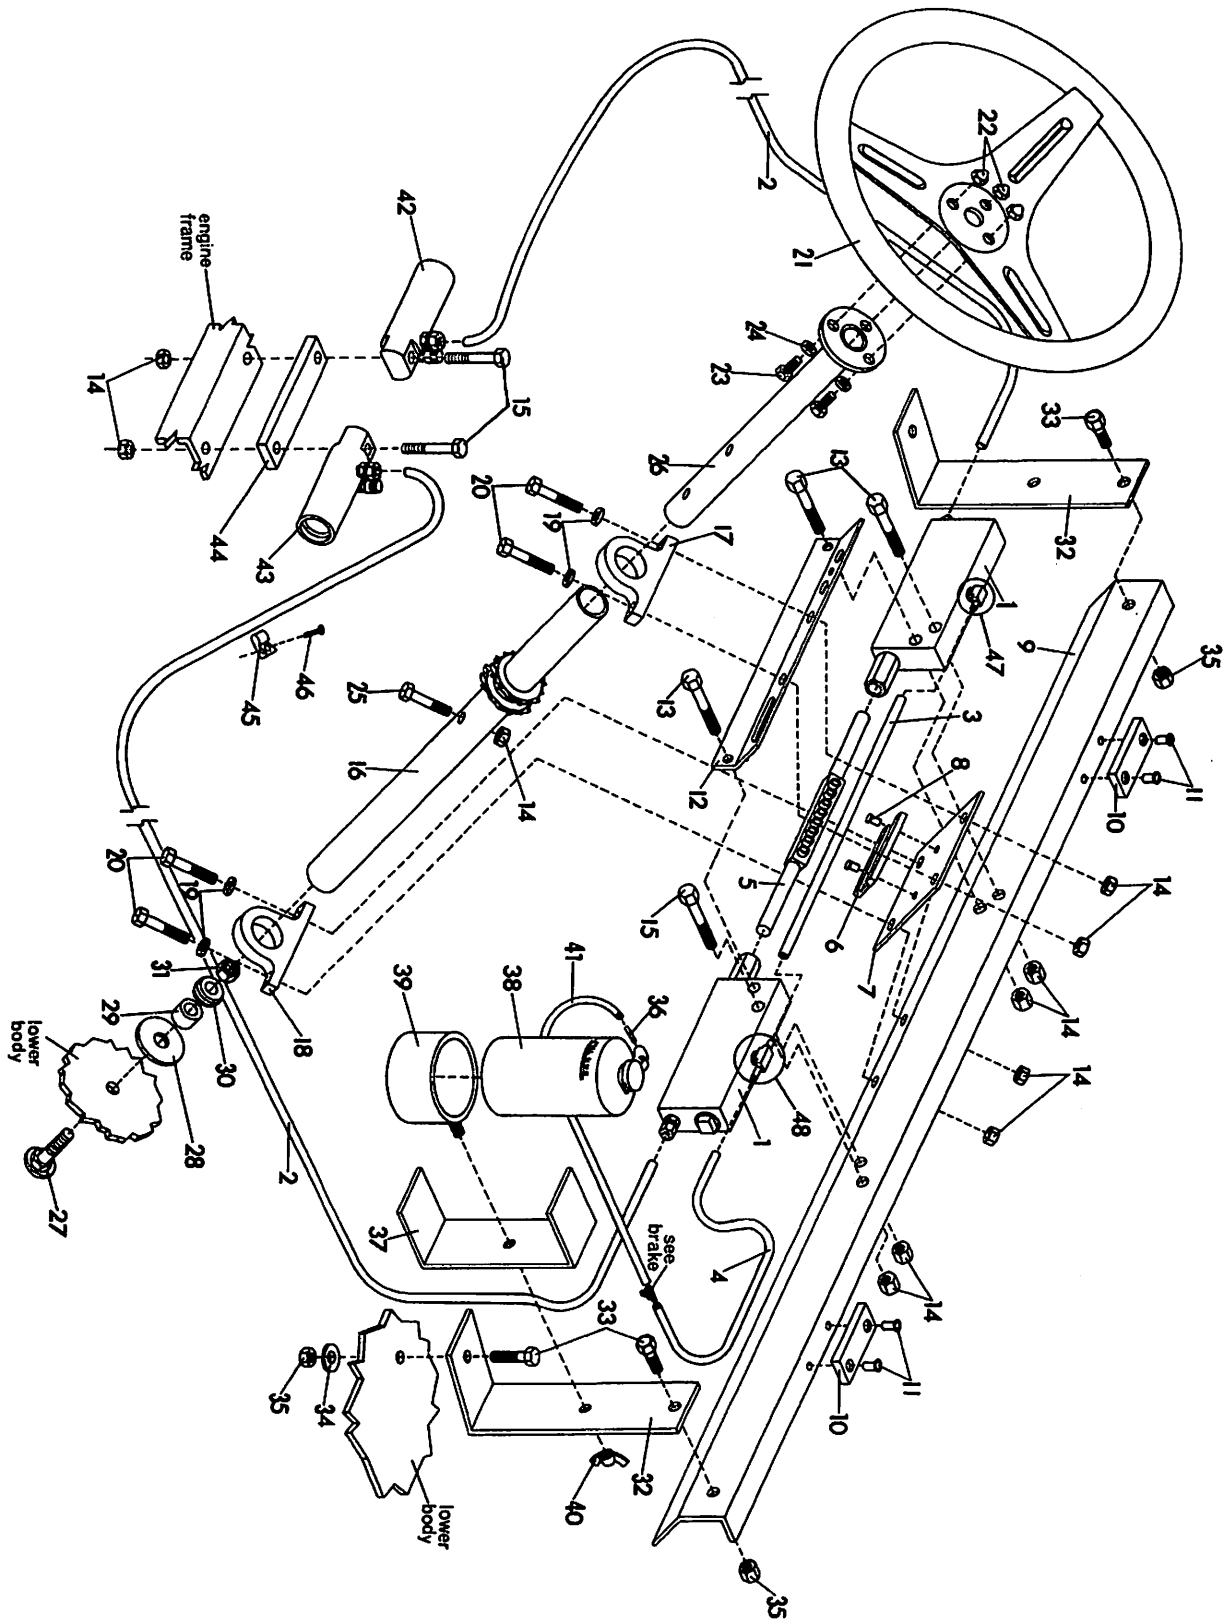

STEERING & MOUNTING


Model 1400 Only

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D.
1	106321	Steering Master Cylinder Assembly (See Page 34)	2
2	900124	Vent Fitting	2
3	106310	Pressure Tubing 3/16" O.D. by 10" Length	2
4	106312	Cylinder Mount	1
5	900033	3/8-16 x 1-1/4" Hex Head Cap Screw	2
6	900569	7/16" Flat Washer	2
7	900402	3/8-16 Esna Nut	2
8	900056	5/16-18 x 1-3/4" Hex Head Cap Screw	4
9	900401	5/16-18 Esna Nut	8
10	106311	Lever Channel	2
11	900023	5/16-18 x 3/4" Hex Head Cap Screw	4
12	900406	5/16-18 Nylok Nut	4
13	900031	1/4-20 x 4-1/2" Hex Head Cap Screw	1
14	900006	1/4-20 Esna Nut	1
15	106319	Spacer	1
16	106313	Steering Lever R.H.	1
17	106322	Steering Lever L.H.	1
18	106314	Hand Grip	2
19	900057	5/16-18 x 2" Hex Head Cap Screw	4
20	900032	Clevis Pin	2
21	900080	Cotter Pin	2
22	106315	Rod End	2
23	900402	3/8-16 Esna Nut	4
24	106316	Actuating Rod	2
25	106320	Vent Tubing 1/4" O.D. by 17" Length	2
26	900014	Wire Clamp	2
27	106270	Steering Slave Cylinder Assembly L.H. (See Page 32)	1
28	106271	Steering Slave Cylinder Assembly R.H. (See Page 32)	1
29	106256	Spacer Block	1

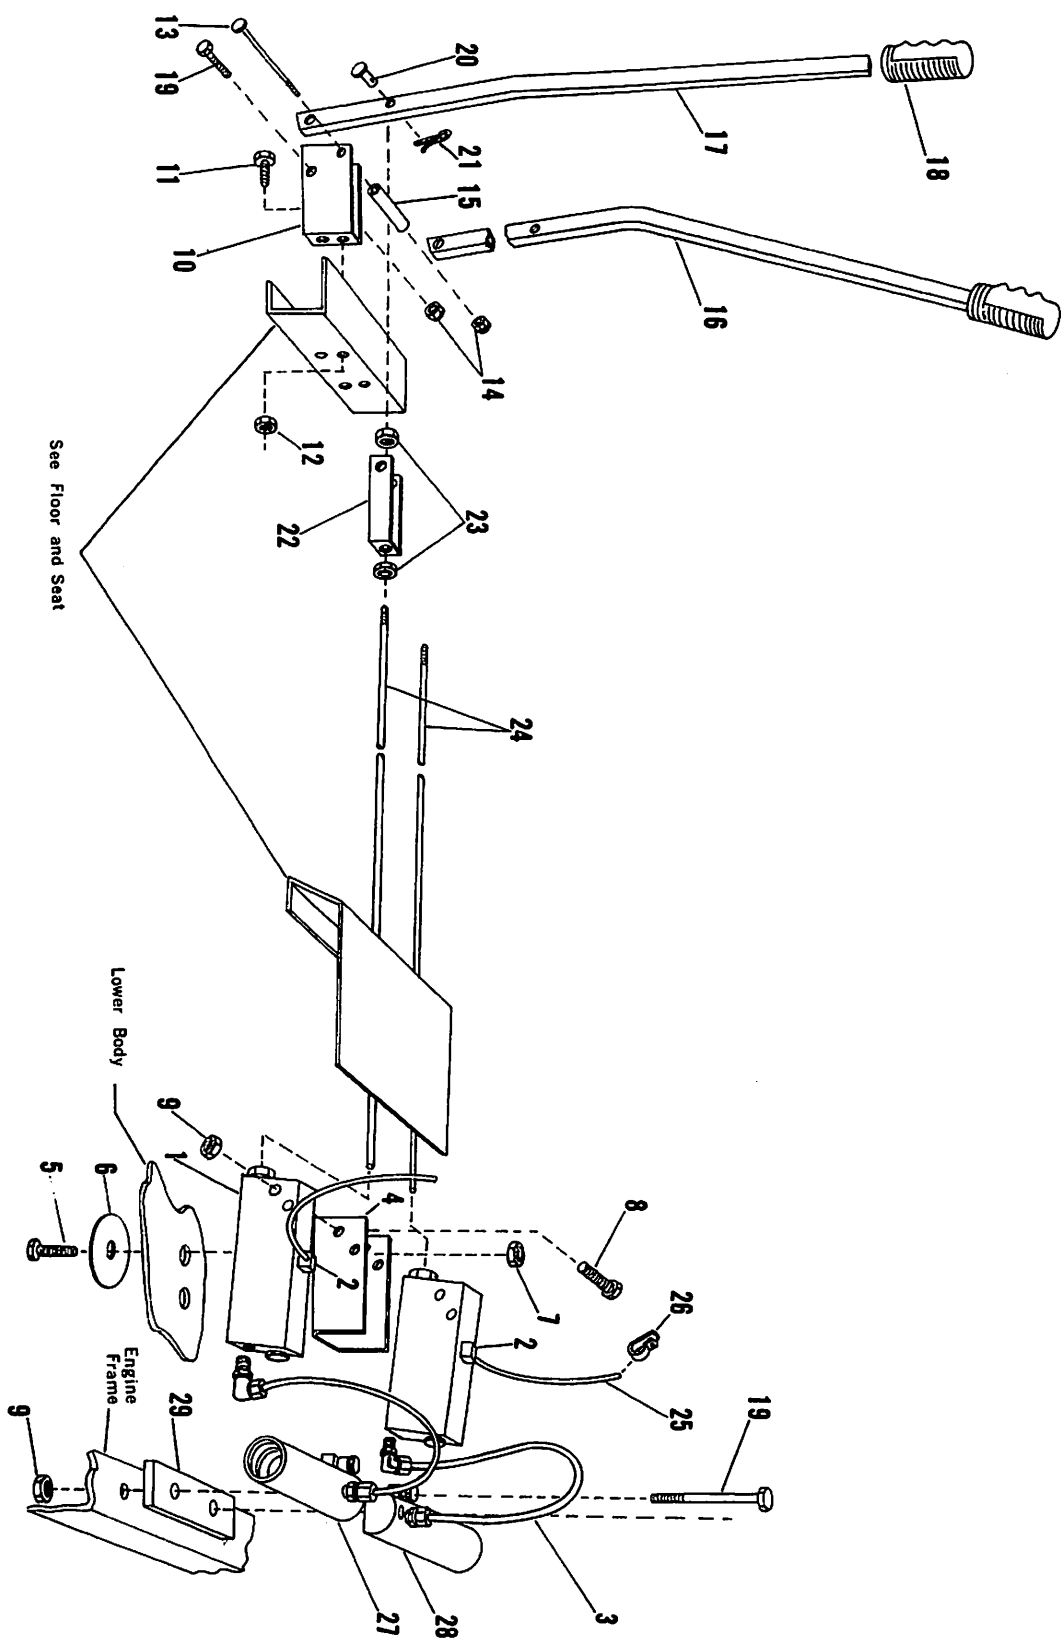


TIRES & MOUNTING
Model 1100 & 1400

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D.
1	102500	Tire Assembly - L.H. (Not Shown)	3
	102501	Tire Assembly - R.H.	3
2	900400	5/16-18 Heavy Esna Nut	18

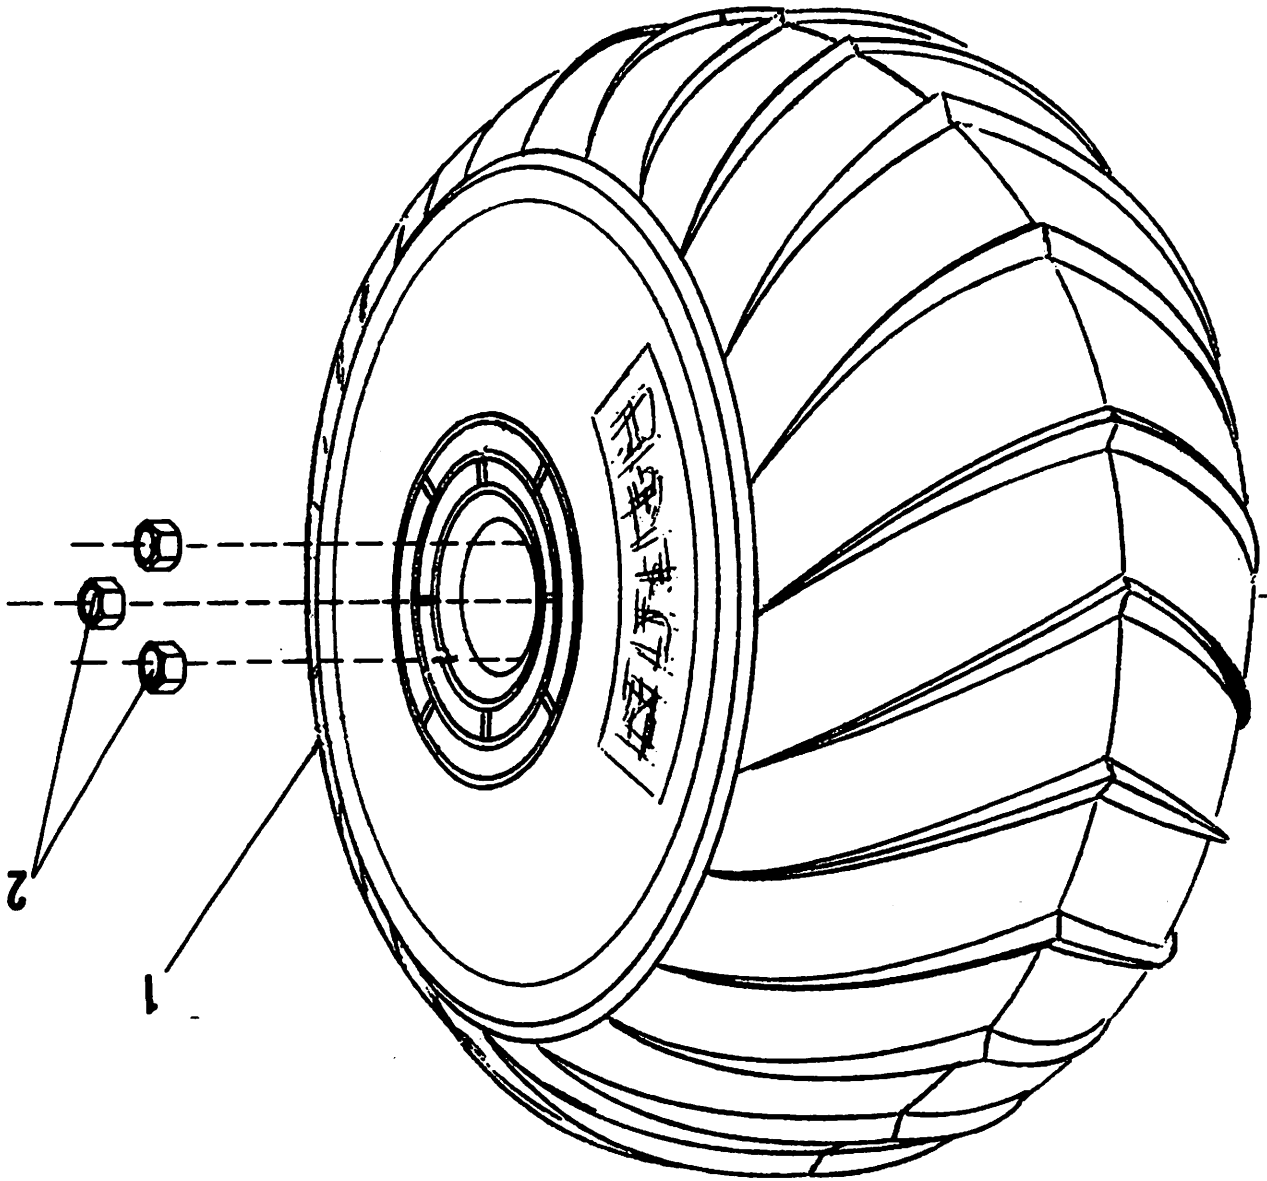

FLOOR & FRONT SEAT
Model 1100 & 1400

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D.
1	101200	Floor Board	1
2	101130	Seat Support	1
3	106318	Floor, Seat Support	1
4	101322	Rod Guide	2
5	900420	3/8-16 Wing Nut	1
6	900402	3/8-16 Esna Nut	1
7	106285	Spacer	1
8	900406	5/16-18 Nylok Nut	6
9	101106	Seat, Front	1
10	900066	5/16-18 x 3/4" Elevator Bolt	3
11	900063	Neoprene Washer	3
12	900413	Acorn Nut	1
13	101135	Screen	1
14	900067	Rivet	10
15	900522	#10 Flat Washer	10
16	900528	3/8" I.D. x 2-5/16" O.D. x 11 Ga. Flat Washer	2
17	900059	3/8-16 x 4" Round Head Machine Screw (Grade 8)	1

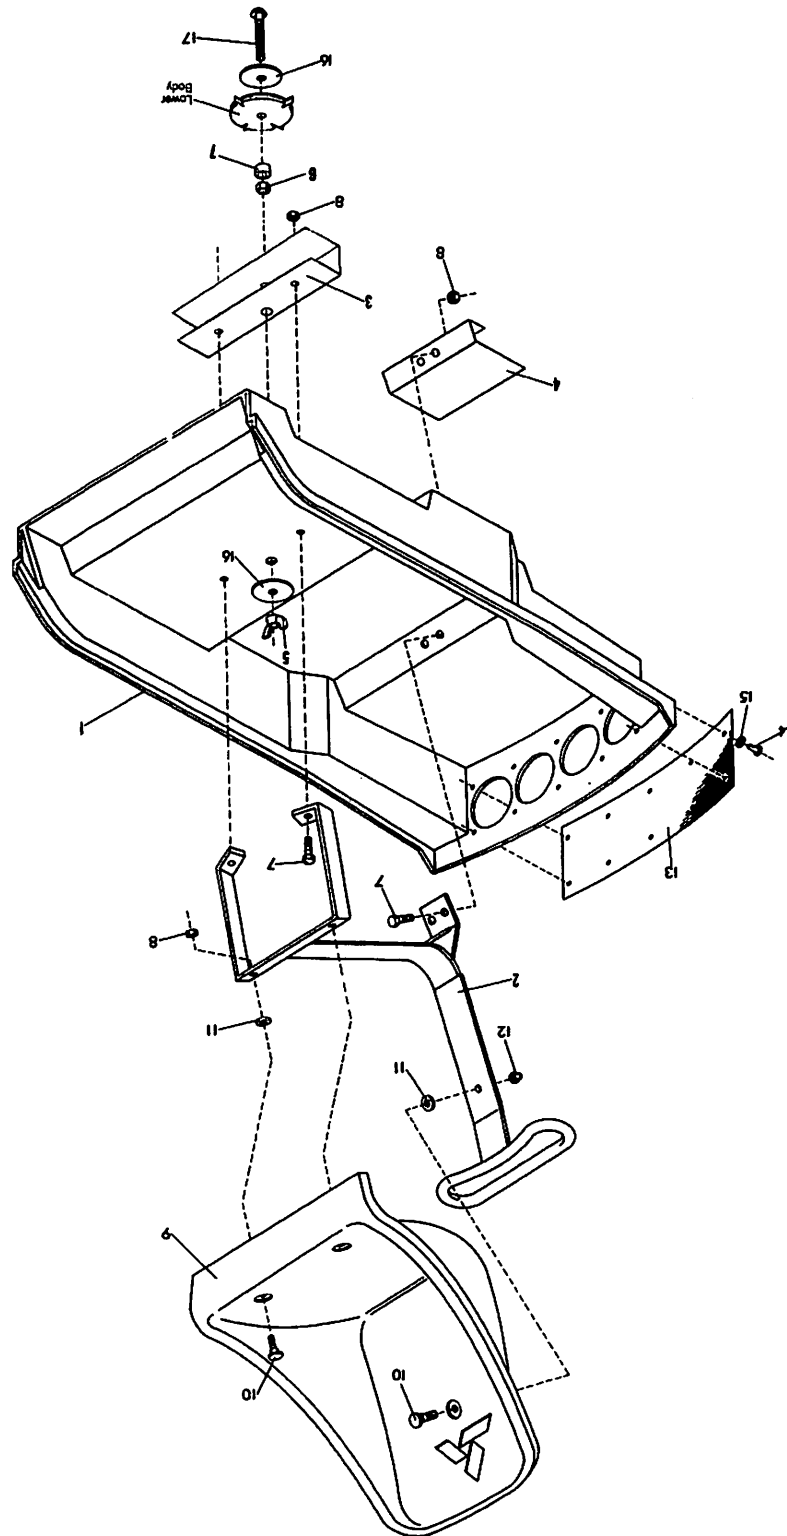

STEERING SLAVE CYLINDER ASSEMBLIES (106270 L.H., 106271 R.H.)**Model 1100 & 1400**




REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D.
1-2	106252	Steering Slave Cylinder L.H. (Not Shown)	1
1-2	106253	Steering Slave Cylinder R.H.	1
3	106251	Piston	1
4	910037	Seal	1
5	900122	Tube Fitting	1
6	900132	Bleeder Fitting	1
7	900133	Elbow	1

BRAKE SLAVE CYLINDER ASSEMBLY (108340 R.H.)**Model 1100 Only**

1	108331	Brake Slave Cylinder R.H.	1
2	108330	Piston	1
3	910036	Seal	1
4	900122	Tube Fitting	1
5	900120	Tube Fitting	1

BRAKE SLAVE CYLINDER ASSEMBLY (108341 L.H.)**Model 1100 Only**

1	108330	Piston	1
2	910036	Seal	1
3	900122	Tube Fitting	1
4	108332	Brake Slave Cylinder R.H.	1
5	900133	Elbow	1
6	900132	Bleeder Fitting	1

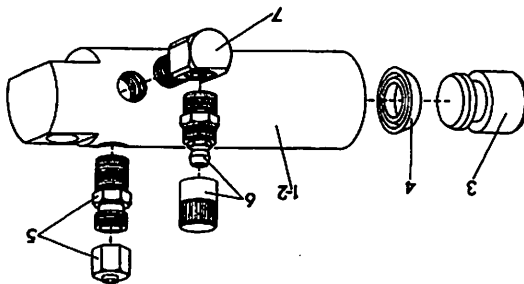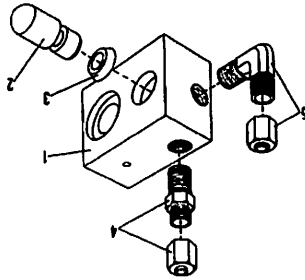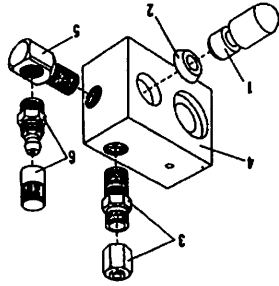

STEERING MASTER CYLINDER ASSEMBLY (106233)**Model 1100 Only**

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D.
1	106232	Steering Master Cylinder	2
2	106229	Spring	1
3	106230	Piston	1
4	910036	Seal	2
5	106225	End Cap	1
6	900126	Plug	1
7	900122	Tube Fitting	1

STEERING MASTER CYLINDER ASSEMBLY (106321)**Model 1400 Only**

1	106232	Steering Master Cylinder	2
2	106229	Spring	1
3	106230	Piston	1
4	910036	Seal	2
5	108302	End Cap	1
6	900126	Plug	1
7	900120	Tube Fitting	1

BRAKE MASTER CYLINDER ASSEMBLY (108300)**Model 1100 Only**

1	108301	Brake Master Cylinder	1
2	106229	Spring	1
3	106230	Piston	1
4	910036	Seal	2
5	108302	End Cap	1
6	900126	Pipe Plug	1
7	900121	Tube Fitting	1
8	108350	Parking Valve	1
9	900336	1/8" Pipe Plug	1

STEERING MASTER CYLINDER ASSEMBLY (106233)**Model 1100 Only**




REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D.
1	106232	Steering Master Cylinder	2
2	106229	Spring	1
3	106230	Piston	1
4	910036	Seal	2
5	106225	End Cap	1
6	900126	Plug	1
7	900122	Tube Fitting	1

STEERING MASTER CYLINDER ASSEMBLY (106321)**Model 1400 Only**

1	106232	Steering Master Cylinder	2
2	106229	Spring	1
3	106230	Piston	1
4	910036	Seal	2
5	108302	End Cap	1
6	900126	Plug	1
7	900120	Tube Fitting	1

BRAKE MASTER CYLINDER ASSEMBLY (108300)**Model 1100 Only**

1	108301	Brake Master Cylinder	1
2	106229	Spring	1
3	106230	Piston	1
4	910036	Seal	2
5	108302	End Cap	1
6	900126	Pipe Plug	1
7	900121	Tube Fitting	1
8	108350	Parking Valve	1
9	900336	1/8" Pipe Plug	1

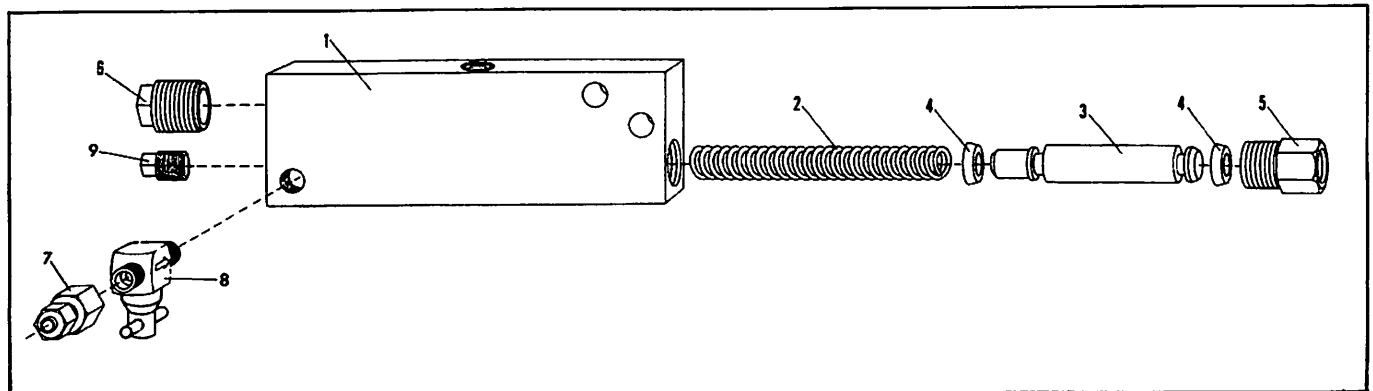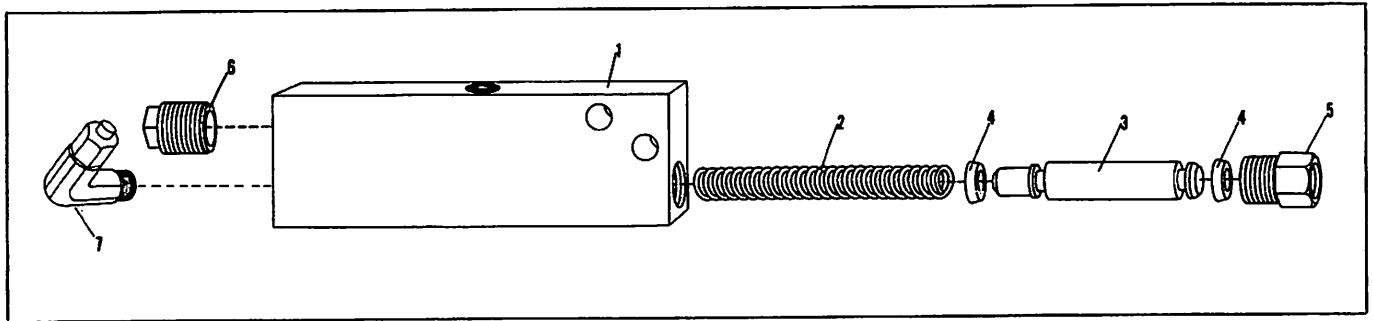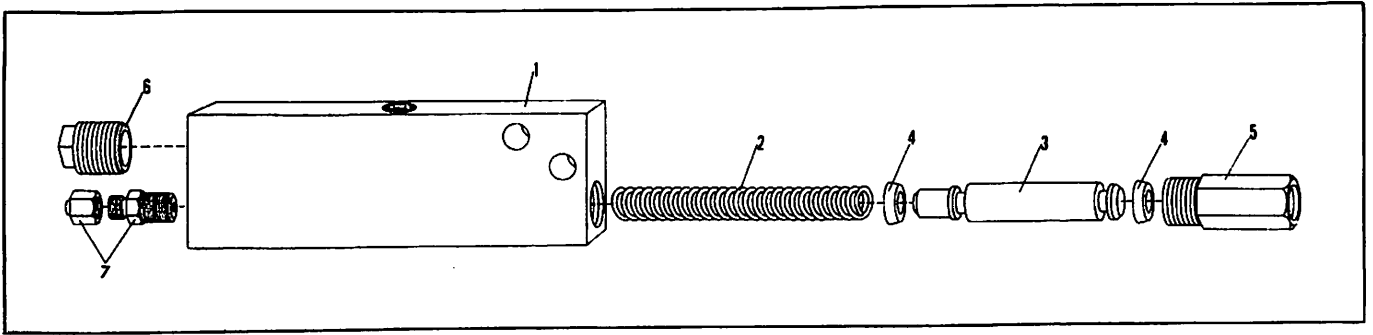

MISCELLANEOUS & OPTIONAL EQUIPMENT

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D.
1	109221	Gel Coat, Red	
2	109231	Gel Coat, White	
3	109251	Gel Coat, Yellow	
4	109800	Trailer Assembly	
5	109810	Tonneau Cover Assembly	
6	109815	Spray Bomb, White	
7	109816	Spray Bomb, Red	
8	109817	Spray Bomb, Yellow	
9	109820	Windshield Assembly	
10	900590	Brake Bleeding Gun	
11	900603	Epoxy Kit	