## Full Waveform Analysis Software

# RIANALYZE for *RIEGL* Airborne Laser Scanners

• full waveform analysis of digitized echo signals acquired by RIEGL LMS-Q560, LMS-Q680(i), LMS-Q780, and LMS-Q1560

16.6

- extraction of an unlimited number of targets
- coordinate transformation into scanner's own 3D coordinate system
- enhanced performance using NVIDIA<sup>®</sup> GPUs, more than up to 10 times faster processing

TREE-TO

*RIEGL®* Airborne Laser Scanners with full waveform capability digitize the waveform of the echo signal for every emitted laser pulse.

RiANALYZE applies the so-called **Full Waveform Analysis** to the digitized echo signals provided by the laser scanner and additionally transforms the geometry data (i.e., range and scan angle) into Cartesian coordinates. Thus RiANALYZE converts the digitized echo signal data to data compatible with conventional airborne laser data processing packages for further processing.

Full Waveform Analysis Software Full Waveform Analysis Software for RIEGL Airborne Laser Scanners for RIEGL Airborne Laser Scanners

Additionally, RiANALYZE is smoothly integrated into the projectoriented processing software RiPROCESS via the application server RiSERVER.

A-3580 Hom, AUSTRIA www.riegl.com

LMS-Q560, LMS-Q680(i), LMS-Q780 & LMS-Q1560

CD-ROM

© RIEGL LMS GmbH

visit our website www.riegl.com




## Ri Software

RiANALYZE supports either direct access to the sample data files stored on local hard disks or in a local area network. Sequential processing of an arbitrary number of sample data files allows the analysis of sample data without user attendance.

Additionally, RiANALYZE is smoothly integrated into the projectoriented processing software RiPROCESS via the application server RiSERVER.

The primary output is a binary data file in a well-documented format. This output is usually the input to RiWORLD for transforming scan data into a target coordinate reference system. Alternative data formats are available to allow straightforward processing of the resulting point cloud with third party software packages.

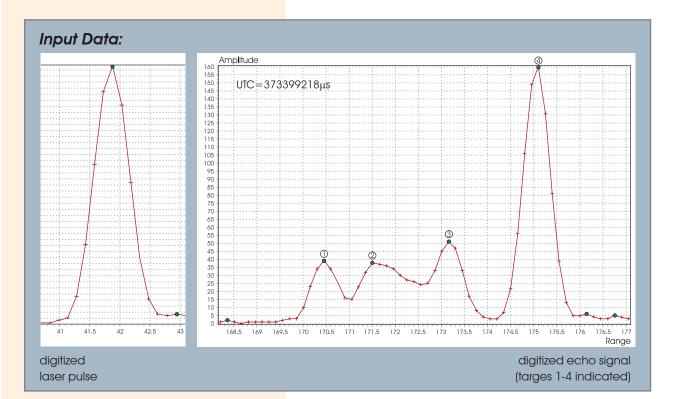


#### Output Data:

UTC	Target	Range	Amplitude	Width
3733992180	1	170.4	36	3.83
3733992180	2	171.5	36	8.98
3733992180	3	173.2	47	4.73
3733992180	4	175.1	157	4.48

ASCII-data output file for target 1 - 4 ready for postprocessing with third-party software like, e.g., SCOP++, TerraScan or others

#### **RiANALYZE Echo Discrimination**

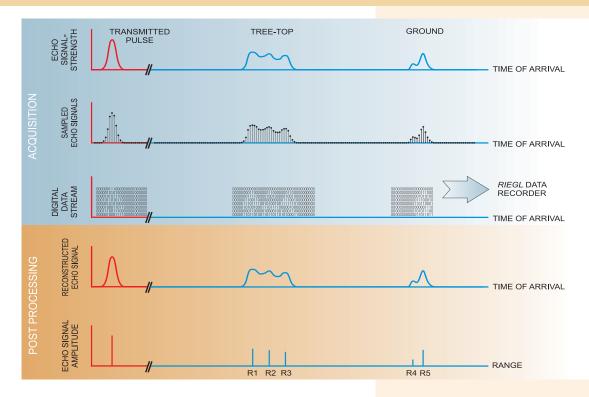

RiANALYZE detects, analyses, and converts an unlimited number of targets per emitted laser pulse based on the stored digital sample data.

For each single target the following parameters are extracted and provided:

- range, scan angle
- pulse width
- x, y, z-coordinates
- time stamp (UTC, GPS)
- pulse amplitude
- first, second, ..., last target identifier

#### **RiANALYZE Key Features**

- Performs Full Waveform Analysis: Target detection and target parameter estimation of digitized echo signals of RIEGL Airborne Laser Scanners with full waveform capability
- Extraction of an unlimited number of targets per emitted laser pulse
- Coordinate transformation into the well-defined Scanner's Own 3D Coordinate System
- Provides various data output formats for a variety of post-processing software packages
- Command line interface for sequential unattended processing of sample data files
- Smooth integration into RiPROCESS

RiANALYZE System Requirements			
Operating systems:	Windows 7 Professional, 32 or 64 bit operating system Note: In case of Windows 7, please ensure that you have up-to- date device drivers installed (especially for the graphic card).		
Memory requirements:	2048 MB RAM minimum / 4096 MB (64 bit) Note: On 32 bit operating systems, RiANALYZE can use up to 3 GB RAM and on 64 bit operating systems up to 4 GB RAM.		
Disk space requirements:	approx. 22 MB of free disk space for the program		

#### **RIANALYZE GPU**

Hardware requirement(s):	NVIDIA® GPU Geforce 600 or higher recommended also supports NVIDIA® GPU Geforce 9xx (Maxwell architecture)
Performance increase:	increases processing speed up to tenfold

### **RiANALYZE** Download Information

RiANALYZE is available for download in the members' area of www.riegl.com

In order to download RiANALYZE, it is necessary to be registered. After registration and activation, you will be able to download the current version. Subsequently, you will be kept updated in case of later software version releases.



RIEGL Laser Measurement Systems GmbH Riedenburgstraße 48 3580 Horn, Austria Phone: +43 2982 4211 | Fax: +43 2982 4210 office@riegl.co.at www.riegl.com

RIEGL USA Inc. Orlando, Florida | info@rieglusa.com | www.rieglusa.com RIEGL Japan Ltd. Tokyo, Japan | info@riegl-japan.co.jp | www.riegl-japan.co.jp RIEGL China Ltd. Beijing, China | info@riegl.cn | www.riegl.cn



Information contained herein is believed to be accurate and reliable. However, no responsibility is assumed by *RIEGL* for its use. Technical data are subject to change without notice.