



Installation Guide For:



Call 1-800-335-5909 for Installation Support
M - F 7:30 a.m. - 6:00 p.m. CST

**This Packet MUST Accompany
Materials To Job Site**

Read all instructions before beginning installation





Table of Contents

DekPro EFFEX Overview	Pg. 3
Component Guide	Pg. 4
Basic Lighting Guidelines	Pg. 5
Line Method - Up to 28 Watts	Pg. 6 - 7
T-Split Method - Up to 48 Watts	Pg. 8 - 9
Loop Method - Up to 80 Watts	Pg. 10 - 11
Perimeter Wire - Any Configuration	Pg. 12 - 13
Vertical Post Light	Pg. 14
Recessed Stair Light	Pg. 15
Remote Dimmer Guide	Pg. 16
Unlit Post Cap Install	Pg. 17
Warranty	Pg. 17




*****IMPORTANT*****

All the information in this guide is published in good faith and for general informational purposes only. DekPro EFFEX™ does not make any warranties about the completeness, reliability and accuracy of this information. The intent is to provide guidelines for a successful project based on practical knowledge.

All fixture / light wattages should be added together to achieve total wattage for the project. Once total wattage is determined, select the appropriate transformer and installation method in the guide.

It is the responsibility of the installer to comply with applicable codes, laws and safety guidelines. Be safe and follow all instructions when using power tools and always wear eye protection!

DekPro™ EFFEX Low Voltage Lighting System

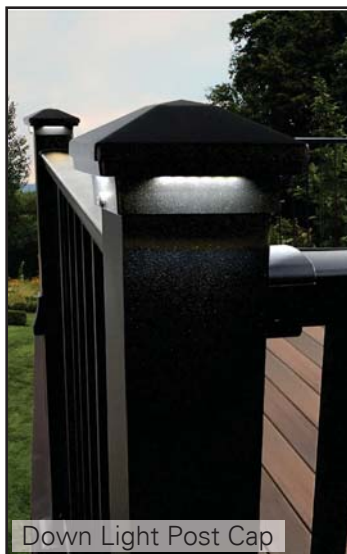

Post Caps

Dekpro™ EFFEX post caps feature a durable powder coat finish and solid aluminum components to create a low maintenance fixture that is built to last. EFFEX fixtures are available both lit and unlit with multiple sizes and colors to choose from as well as pyramid or flat-top designs.

Lighting

Available for Post Caps (Glow Ring & Down Light), Vertical Post Lights & Recessed Stair Lights. Lights include high performance LEDs and Quick Connect wiring for fast and easy installation.

Wiring

Lights come standard with 2 quick connect leads (input/output). Wiring available in 2 styles, 9' Quick Connect for running wire from fixture to fixture and/or In-Line Connector for tapping into 12 gauge perimeter wire.

Power Supply

DC Transformers are available in 3 power outputs, 36, 60 & 100 Watt versions. Lights require a transformer for power, but a remote dimmer and/or timer can be added for additional convenience and functionality.

Available Colors:


* Colors shown are approximate representation *



Absolute Black
(Textured)



Cocoa Bronze
(Textured)



Dream White
(Textured)



Maple Cream
(Textured)

Additional Color Options for Unlit Caps Only



Gloss Black



Textured Brown



Hammered Bronze

DekPro™ EFFEX Low Voltage Lighting System

Post Caps / Post Lights / Stair Lights / Power Supply



Unlit Post Cap

Pyramid & Flat Top



Dimmer w/ Remote

2.5 Watts

On / Off Remote
Fully Dimmable



Band Light Post Cap

2.2 Watts

2 - 6" Leads per fixture
Pyramid & Flat Top



Timer

On / Off Function
Dusk to Dawn Feature
Up to 8 Hr Adjustment



Down Light Post Cap

3.5 Watts

2 - 6" Leads per fixture
Pyramid & Flat Top



9' Quick Connect

9' Length
Plug Connections
1 - White, 1 Black



Vertical Post Light

1 Watt

2 - 3' Leads per fixture
Fits 2" post or wider



Y-Splitter

Plug Connections
1 - White, 2 Black



Recessed Stair Light

1 Watt

2 - 3' Leads per fixture
Fits 1" Diameter Hole



In-Line Connector

6' Length
For EFFEX 12-2 Gauge Wire



DC Transformer

36, 60 and 100 Watt



EFFEX 12-2 Gauge Wire


100' & 250' Rolls
12-2 Gauge Outdoor Rated

DekPro™ EFFEX Basic Layout Guidelines

Determining Wiring Configuration


Deck Wiring Overview

Add total wattage of all fixtures being used for the job.
Total wattage should not exceed 80% of the transformer's capacity.
Once total wattage is determined, select the best wiring method.

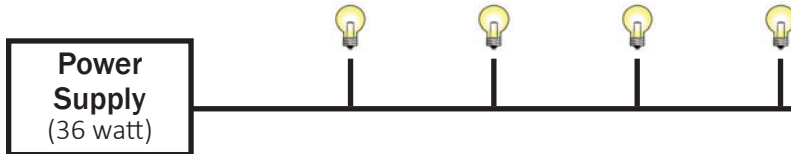

**Line Method:
Up to 28 Watts**


(Shown on Pages 6 - 7)

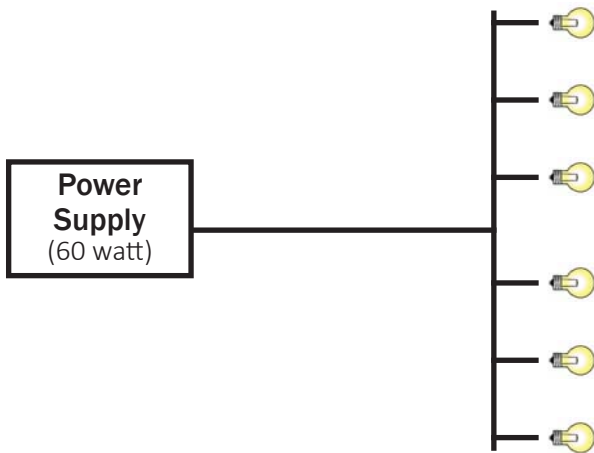

**T-Split Method:
Up to 48 Watts**

(Ensure even power draw on each side)

(Shown on Pages 8 - 9)

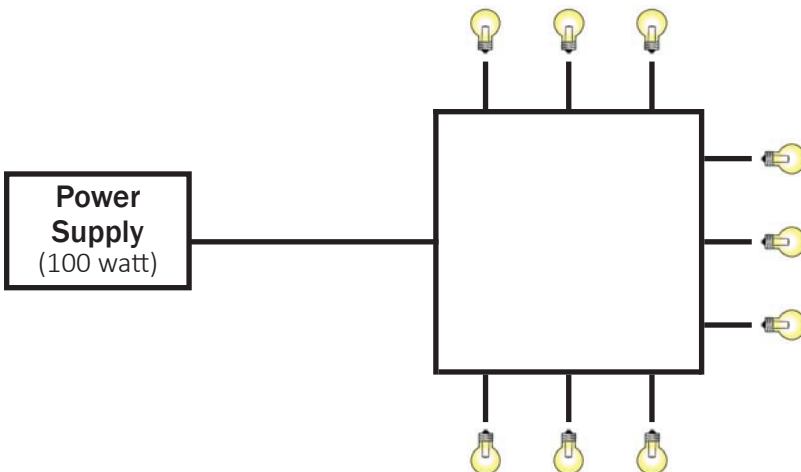

**Loop Method:
Up to 80 Watts**

(Shown on Pages 10 - 11)

Wattage Breakdown:

Power Supplies:
36w, 60w & 100w

Post Caps:
2.2w Band Light / 3.5w Down Light

Post Light:
1 Watt

Stair Light:
1 Watt

NOTE:


It is recommended to start your wiring project at the transformer and work your way out.
These wiring methods are recommended for DekPro EFFEX Fixtures & Transformers only.
Use of Non-EFFEX transformers and fixtures may void warranty

Line Method - Up to 28 Watts

Using Quick Connect Wiring

Installation Guidelines

Deck Wiring Overview

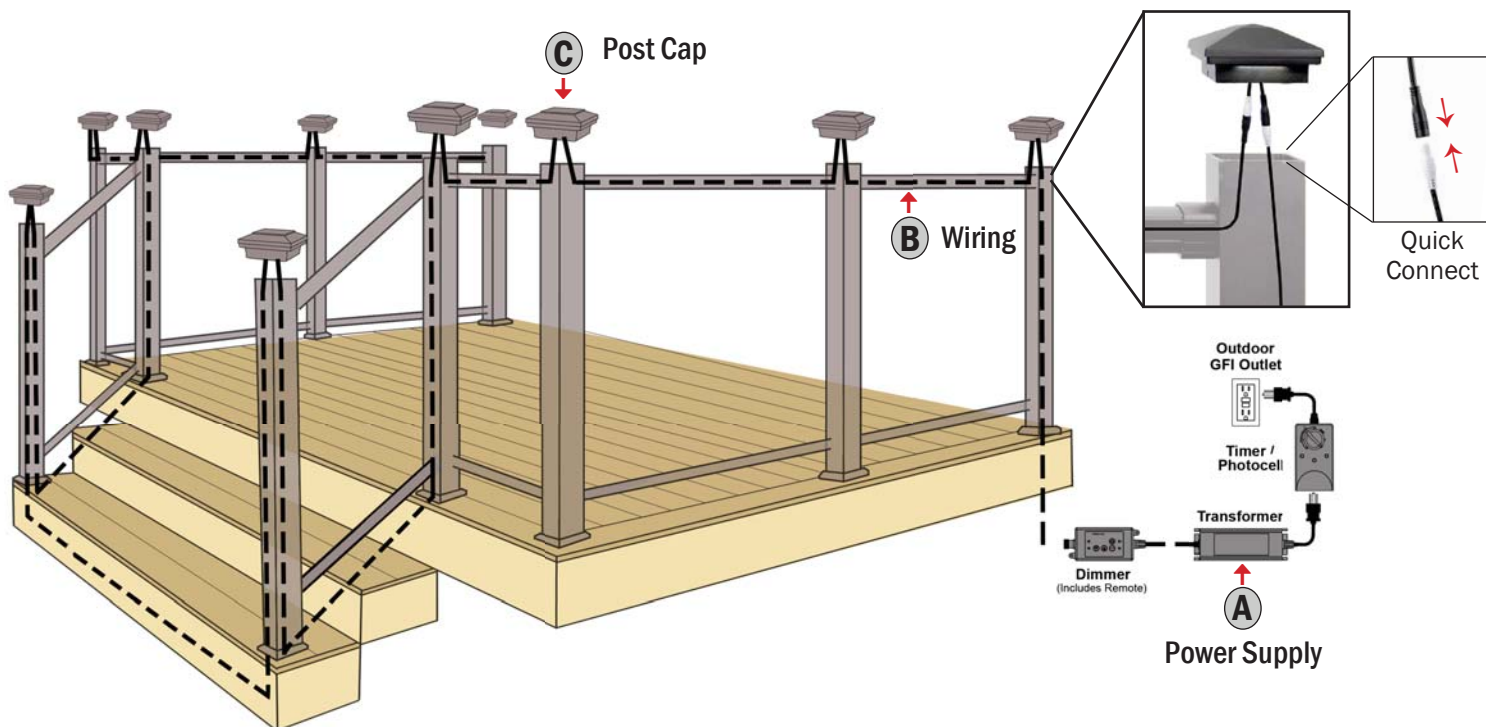

Components List:



A. Power Supply



B. Wiring



C. Post Cap
2.2w Band / 3.5w Down



Post Light
1 Watt



Stair Light
1 Watt

Installation Overview:

See illustration above as reference. Dashed lines are a representation of approximate wire locations, each installation will vary.

- Run wire from your transformer to the location of your first post.
Note: Do not plug in transformer until all wires are run.
- Run wire up inside the post to your first lighting fixture. Drill a minimum 1/2" hole through the deck board to allow passage of the wiring through the board and into the post.
Tip: Laying post on its side prior to attaching to deck will allow for easier installation of wire. Use a fish tape or equivalent to pull wire to the top of the post. Tape wire to the top of post.
- Once wire is installed into first post, stand the post upright and secure into place. (Plumb as necessary)
- From the first lighting fixture, run a 9' Quick Connect Cable into the post and through the top rail to the next light. Continue this method until all lights are connected. (Brackets and posts need to be drilled using a 3/8" drill bit to run wire)
Note: Wiring cannot be run through the top rail of stairs when using DekPro Prestige Railing. For stairs, wiring should be run up & down inside the posts.
- Once lights are all connected, plug transformer into GFI protected 115V outlet and check to ensure all lights are illuminated, if any lights have not illuminated unplug transformer and check connections. Once all lights are working properly securely attach caps to the post.

Line Method - Up to 28 Watts

Using Quick Connect Wiring

Installation Guidelines

Lighting Components


Wiring



Transformer

Run cable from the transformer up inside the first post to the post light (left) and connect via Quick Connect connections. From there, use a 9' Quick Connect cable to run through the top rail to the next post. Continue this process until all post caps are connected.
(Brackets and posts will need to be drilled using a 3/8" drill bit to accommodate cable)

Post Cap

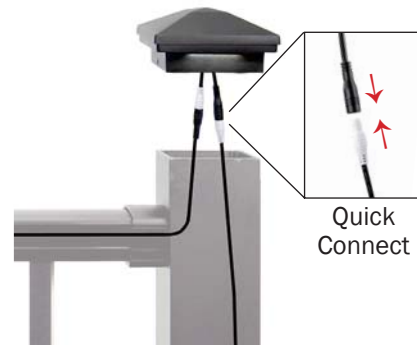

Quick Connect

Step 1


Ensure that all cable has been properly installed and test the lights before mounting post cap to post.

Step 2

Fasten post cap to the post using 2 each screws included.



Power Supply Diagram

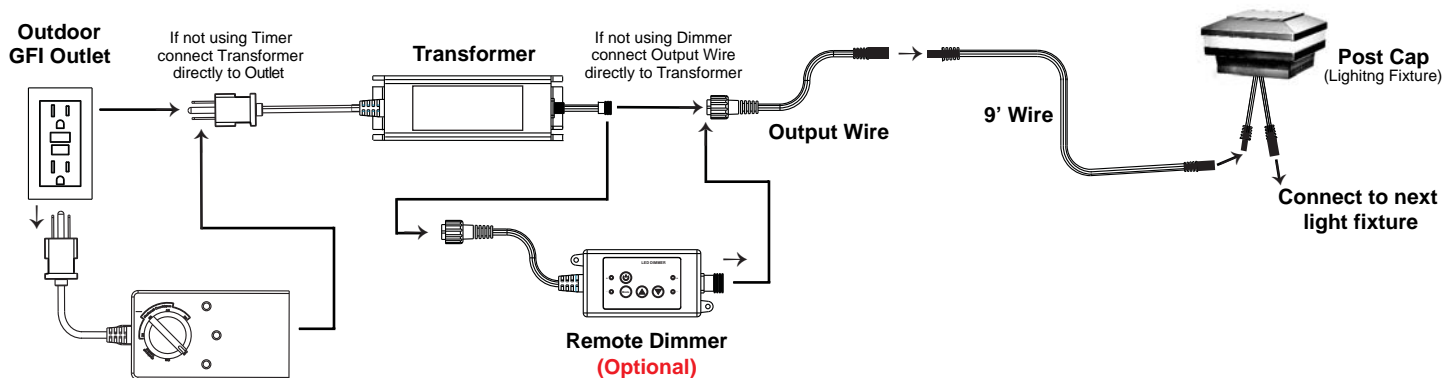

Timer / Photocell (Optional)

When using dimmer, ensure all components are connected before powering transformer


T-Split Method - Up to 48 Watts

Using Quick Connect Wiring

Installation Guidelines

Deck Wiring Overview

When using up to 48 watts of lights with 9' quick connect leads it may be necessary to add a Y-Splitter near the center of the system to minimize voltage drop. This ensures even light output throughout the system.

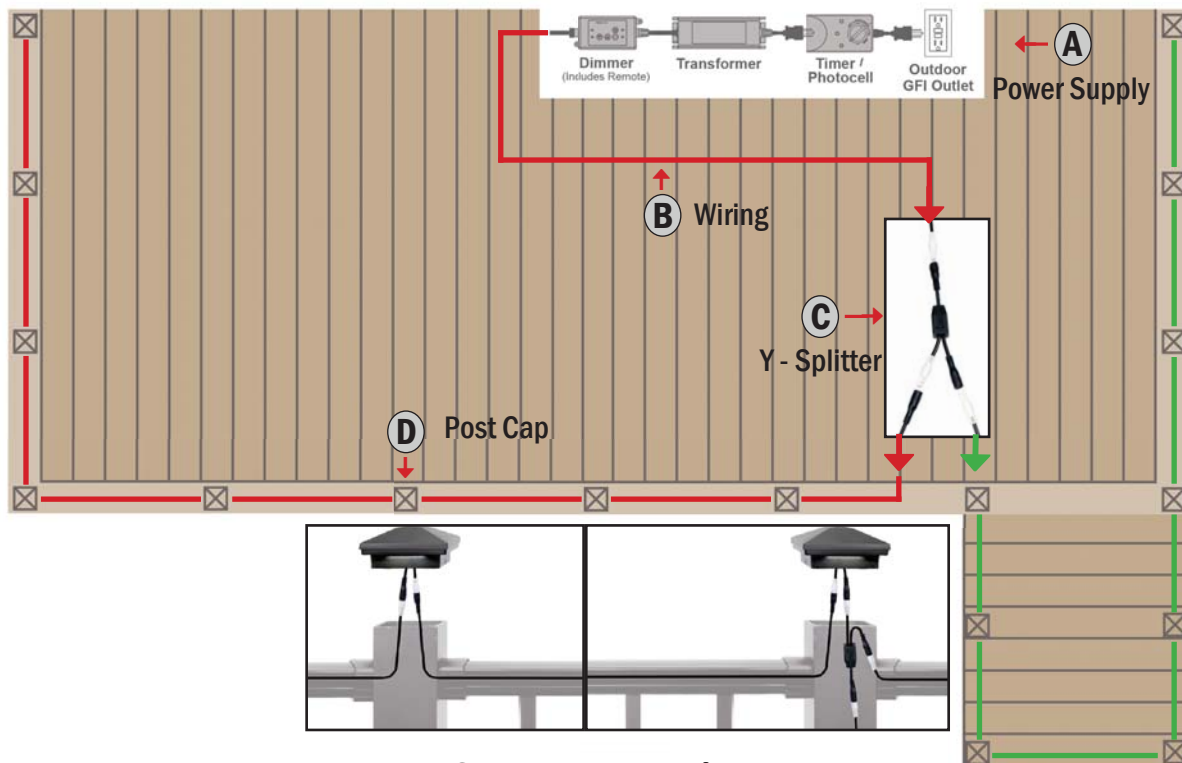

Components List:



A. Power Supply



B. Wiring



C. Y-Splitter



D. Post Cap
2.2w Band / 3.5w Down



Post Light
1 Watt



Stair Light
1 Watt

Installation Overview:

****See illustration above as reference. Red & Green lines represent approximate wire locations, each installation will vary.****

****Red & Green Lines denote wire paths after being split with the Y-Splitter.****

- **Determine your electrical load mid-point and run wire from your transformer to a post nearest that point.**
Note: Do not plug in transformer until all wires are run.
- **Run wire up inside the post to your first lighting fixture. Drill a minimum 1/2" hole through the deck board to allow passage of the wiring through the board and into the post.**
Tip: Laying post on its side prior to attaching to deck will allow for easier installation of wire. Use a fish tape or equivalent to pull wire to the top of the post. Tape wire to the top of post.
- **Once wire is installed into first post, stand the post upright and secure into place.** (Plumb as necessary)
- **From the first lighting fixture, run a 9' Quick Connect Cable into the post and through the top rail to the next light. Continue this method until all lights are connected. (Brackets and posts need to be drilled using a 3/8" drill bit to run wire)**
Note: Wiring cannot be run through the top rail of stairs when using DekPro Prestige Railing. For stairs, wiring should be run up & down inside the posts.
- **Once lights are all connected, plug transformer into GFI protected 115V outlet and check to ensure all lights are illuminated, if any lights have not illuminated unplug transformer and check connections. Once all lights are working properly securely attach caps to the post.**

T-Split Method - Up to 48 Watts

Using Quick Connect Wiring

Installation Guidelines

Lighting Components


Wiring



Mid-Point

Run cable from the transformer to electric load mid-point. Run cable up that post and use a Y-Splitter to split the run. From there, use 9' Quick Connect cables to run cables in either direction through the top rail to the next posts. Continue this process until all lights are connected. (Brackets and posts will need to be drilled using a 3/8" drill bit to accommodate cable)

Post Cap

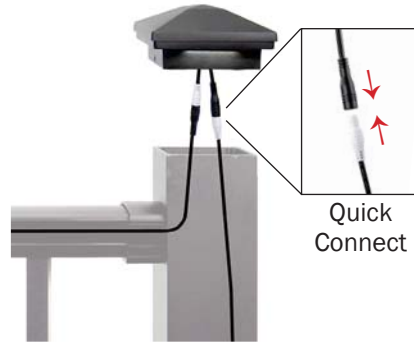

Step 1


Ensure that all cable has been properly installed and test the lights before mounting post cap to post.



Step 2

Fasten post cap to the post using 2 each screws included.

Power Supply Diagram

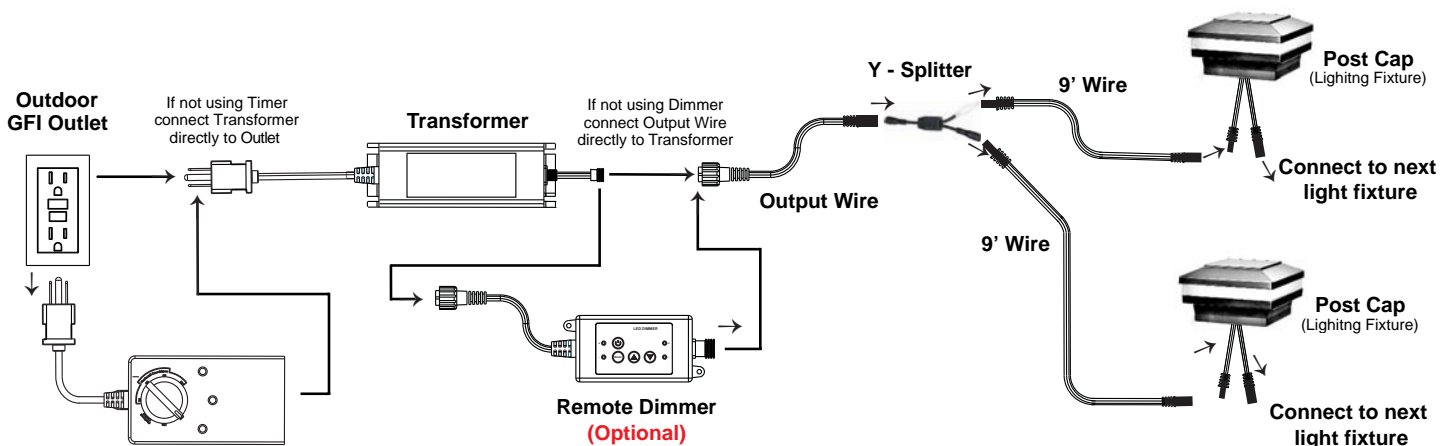


When using dimmer, ensure all components are connected before powering transformer

Loop Method - Up to 80 Watts

Using Quick Connect Wiring

Installation Guidelines

Deck Wiring Overview

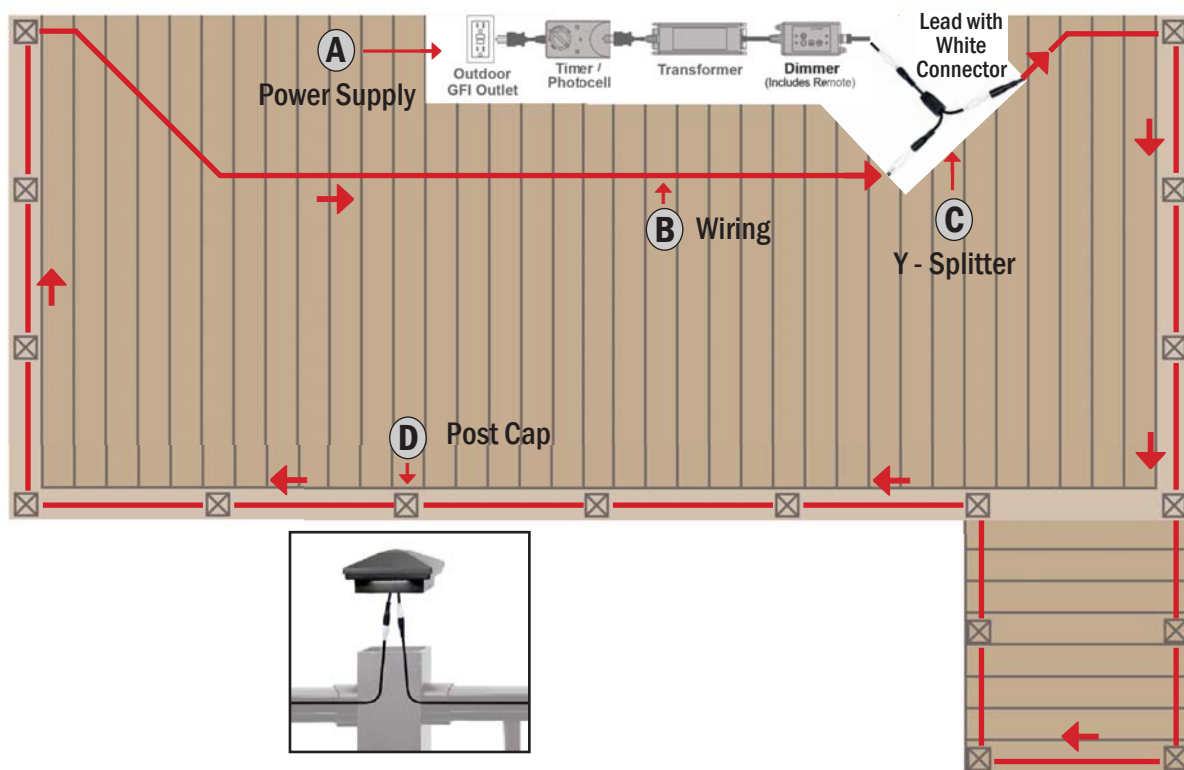

Components List:



A. Power Supply



B. Wiring



C. Y-Splitter



D. Post Cap
2.2w Band / 3.5w Down



Post Light
1 Watt



Stair Light
1 Watt

Installation Overview:

****See illustration above as reference. Red lines are a representation of approximate wire locations, each installation will vary.****

- **Start at the transformer and connect a Y-Splitter. Run Quick Connect wire from the Y-Splitter to the location of your first post leading with the white connector**

Note: Do not plug in transformer until all wires are run.

- **Run wire up inside the post to your first lighting fixture. Drill a minimum 1/2" hole through the deck board to allow passage of the wiring through the board and into the post.**

Tip: Laying post on its side prior to attaching to deck will allow for easier installation of wire. Use a fish tape or equivalent to pull wire to the top of the post. Tape wire to the top of post.

- **Once wire is installed into first post, stand the post upright and secure into place. (Plumb as necessary)**
- **From the first lighting fixture, run a 9' Quick Connect Cable into the post and through the top rail to the next light. Continue this method until all lights are connected. (Brackets and posts need to be drilled using a 3/8" drill bit to run wire)**

Note: Wiring cannot be run through the top rail of stairs when using DekPro Prestige Railing.

For stairs, wiring should be run up & down inside the posts.

- **From the last post, run wire back to the Y-Splitter at the transformer and close the loop to complete the circuit.**
- **Once lights are all connected, plug transformer into GFI protected 115V outlet and check to ensure all lights are illuminated, if any lights have not illuminated unplug transformer and check connections. Once all lights are working properly securely attach caps to the post.**

Loop Method - Up to 80 Watts

Using Quick Connect Wiring

Installation Guidelines

Lighting Components


Wiring



Transformer

Run cable from the transformer up inside the first post to the post light (left) and connect via Quick Connect connections. From there, use a 9' Quick Connect cable to run through the top rail to the next post. Continue this process until all post caps are connected.
(Brackets and posts will need to be drilled using a 3/8" drill bit to accommodate cable)

Post Cap

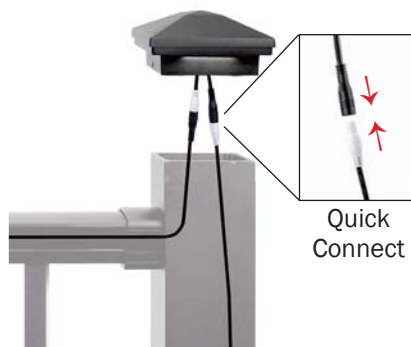

Step 1


Ensure that all cable has been properly installed and test the lights before mounting post cap to post.



Step 2

Fasten post cap to the post using 2 each screws included.

Power Supply Diagram

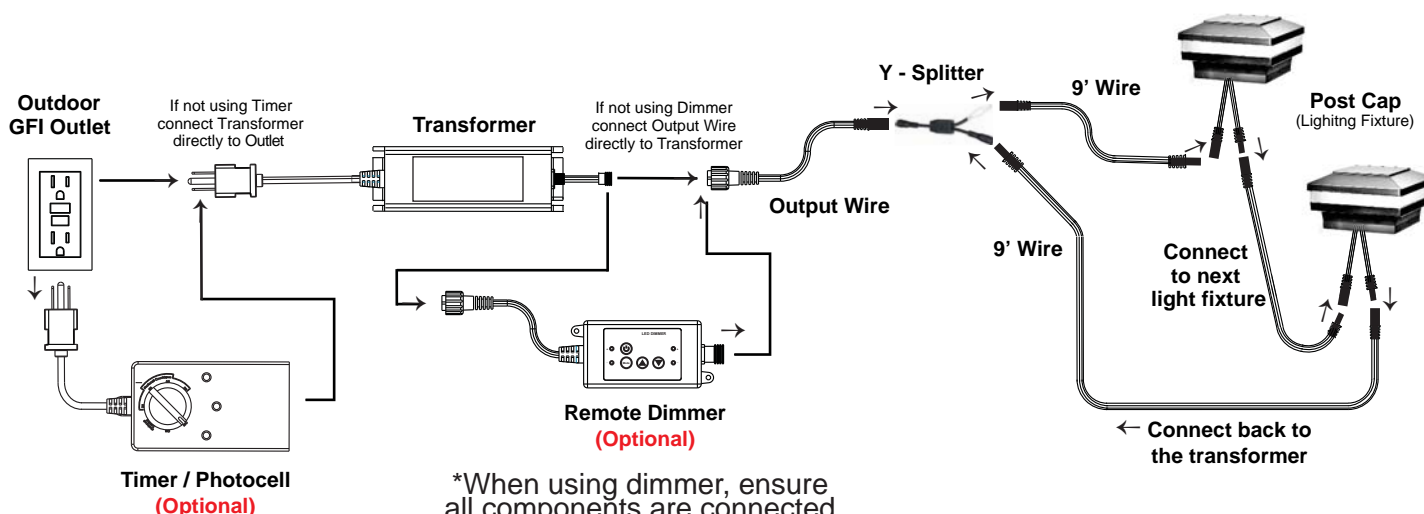


When using dimmer, ensure all components are connected before powering transformer

Any Light Configuration Using 12-2 Gauge Perimeter Wire

Installation Guidelines

Deck Wiring Overview

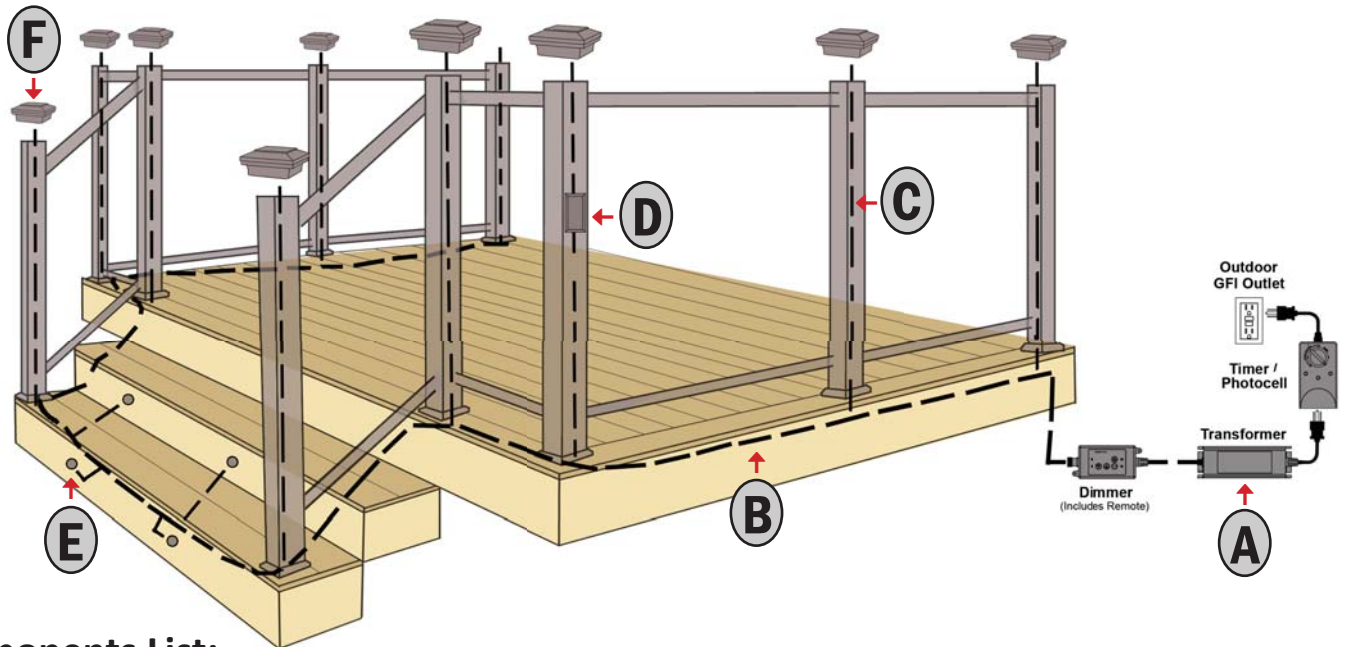

Components List:



Installation Overview:

- Run EFFEX 12-2 gauge outdoor rated low voltage wire from your transformer location to your first light fixture and around the perimeter of your deck to the last light fixture. Make sure to allow for some excess wire at each post to provide adequate room and allow for easy installation of In-Line Connector later. (Do not plug in transformer until all lighting is connected) (See illustration above. Dashed lines are a representation of approximate wire locations, each installation will vary.)
- Securely attach the 12-2 low voltage perimeter wire every 2-3 feet to deck structure to provide adequate support of wires.
- At each post location that will have a light fixture, use the In-Line Connector cable to splice into the perimeter wire and to provide power to the fixture. At the center where the post will attach to the deck drill a minimum ½" hole through the deck board to allow passage of the male end of the quick connect through the board and into the post.
Tip: Laying post on its side prior to attaching to deck will allow for easier installation of wire. Use a fish tape or equivalent to pull wire to the top of the post. Tape wire to the top of post.
- Once wire is installed into post, stand the post upright and secure into place. (Plumb as necessary)
- When all posts are permanently installed connect the light fixture to the wire attached to the post and ensure the connectors are securely seated (Do not secure caps to post until all lights have been checked and are working properly.)
- Once lights are all connected go to the power supply (unplugged) and wire nut the connection between the transformer (or Dimmer) and the perimeter wire. (Wires will need to be stripped and wire nuts attached to complete this step.)


Plug transformer into GFI protected 115V outlet and check to ensure all lights are illuminated, if any lights have not illuminated unplug transformer and check connections at post cap light and underneath the deck where the In-Line Connector is located. Once all lights are working properly securely attach caps to the post.

Any Light Configuration Using 12-2 Gauge Perimeter Wire


Installation Guidelines

Lighting Components


In-Line Connector

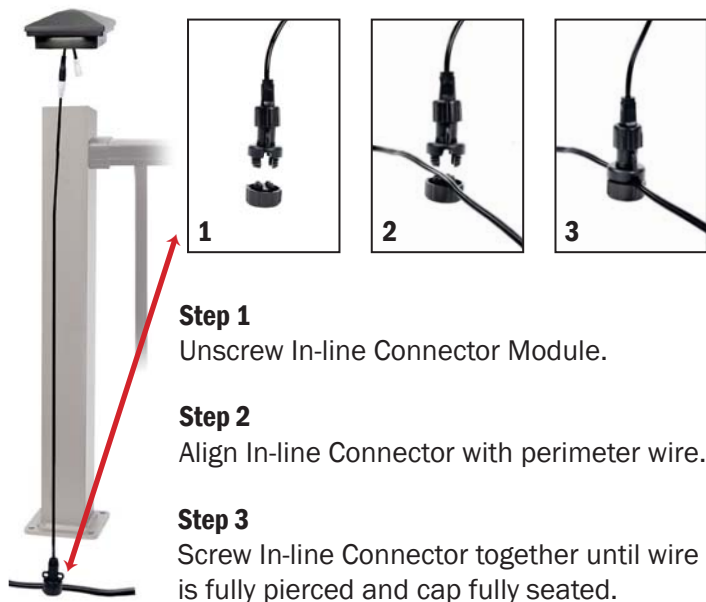

Post Cap

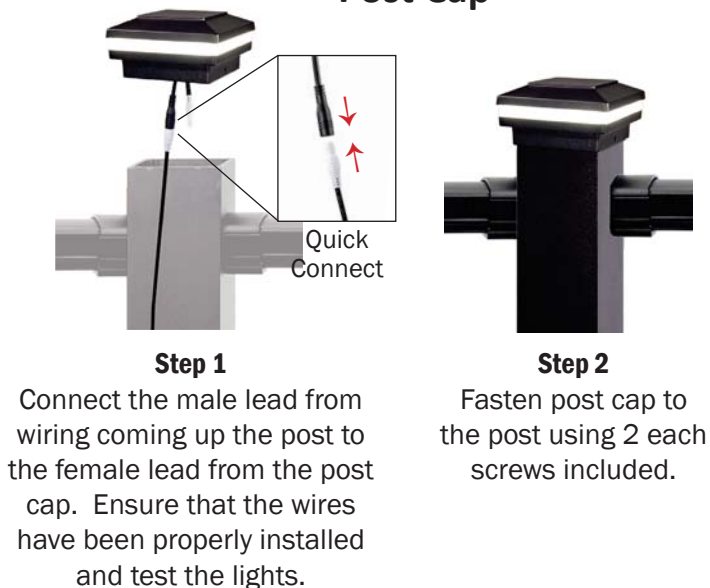

Power Supply Diagram

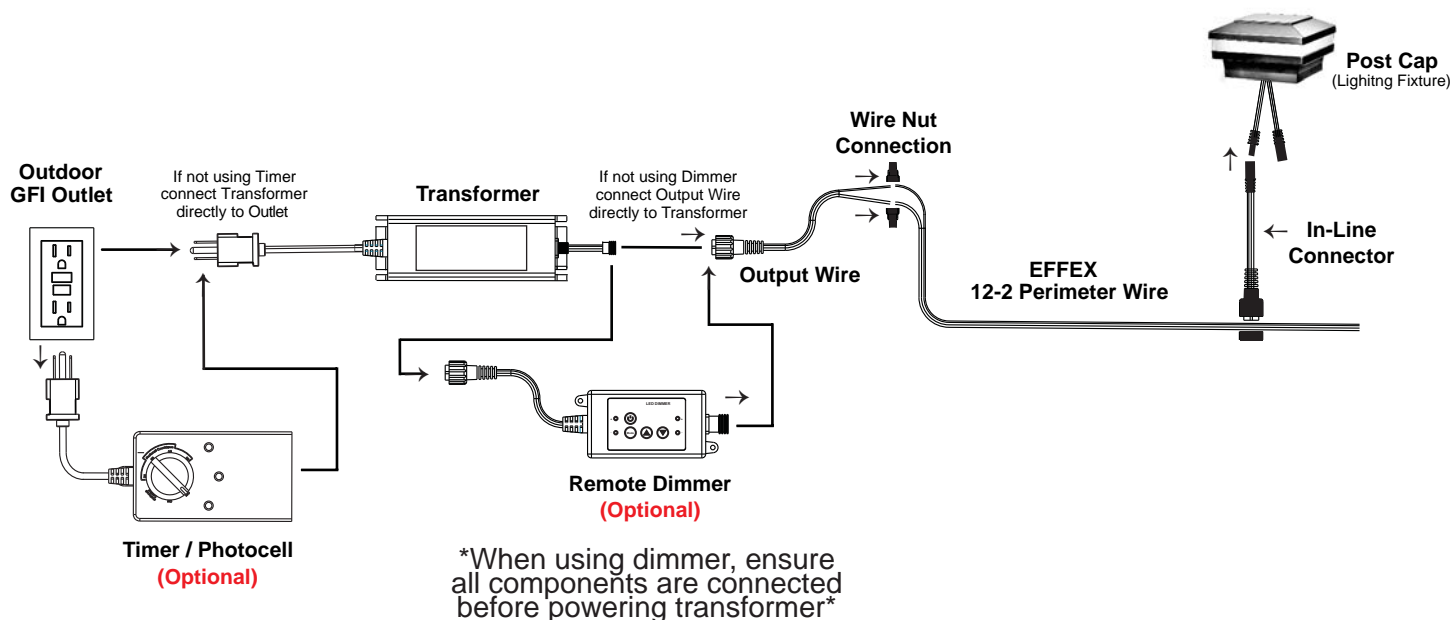

Vertical Post Light

Installation Guidelines

It is the responsibility of the installer to meet all code and safety requirements and implement the appropriate installation techniques for each situation. DekPro Manufacturing or it's distributors shall not be held liable for improper or unsafe installation.

Required Materials: Phillips head screw driver, drill, #2 phillips drill bit, 1/2" drill bit, pencil, and eye protection.



Step 1

Remove 2 ea. screws from bottom of light to dis-assemble fixture for installation.



Step 2

Locate and attach backer plate to post using 2 ea. self-drilling screws. Ensure light is plumb and centered



Step 3

Drill 1/2" diameter hole to allow for passage of Quick Connect wires. Clean metal shavings from fixture.



Step 4

Pass wires through the hole and fish up the post to connect to perimeter wires. *Use of a fish tape or similar item may be useful.*



Wiring diagram

Shown with optional post cap light.



Step 5

Slide vertical post light cover onto the backer plate until fully seated. Re-install bottom screws to secure cover in place.

Recessed Stair Light

Installation Guidelines

It is the responsibility of the installer to meet all code and safety requirements and implement the appropriate installation techniques for each situation. DekPro Manufacturing or it's distributors shall not be held liable for improper or unsafe installation.

Required Materials: Drill, 1" forstner drill bit, pencil, tape measure and eye protection.



Step 1

Determine location of recessed stair light and mark for drilling.




Step 2

Drill 1" diameter hole through riser for recessed light using 1" forstner drill bit.



Step 3

Feed Quick Connect wires through hole. Ensure that light orientation is correct and press light until fully seated.

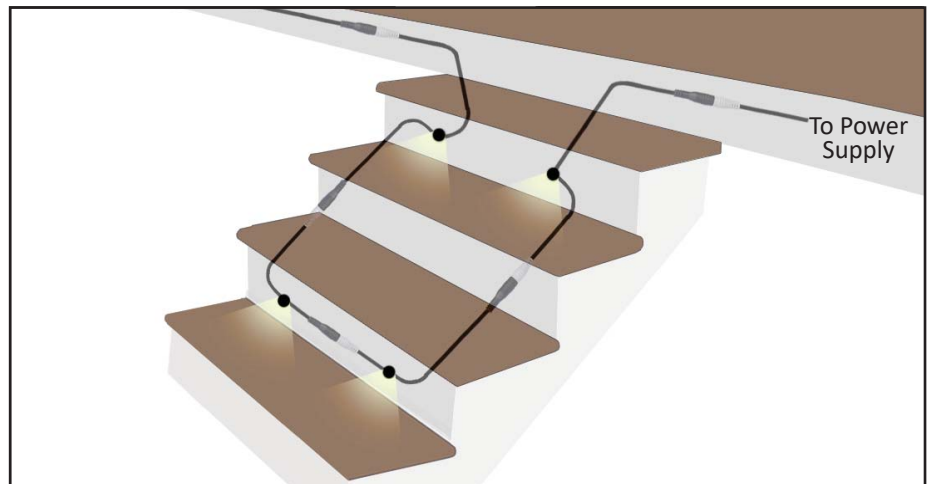


Step 4 - Wiring diagram

Connect lights together. Each recessed light comes with 2 ea - 3' Quick Connect leads to allow for easy wiring. Connect to wire from power supply and then connect lights to one another.

Remote Dimmer

Installation Guidelines

Dimmer Module

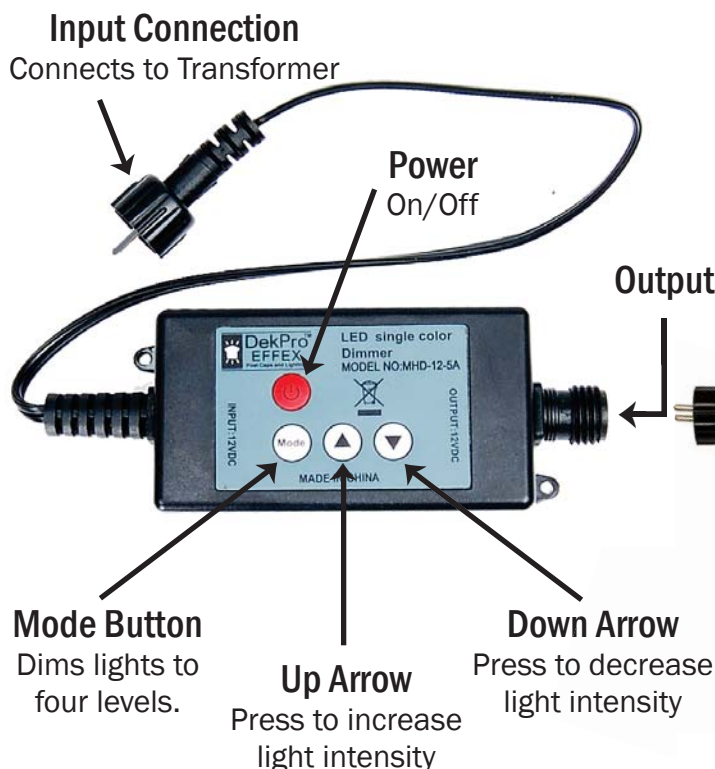

Caution: When using dimmer, ensure all components are connected before powering transformer

Remote for Dimmer



Remote Programming Instructions


1. Make sure dimmer is plugged into the transformer and that the light plugged into the dimmer are on.
2. With the lights still on, unplug the transformer from the outlet.
3. Allow the lights to shut off
4. Press and hold the up and down arrow buttons on the remote.
5. While holding those buttons, plug the transformer back into the outlet.
6. The lights will flash quickly once.
7. Release the up and down arrow buttons.
8. Press the power button on the remote once.
9. The lights should shut off. If the lights shut off after pressing the power button press the power button a few more times to confirm that the lights turn on and off. Your remote is programmed, enjoy.
10. If the lights do not shut off after pressing the power button, repeat steps 1 - 8.
11. If after repeating steps 1 - 8 and pressing the power button on the remote does not shut off the lights, try replacing the battery and repeat steps 1 - 8.
12. If after replacing the battery and repeating steps 1 - 8 and the remote still does not turn the lights off contact DekPro Manufacturing or its distributors at 800-335-5909

Unlit Post Cap / Warranty

Installation Guidelines




DekPro™ EFFEX Post Cap Installation Guide

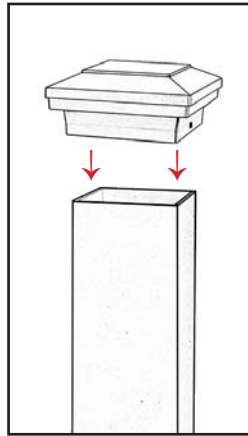

Step 1

Test fit post cap to post to ensure that the cap is the proper size for the post.

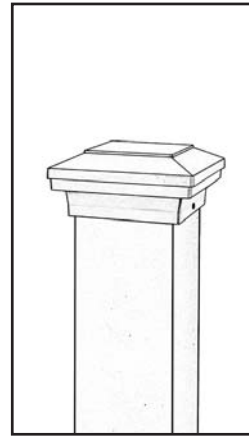

Step 2

Fasten post cap to the post using 2 each provided screws or silicone adhesive.

Warranty Information

Powder Coat Finish:

10 Year Warranty against cracking or peeling.

LED's and Lights:

10 Year Warranty when installed with DekPro Manufacturing brand EFFEX transformers.

No warranty when used with any other power source.

Transformers:

3 Year Warranty When Used Exclusively For DekPro EFFEX Lighted Products.

1 Year Warranty from date of purchase when used with non- DekPro EFFEX products.

Controllers

1 Year Warranty When Used Exclusively With DekPro EFFEX Transformers.

No warranty when used with any other brand of transformer.

Warranty:

Should any product fail DekPro EFFEX reserves the right to request return of the product, transportation costs pre-paid, for the purpose of inspecting the product to determine validity of the claim.

Upon validation of a claim by DekPro Manufacturing replacement will be made including transportation costs. Code compliance and applicability for intended use is the responsibility of purchaser.

EXCEPT AS OTHERWISE PROVIDED, DekPro Manufacturing MAKES NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY IS NOT TRANSFERABLE.

Limitation of Liability:

DekPro Manufacturing's liability is discharged upon repair or replacement of defective product. DekPro Manufacturing will not be responsible for cost of removal and re-installation or accidental and consequential damages. Damages resulting from misuse, abuse, alteration, negligence or accidents are not covered under this warranty.



WWW.DEKPROMFG.COM

Marketed and Distributed by:

