

*MOTORIZED VEHICLES*

Version #0521

# BIGFOOT

## HYDRAULIC SYSTEMS

### INSTALLATION & OPERATIONAL USER MANUAL

### Motorized Applications

#### CENTRAL AND QUAD PUMP SYSTEMS



4pt Leveling Motorized Vehicles



**BIGFOOTLEVELER.com**

**Quadra Manufacturing Inc.**

305 US 131 SOUTH

WHITE PIGEON, MI 49099

800-752-9815 (PHONE)

269-483-9636 (FAX)


**UNITED STATES PATENTS**  
#10093286 #10759396 #10821944

**1st Identify your leveling system...** There are two four point system types: central pump (one pump with a manifold and valve assembly to the left of the motor) and the quad pump (four smaller power units). Then follow the manual by looking for titles of your specific system. Start with mounting the cylinders, then tank assembly, install hydraulic hose and wiring harnesses, electrical controls, finally hook to battery, test and bleed lines.




### Automatic System

Automatically levels the vehicle with supreme precision.  
Manual operation feature.  
All-up & Ignition safety feature.  
Emergency Retract operation.  
Lifetime warranty on cylinders.  
Central & Quad Pump Formats.

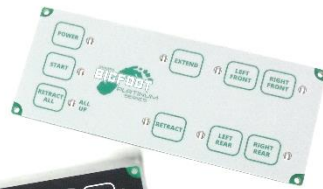


### Platinum System

Automatically deploys all four jacks to level the vehicle from front to rear.  
Manual operation feature.  
All-up & Ignition safety feature.  
Simple, no nonsense design.  
Central Pump System.

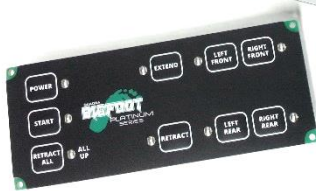

### 2pt Stabilizing Systems

Wireless, Rocker & Dual Controls

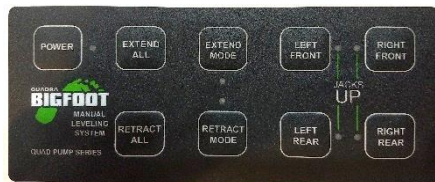

### Manual System

Operates jacks individually or all at once.  
All-up safety feature.  
Emergency Retract operation.  
Quad Pump System.

## Cylinder locations/diagrams by chassis:

Ford E-350/E-450 page: 11, 12, 13, 15... Ford F-450/F-550: page 11, 12, 13, 22

Chevy 4500 page: 10, 11, 13, 15


Ford F59/Freightliner MT45, Food/Box Truck page: 11, 13, 14, 16

Spartan/Ford F53, Class-A Gas page: 11, 13, 16, 17

Diesel Pusher Class-A page: 11, 16, 17

Class-8 Truck Volvo/Peterbilt/Freightliner page: 11, 16, 17, 20

# Automatic Leveling Controls

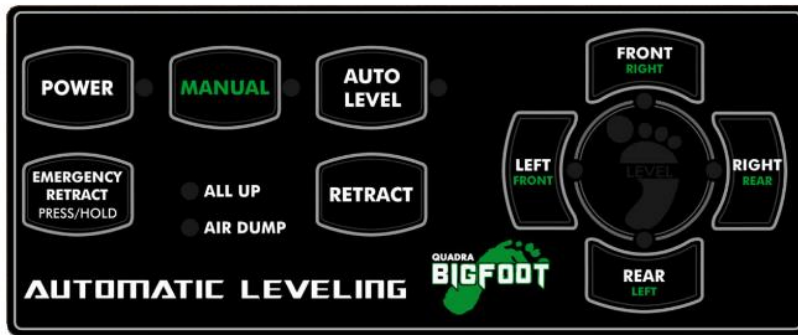

**IF ALL LIGHTS ARE FLASHING, SEE “PROGRAMMING OR ZERO MODE”**

## Operation:

Vehicle ignition/accessory must be OFF in order to auto level or extend the jacks.





Make sure slide outs are retracted prior to operating leveling system to avoid damaging slide outs.

System is not tied to vehicle parking brake.

Panel will shut off automatically after 5 minutes of no use.

Panel will turn on automatically after ignition is turned on, safety feature to monitor that cylinders are retracted.

1. Turn panel/system on and let system run through its diagnostic mode. Lights will flash clockwise around the green foot on right side of panel.
2. To Auto level: When the lights stop flashing, simply press the AUTO button once and release. There can be no movement in the coach during this 60-90 second process, best if operated from outside vehicle or sitting still inside.
3. If choosing Manual Mode, press and hold the MANUAL button until light comes on. Now each button on the right will extend the corresponding cylinder. When in the MANUAL mode, each leveler may be operated individually. FRONT operates right front. RIGHT operates right rear. REAR operates left rear. LEFT operates left front. When using this feature it is important to level the coach by using two levelers at a time or small individual increments to avoid twisting the RV body. For example, right front and right rear, this puts less stress on the frame. To individually retract, press the RETRACT button and the cylinder button simultaneously. Turn panel off when finished.
4. To retract the levelers: Simply turn the panel on and press and release the RETRACT button. The pump will shut off when all four cylinders are fully retracted and the ALL UP light comes on. Always do a visual check to verify all four cylinders are completely retracted. If one or more cylinders are not fully retracted and the ALL UP light is on, press and hold the EMERGENCY RETRACT button until they are all retracted and see troubleshooting section to identify what may be going on.
5. The EMERGENCY RETRACT button, this is used to override the electronic safety features built in the control to retract all four cylinders simultaneously. You will need to press and hold this button until all four are retracted completely, once released the panel will shut off. As long as there is enough voltage in the house batteries to turn the motor, this button will retract the cylinders.

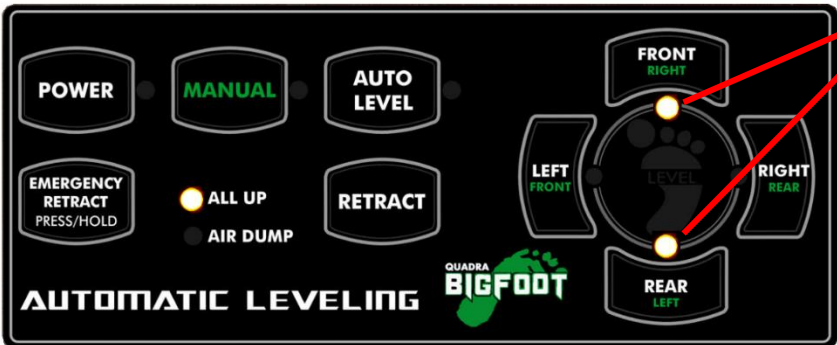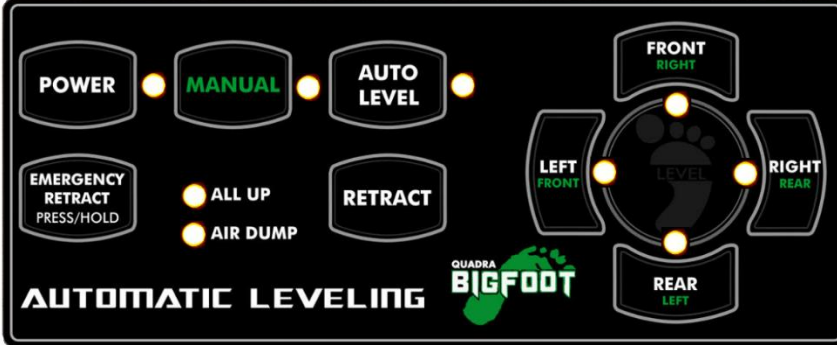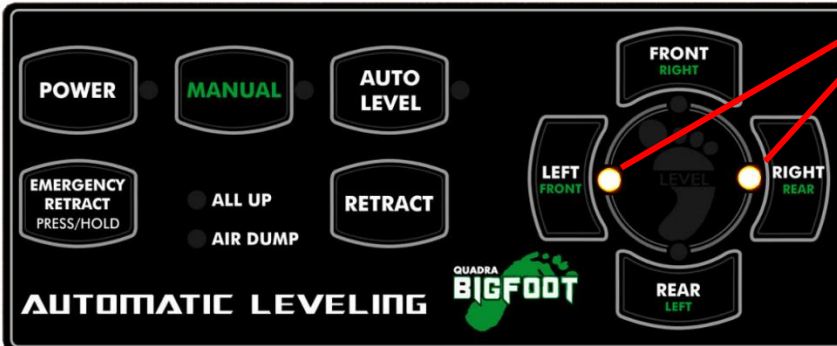	<p><b>FRONT RIGHT &amp; REAR LEFT LIGHTS FLASHING, THIS MEANS LOW VOLTAGE TO CONTROLS, PANEL INOPERABLE EXCEPT EMERGENCY RETRACT, SEE “LOW VOLTAGE CODE” ON NEXT FEW PAGES.</b></p>
	<p><b>ALL LIGHTS ARE FLASHING, THIS MEANS PANEL IN ZERO OR PROGRAMMING MODE, SEE NEXT PAGES. SOME FUNCTIONS INOPERABLE UNTIL OUT OF THIS MODE. CAN PRESS EMERGENCY RETRACT TO QUICKLY EXIT.</b></p>
	<p><b>LEFT FRONT &amp; RIGHT REAR LIGHTS ARE FLASHING, THIS MEANS SYSTEM TIMED OUT, STROKED OUT, OR HAD MOVEMENT DURING AUTO LEVEL. PRESS RETRACT. SEE “TIMED OUT CODE” ON NEXT PAGES.</b></p>
	<p><b>IF ONE OR MORE OF THESE LIGHTS ARE FLASHING IN ANY ORDER OTHER THAN LISTED ABOVE, NOTHING IS WRONG. THEY ARE INDICATING THE LOW POINTS OR “LEVEL STATUS” OF THE VEHICLE.</b></p>
<p><b>IF “AIR DUMP” LIGHT FLASHING...</b></p>	<p>STORING PROGRAM, WAIT FOR BIGFOOT LIGHT TO COME ON.</p>
<p><b>IF “AUTO LEVEL” LIGHT IS ON...</b></p>	<p>SYSTEM RUNNING AUTOLEVEL PROGRAM, WAIT TO FINISH OR RETRACT.</p>
<p><b>PANEL TURNS ON, WHEN IGNITION TURNED ON...</b></p>	<p>NORMAL, PANEL WILL SHUT OFF 5 MINUTES AFTER IGNITION IS OFF, EXTEND FUNCTIONS DISABLED.</p>




## Programming mode or “all lights flashing on panel”

When all the lights are flashing on the panel, this means the control is in programming or zero mode. This is where the user sets the level program in the controller. When the panel is first installed or hooked to power, it will enter this mode automatically. To quickly get out of this mode (if program has already been set) just press the POWER button or EMERGENCY RETRACT button to shut panel off.


### To Program Level Position

If all lights are flashing move to step 3.

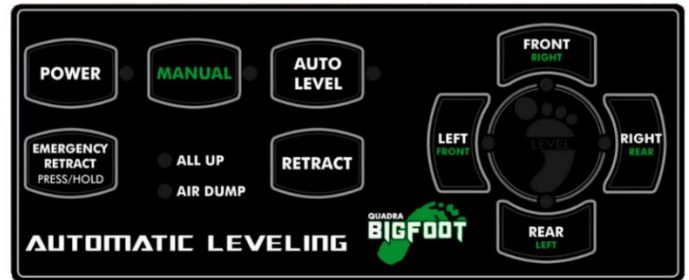

1. Make sure all four cylinders are retracted, if they are move to step 2. If not, turn panel ON, let diagnostic lights flash until they stop (within 30 seconds). Press RETRACT button, when all up light comes, move on.
2. Enter zero or programming mode by turning the panel on, diagnostic lights will cycle, then press FRONT RIGHT (top button over Bigfoot logo) button five times, then REAR LEFT button five times (not too fast or too slow, standard second count).
3. All lights will come on, you are in zero mode. Press and hold each cylinder button (Ex. FRONT RIGHT) individually until the cylinder touches the ground, then STOP. Run the next cylinder, press and hold, stop once it touches the ground.

*Keep in mind to avoid twisting RV body with individual adjustments.*

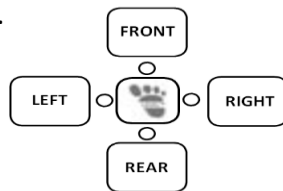

**FRONT** indicator operates the right front.

**RIGHT** operates the right rear.

**REAR** operates the left rear.

**LEFT** operates the left front.

4. Once all four are on the ground, you must choose a level reference point. This is where the controls will level to on your vehicle. Examples include corner of counter top near controller, floor just in front of step, etc. But you must only choose one spot. Place a bubble level on the reference point of the vehicle you want to level, Example: floor in front of the entry step. Place level so it is reading front to rear.
5. Find the low end and extend the corresponding cylinders individually until the bubble reads level front to rear, you can do small increments individually or in pairs, make sure you let coach settle before continuing to lift (coach will shake). Once bubble level is level front to rear do the same for left to right. Keep in mind, when programming you want to use as little of cylinder travel as possible.
6. Once level in both directions, verify that all four cylinders are touching the ground, if not bump a cylinder, re-check level. If satisfied, next step.
7. Press the RETRACT button three times, this stores the program. Wait until the Bigfoot icon LED comes on (AIR DUMP light will flash, just wait). Once the foot light comes on, press RETRACT to retract cylinders. If you do not want to store program, just turn panel off or press EMERGENCY RETRACT.
8. Panel is now programmed, now every time you press AUTO it will come to this position. Can always be re-programmed. If loss of power occurs or sensor is unplugged, sensor will still have program stored.

## **ALL UP Light**

Light comes on when all four limit switches have been made. This is a normally closed circuit, limit switch mates and circuit opens, ALL UP light comes on. Wired in series so light will go off if only one switch is not made.

## **Bigfoot Light**

Shaped like a footprint, it comes on solid when auto level process is complete or successful. Light will flash when coach is “near” level position, however auto level program may not be finished yet.

## **Audible Alarm**

Alarm will sound (sounds like seat belt alarm) when the ignition or accessory is on and there is no ALL UP light. This means that one or more of the cylinders are not fully retracted. If this happens, press and hold EMERGENCY RETRACT until the alarm goes off or shut ignition off and retract the system. If the alarm does not shut off, this could mean that one of the footpads came up at an angle (pivoting dome design can interfere with solid connection if not straight) or that one of the pins are bent and are not making contact with the switch. Extend each cylinder individually, and inspect, then press RETRACT (not in manual mode) so that all cylinders retract. Check for ALL UP light. If not, repair switches by removing with 7/8” wrench and cleaning with WD40 (spherical ball switch), then try again.

To temporarily get rid of alarm: After retracting each cylinder with emergency retract button, temporarily disconnect (unplug) two spade connectors on switch at particular cylinder (located near footpad) OR unplug control panel or leveling sensor to eliminate alarm from beeping as long as you have confirmed cylinders are retracted. Then repair switches and return to proper installation. This is for disabling alarm only while camping, Quadra does not recommend putting the vehicle in gear with this setup.

## **Pump does not shut off when cylinders are fully retracted...**

If you have an ALL UP light and pump will not shut off once light is on, then there may be damage to the harness during installation (screw or p-clip smashing wires causing short). Send replacement harness or inspect harness along subframe beams underneath coach (we have found this issue before with the p-clips smashing harness or screwed into looming/harness). User can shut pump off by pressing EMERGENCY RETRACT.

If you do not have an ALL UP light, then a limit pin is bent or damaged not making contact with a limit switch, check pins near footpads on each cylinder. If one is bent, they can be straightened, remove with 7/8” wrench. OR for temporary solution the limit switch itself can be unplugged (two spade connectors) and use EMERGENCY RETRACT to completely retract all four cylinders.

## **One or two cylinder lights on right side of panel on or flashing...**

**FRONT RIGHT, RIGHT REAR, REAR LEFT, LEFT FRONT:** any one or two of these buttons operate corresponding cylinders, the lights however will indicate the low points of the coach at all times, so when one or two of them are on or flashing, the control is just indicating to the user where the low point is. However, if FRONT & REAR or RIGHT & LEFT flash this means there is an error code (see troubleshooting) as opposite ends of the coach cannot both be the lowest points.

## Panel Troubleshooting

The FRONT, RIGHT, REAR or LEFT cylinder lights are flashing. This is indicating the low points of the coach as it sits, nothing is wrong with the control; it is constantly monitoring the level status of the vehicle.

Our panel will shut off by automatically after five minutes of no use. Panel will also turn on automatically when the ignition turns on, this is a safety feature monitoring the cylinder position (making sure they are retracted) and is only drawing power for the two LED's. The panel will shut off again after five minutes by itself after no use or ignition shuts off. With the ignition on, the panel power lights can be shut off, but the ALL UP light will stay on for safety.

**LOW VOLTAGE CODE: FRONT and REAR lights flashing**, control is seeing low voltage (less than 9.5-10v). Shut the panel off. Charge the house batteries, when they supply enough voltage, try system again (at least 15 minutes). If low voltage code comes on again, or never goes away, you may have to unplug the interface harness (between the panel and sensor) at the back of the control panel or the front of the sensor to clear the error code. Repeat battery charging. See location chart on last few pages next to picture of leveling sensor.

**TIME OUT CODE:** When AUTO leveling, if the **LEFT and RIGHT lights are flashing**, the system timed out, or there was movement in the coach during auto leveling or the cylinders ran out of stroke in order to reach level (re-park or add blocks to low corner cylinders).

If there is **no ALL UP light**, and the vehicle ignition turns on, the panel's alarm will sound. The alarm cannot be shut off until: The ignition is shut off **or** the ALL UP light comes on. The ALL UP light is tied to each cylinder's limit switches in the wire harness (grounded in-series circuit, normally closed limit switches, once limit switch mates circuit is broken and ALL UP light comes on). If one switch is not made the ALL UP light will not come on. Press the RETRACT button to retract the cylinders, pump will run until the ALL UP light comes on or 2 minutes.

If you get a **false ALL UP light (light on but one or more cylinders not fully retracted)**, check the wire connectors at all the limit switches, they are male and female spade connectors, they may have a poor connection or not plugged in all the way. If the connections are good then there may be moisture/rust in the limit switch or it is defective. Press and hold the EMERGENCY RETRACT button to retract the cylinders and override the limit switches, once button is released panel will shut off. Sometimes the limit switches can be taken off and cleaned, sprayed with WD40. Part #M50103FLAT to order replacement limit switch and pin, need 7/8" wrench only, wires are spade connectors (plug/unplug).

**If you do not get an ALL UP light but cylinders are retracted**, press and hold EMERGENCY RETRACT to see if that works. Otherwise, there could be a limit pin bent or missing/loose footpad not allowing pin to make contact with limit switch. Straighten pin or re-attach a footpad (if missing, disconnect limit switch wires to open the circuit). See Fig.4 for schematic or part #'s. If customer has access to hardware store, a ¼" vacuum cap can be placed under pin to help reach bent footpad. Customer can also disconnect wires on limit switch to open circuit (this will give you a false ALL UP light).

### Limit Switches

We use a mechanical ball switch for our cylinder retract indication. This simple normally closed switch is on a grounded circuit, when the limit switch is made it breaks the circuit (for the light to come on). These switches can get road debris, rust, etc. inside the ball switch itself and make the switch stick. Also the pins can bend from contact with the footpad hitting a curb or parking lot during your drive. These parts are simple in design and replacement and fairly in-expensive compared to competition's internal pressure switch located inside the pump assembly on the manifold buried underneath the vehicle.

### **Panel won't turn on, system won't run, clicking noise, FRONT & REAR lights flash...**

Battery low, panel won't turn on = coach battery, the system relies on the house battery. The battery needs to be nearly 100% charged for the system to work, it doesn't make a difference if the coach is new, that doesn't mean the battery is fully charged or even good. Batteries don't charge instantaneously, so one can't just expect to hook it up to a charger and the system will work immediately, if the battery is good, then the unit might have a ground issue. Auto systems may require user to un-plug/re-plug the interface cable to clear code on panel regardless, newer versions do this automatically and do not need to be unplugged.

### **Most tech support common calls**

Most issues we receive are power related. Always check power and ground wire connections first. Check power level of battery under load (place volt meter on battery then press and hold EMERGENCY RETRACT on control to see if voltage drops).

### **Cylinders not lifting or holding pressure**

This means there is more than likely air in the system (not bleed during installation). Two methods, easy method is to enter manual mode and completely extend all four cylinders to full extension and leave for an hour, then retract, wait another 30 minutes before operating again. If this does not fix the issue then the **secondary bleeding procedure** must be done, see below for instruction.

### **Cylinder will not operate, extend or retract...**

Attempt to bleed system first, verify that it will not operate in either direction. Then check all wires at the leveling sensor to make sure they are inserted properly in the plug at the back of the sensor (wires may be loose in connector). If this is all good, then the corresponding valve/coil may be defective, in tank assembly check valve ground wire (to solenoid mounting bolt) and wire connection to wiring pigtail. If valve bad, part #M35008, take care replacing do to ease of crushing valve assembly on re-installation.

### **Secondary air bleeding process**

If there is still air in the system, a more strategic method may be required. Loosen all four extend hose fittings (15mm wrench) on the jacks (located near the top of each cylinder), enough that fluid and air can escape. Enter manual mode on panel (press and hold MANUAL for 3 seconds until light comes on). Press and hold each cylinder until solid fluid comes out of each fitting. Tighten fittings and repeat for retract hose fittings to ensure all air is out, to retract cylinders in manual mode, press each cylinder and the RETRACT button simultaneously. Re-tighten all fittings and clean up mess. This method can also be done by placing each line in a bucket to minimize mess afterwards. *In some instances, the front jacks may need to be dis-mounted from underneath the cab to access the top extend ports during the bleeding procedure.*



## Installing Platinum Control Panel (“PC” part #'s)


### Installing the Platinum Control Panel

Plug the 14-pin & 6-pin from the harness into the back side.

There is a yellow wire coming from the 6-pin that needs to tie into an ignition hot wire from the vehicle (page 18).

The panel may be mounted on any flat surface, typically on vertical cabinet wall near entry door of coach (near other controls, switches, etc.) If you cannot find a location, we do offer a handheld plastic box that can be ordered separately (#M13601 from Quadra Mfg.) the panel would fit inside Quadra’s plastic box assembly with the harness loosely coiled underneath the driver’s seat for convenience.

Fasten panel with four supplied small black #4 phillips screws (5/8” long).

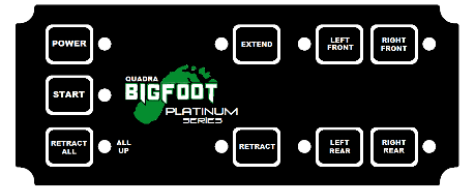

**Optional safety feature for Platinum panels,** The manual EXTEND mode is active while the ignition is on (version A Platinum panels only). So one could turn the panel on, press EXTEND, and would have to press & hold one of the cylinder buttons to extend the corresponding cylinder, this could be possible while driving down the road. Safety option: Install an in-line on/off toggle switch to shut power off to the panel to prevent operation while driving down the road from children, etc. Find the red wire from the 6-pin harness that goes to the back of the panel. Cut and splice the included wires to route to the toggle switch that should be located near the Platinum panel for convenience.

### Operation on next page, but here are some Platinum Panel operational notes...

The START function (jacks automatically deploy) is disabled when the ignition is on.

The panel will shut off automatically after 10 minutes when there are no buttons pressed.

The panel will turn on automatically when the ignition is on, and will not power off until the ignition is off.


The panel will shut off automatically after 10 minutes from the ignition is shut off.

If all the LED’s flash for one second and the panel turns off, the panel is receiving less than 9.5 Volts and you need to charge your house batteries.

## Platinum Leveling Operation (“PC” part #'s)

---

Panel also available in black, NOTE: 1. Panel turns on when ignition turns on to inform user if jacks are up or down (alarm sounds). 2. Due to another safety feature, to operate the “START” and “RETRACT ALL” buttons, press and hold the button for 1-2 seconds then release.

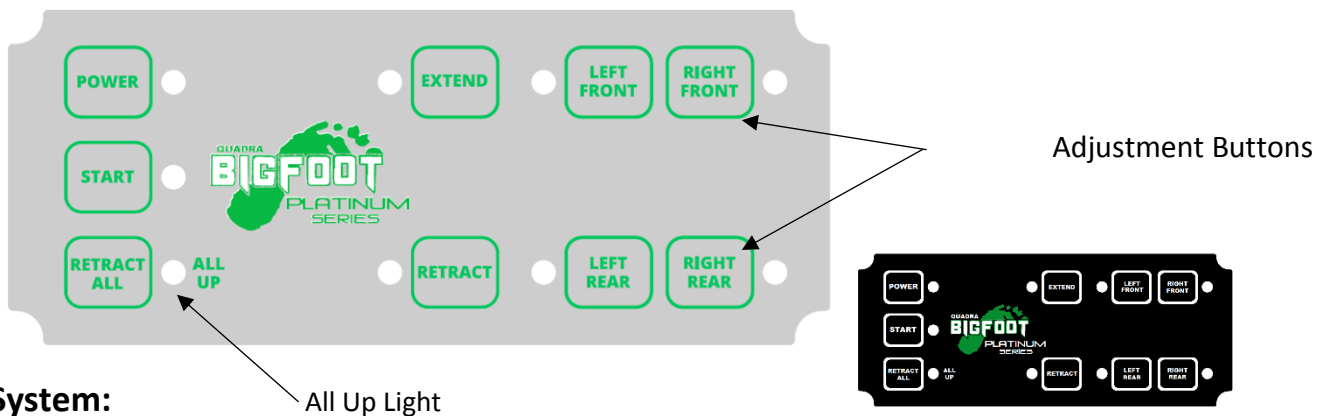

### Extend System:

1. Press the **Power** Button (Red LED will come on constant).
2. Press the **Start** Button, this brings the front of the vehicle nearly level to the rear and stabilizes the rear as well. (LED will come on until program is finished, pressing any button during operation will cancel program, Vehicle Ignition must be OFF).
3. Done! Vehicle is now stabilized, *if* additional adjustments are desired:
  1. Press **Extend** (now in “Extend Mode” LED will come on). Release button.
  2. Press & Hold the Adjustment Button for the designated corner(s) of the vehicle that is low or high. (Ex. Right or Curb side is low, press & hold RIGHT FRONT individually or RIGHT FRONT & RIGHT REAR simultaneously until level, driver’s side is considered the left side for reference.).
4. **Power Off** (panel will automatically shut off after 10 minutes of no activity).

### Retract System:

---

1. Press the **Power** Button (Red LED will come on).
2. Press the **Retract All** Button until the green “All Up” light comes on constant.  
(This process will take up to 60 seconds. After 60 seconds the green light will flash, this means that one or more of the jacks did not fully retract, see troubleshooting) If you have a false all up light (one or more jacks are not fully retracted and the light is on, you may have defective limit switch) to retract override, press RETRACT, then press & hold the corresponding button for that particular jack (version B or later only).


***Always do a visual check to verify that all the jacks are fully retracted prior to operating the vehicle.***

# Manual Leveling System Controls

**Extend All:** Press & hold to extend all four jacks simultaneously.


**Retract All:** Retracts all four simultaneously, Always visually check that all jacks are fully retracted prior to operating the vehicle. If you have an all up light, but see one of the cylinders not fully retracted, enter Retract Mode, and operate that cylinder (see instructions below).

**For individual operation:** Press and release Extend Mode button, press and hold corresponding jack you want to extend. Do the same for retract function. In case of limit switch failure or "false all up light" (jack not fully retracted but it's "up" light is on)... Press Retract Mode and run that particular jack to override the limit switch, then replace switch and pin.

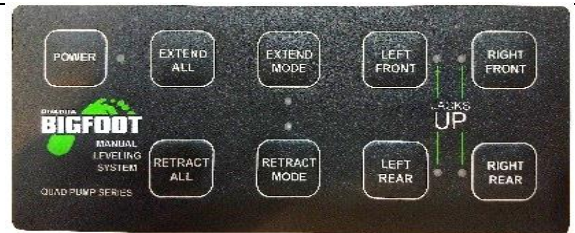

Example cylinder mount & bracket location on Chevy chassis...


## CHEVROLET 4500 EXPRESS CUTAWAY 4 POINT WELD-ON BRACKET LOCATIONS FOR JACKS

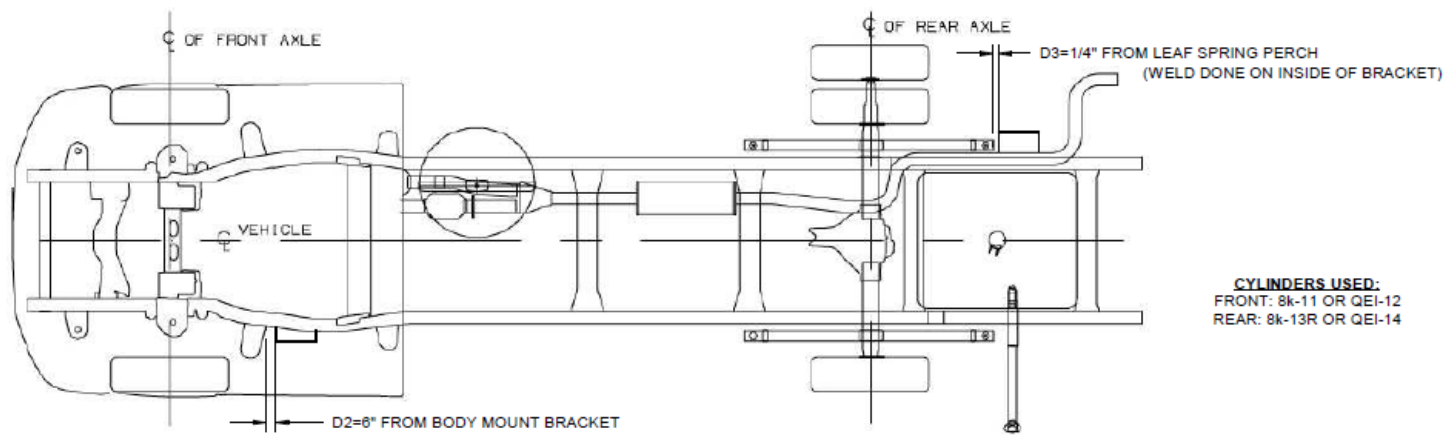

**CYLINDERS USED:**  
FRONT: 8k-11 OR QEI-12  
REAR: 8k-13R OR QEI-14

D1 = DISTANCE OF FRONT JACK BRACKET TO THE TOP OF THE VEHICLE FRAME  
D2 = DISTANCE FROM FRONT JACK BRACKET TO REAR FACE OF BODY MOUNT BRACKET.  
D3 = DISTANCE FROM REAR LEAF SPRINT PERCH TO REAR JACK BRACKET

ALL BRACKETS SHOULD BE MIRRORED FROM EACH OTHER FROM PASSENGER SIDE TO DRIVER SIDE.  
THESE MEASUREMENTS ARE BASED ON TYPICAL QUADRA INSTALLATION OF FOREST RIVER UNITS.

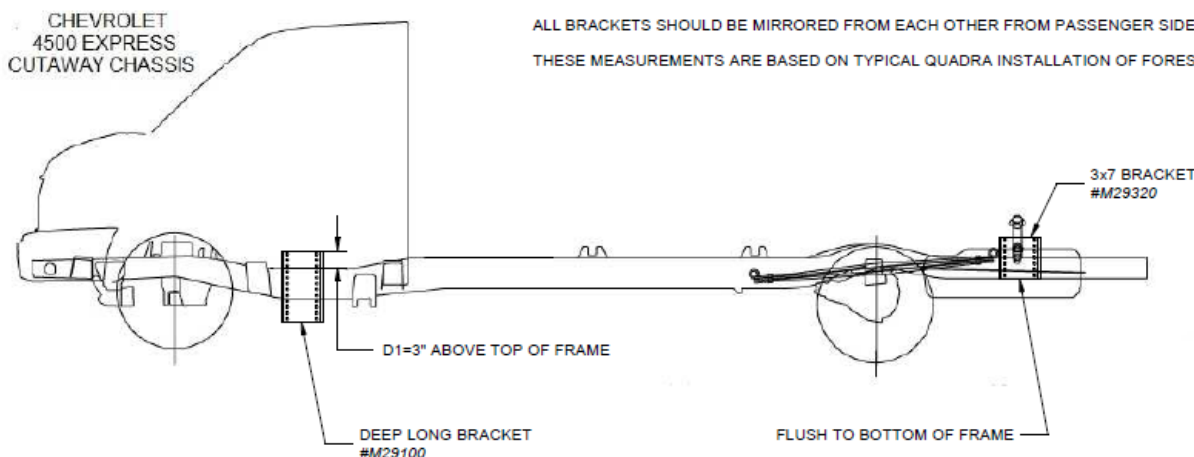

Ford E-450/350 page , Class-A Gas & Diesel Pusher page 18

# Cylinder Installation & Assembly

## Mounting the Cylinders

Pre-assemble jack prior to hanging on vehicle in specified location.


- Attach foot pad with  $\frac{3}{4}$ " thin jam nut using a 1  $\frac{1}{16}$ " socket and impact wrench. **Clockwise ONLY.**
- Remove port plugs with  $\frac{3}{16}$ " allen wrench.
- Install supplied JIC elbow fittings to the bottom & top ports with  $\frac{9}{16}$ " wrench.
- **DO NOT** install the extend hose to the top port on central pump systems yet, this will be done later on in installation (due to the length of hose they must go through a bleeding process).
- Place  $\frac{1}{4}$ " clevis pin in limit switch barrel then insert threaded limit switch with  $\frac{7}{8}$ " wrench (see wiring section later on in booklet).
- For jack locations see diagrams on the following pages, but typically the front jacks should be under the cab and the rear jacks should be within 60" behind the rear axle.
- Hang jack using at minimum of four  $\frac{7}{16}$ " or two to four 1/2" Grade-8 bolts, hex nuts & lock washers.
- Typical cylinder ground clearance (ground to bottom of footpad) should be between 6" and 9" for optimum lift and road clearance (applications vary).

*The cylinder shown to the right may be different from the cylinders that came in your vehicle specific kit, Ex. Port rotation, length, bracket style, mounting locations, etc.*

**See page 9.**

If your kit came with  $\frac{3}{4}$ " square cross-braces, they are required for installation on Mercedes systems and Ford or Chevy inside mount applications.


Hydraulic lines are universal lengths and fit the majority of applications, however if they do not fit your exact model you will need to call and place an order for longer lines.

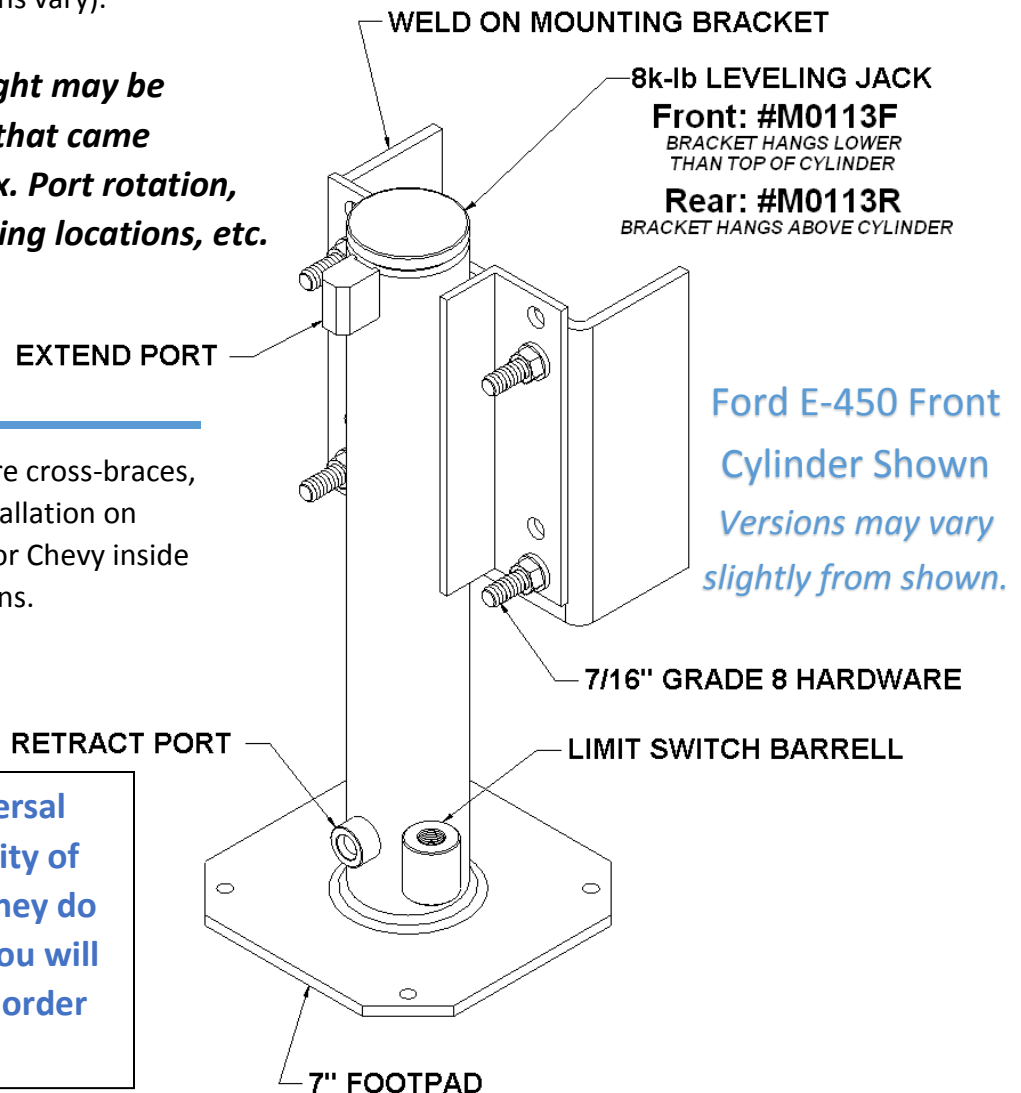



# INSTALLATION ON FORD E-450 CHASSIS

## FRONT ASSEMBLY UNDER CAB

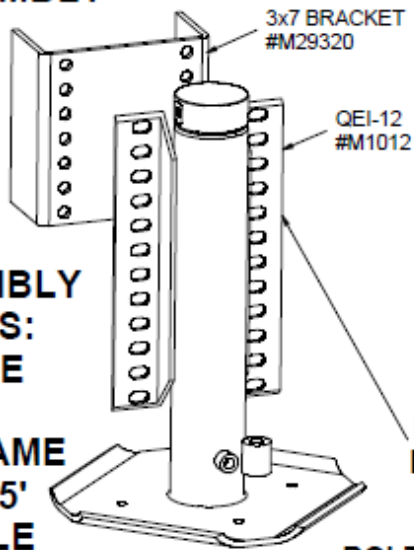

## REAR ASSEMBLY TWO OPTIONS: INSIDE FRAME RAIL OR OUTSIDE FRAME RAIL WITHIN 5' OF REAR AXLE

7.25"

FRONT  
MOUNT


**BOLT TANK HERE**

FRONT TANK ASSEMBLIES CAN BOLT DIRECTLY TO VEHICLE FRAME BY UTILIZING FACTORY HOLES OR DRILLING NEW HOLES (7/16" HARDWARE).

REAR TANKS MAY BE BOLTED DIRECTLY TO CYLINDER BRACKET OR USE THE OTHER BRACKETS SUPPLIED WITH KIT TO MOUNT THE TANKS.

EXAMPLE: USED INSIDE MOUNT BRACKETS FOR JACKS,  
USE REMAINING OUTSIDE MOUNT BRACKETS TO MOUNT TANKS

FORD  
FACTORY  
BODY  
MOUNT

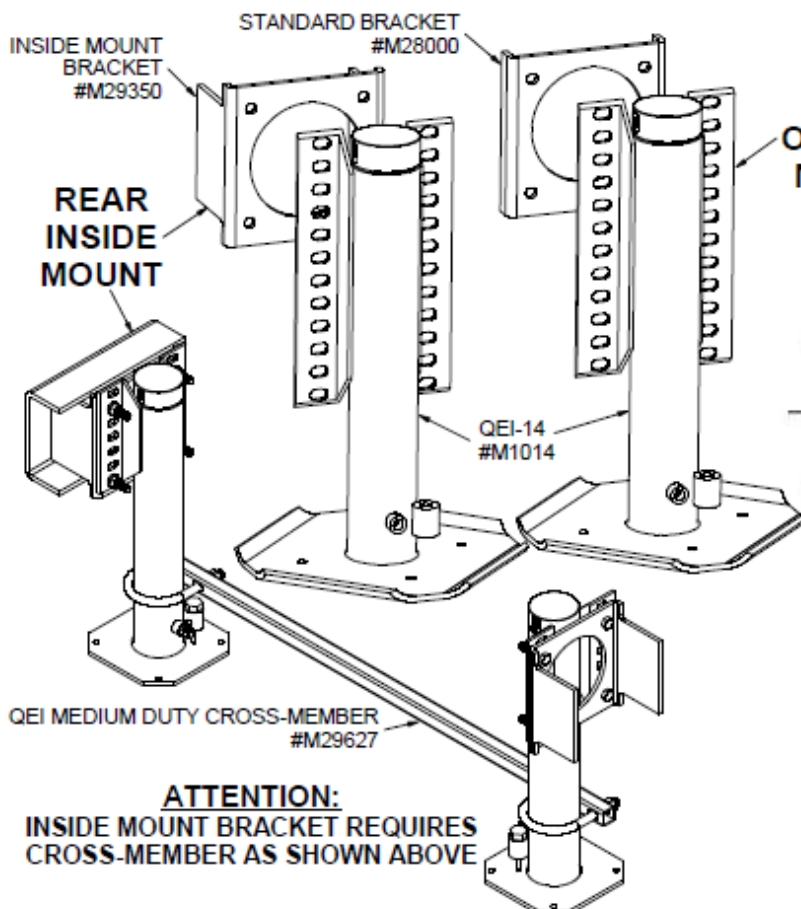

REAR  
OUTSIDE  
MOUNT

REAR  
OUTSIDE  
MOUNT


REAR  
INSIDE  
MOUNT

Cylinders shown above may vary from shown above: Typically Front: #M0213F, Rear: #M0213R

## Class-C Cylinder Identification:


### #M0211

15" long retracted  
Chevy 4500 Front  
Ford E-350 Front

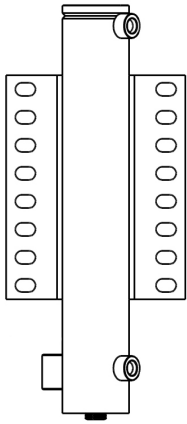


### #M0213-F

17" long retracted  
Ford E-350 Front  
Ford E-450 Front

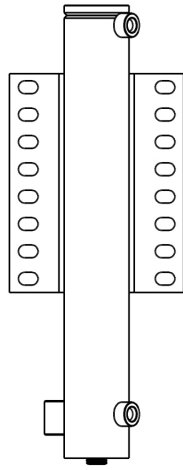







### #M0213-R

17.5" long retracted  
Ford E-350 Rear  
Ford E-450 Rear

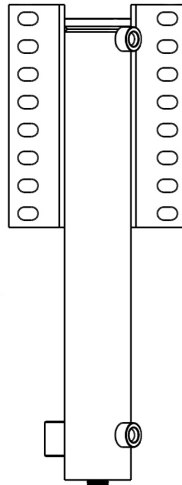

**8K SERIES**

**12K SERIES**

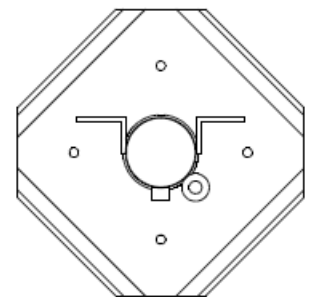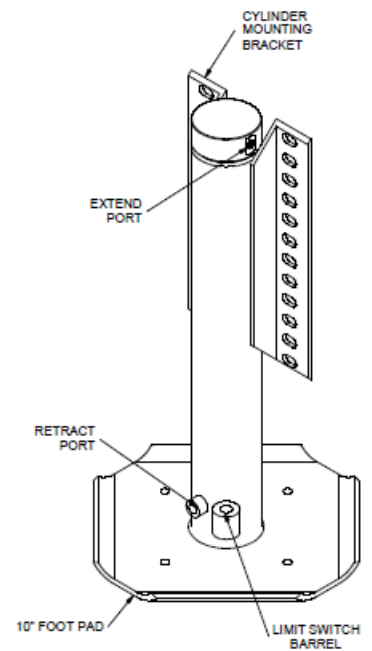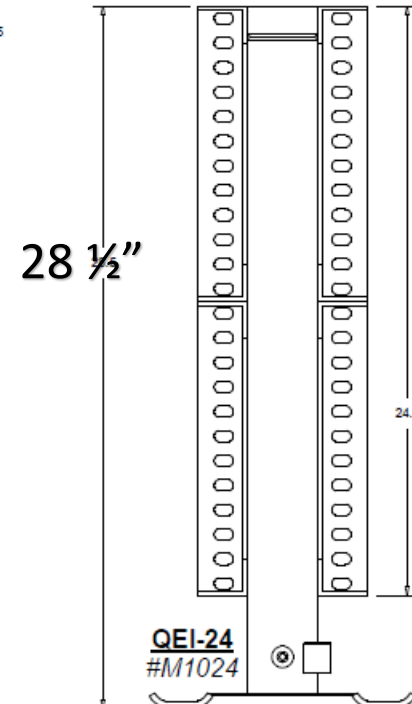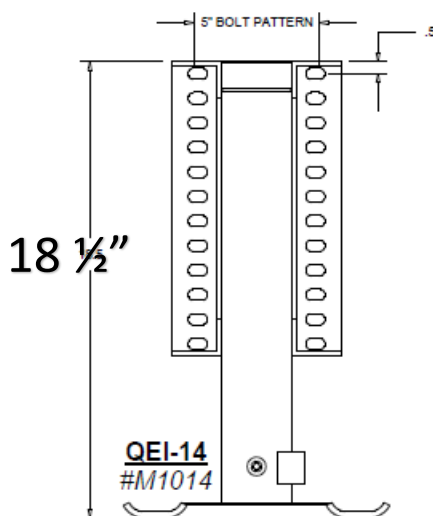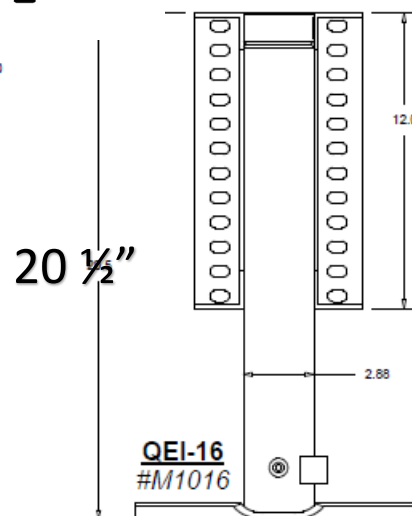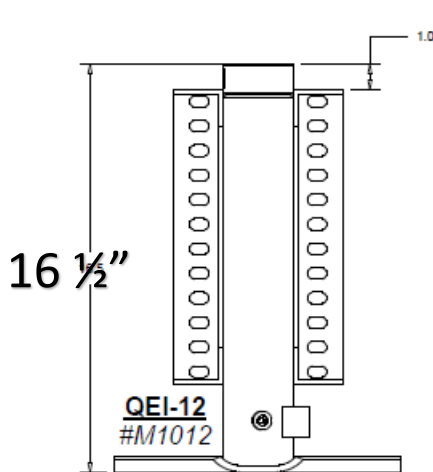

# **NOTE: Installations may require modifications...**

Certain vehicles & RV models may require modifications to the following: Weld-on brackets, Extending limit switch wires & battery cables, Re-routing vehicle exhaust and RV plumbing or wiring, Modification to sub-floor brackets or joists, Storage boxes & Floors.

Make sure the proper hardware is used in the proper locations. Everything should be attached and level prior to tightening. All hardware to be fastened to following torque specs:

1/2" (5 1/2" & 9" Bolts) = Torqued to 80 ft/lbs.


7/16" (1 1/2" Bolts) = Torqued to 70 ft/lbs.

3/8" (U-Bolts) = Torqued to 45 ft/lbs.

3/4" (Nuts for Foot Pads) = Impact must be used and one to two threads should be visible past nut.

## **Ford F59 or Freightliner MT45 (Food or Box Truck)**

Front cylinders may have room in front, behind or rear of step on driver side. Passenger should be close to mirrored in position, can be up to 2' offset. Rear cylinders typically just behind rear axle. Ground clearance should be 8-10" from bottom of cylinder.

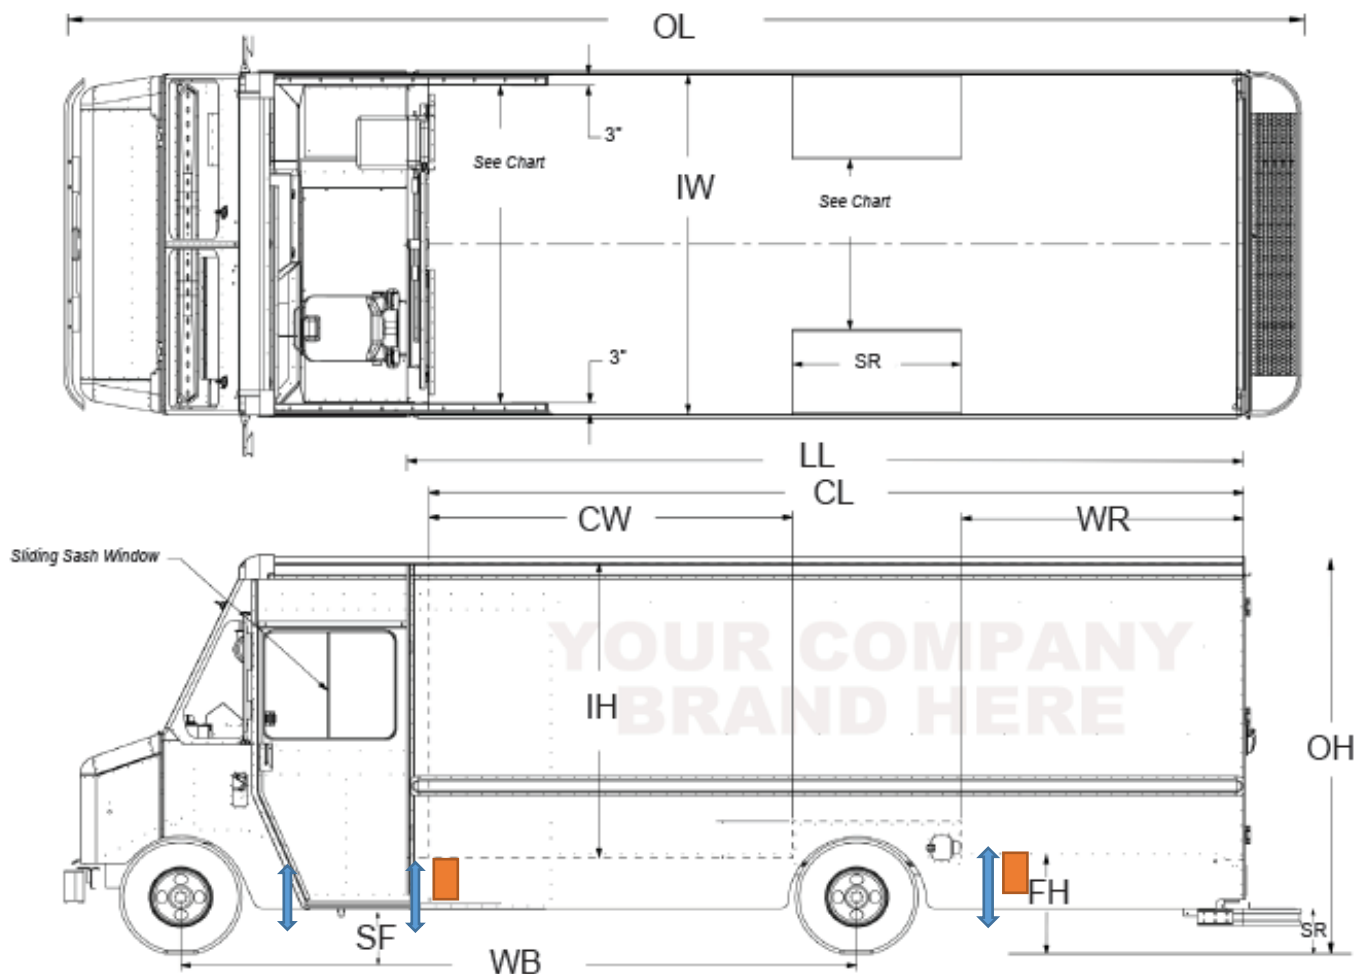

Not all RV's are manufactured equally.

## Attention:


Modification to your RV or vehicle's storage boxes, body, floor, exhaust, interior, relocation of components, etc., may be required for the system installation.

Longer or shorter hose lengths, extension of wiring, additional hardware, modifications or custom brackets or methods of attachment to the vehicle frame may be required for your particular installation...

## Typical class-C mounting locations

Possible Cylinder Locations (Blue)


Possible Pump Locations (Orange)

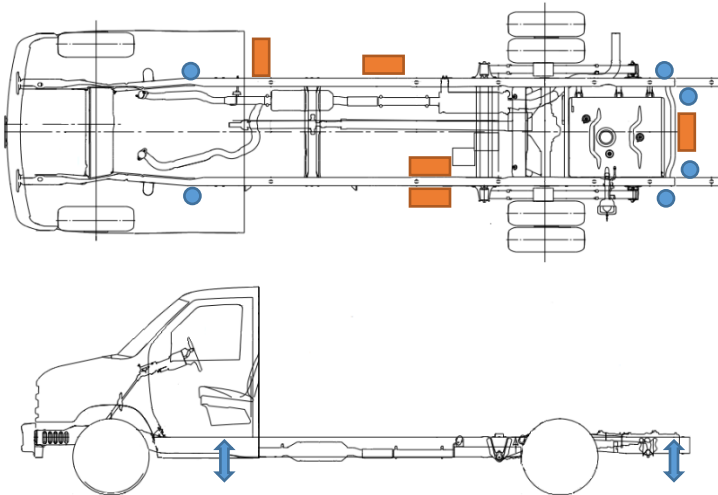

#M2968K

8k Adjustable Crossbrace

Same 3/4" Square Tube (2) Required  
(2) 3/8-16 G8 Hex Bolts 2.5" long  
(2) 3/8" U-Bolts for 2" pipe  
(6) 3/8" Lockwashers  
(6) 3/8-16 Hex Nuts

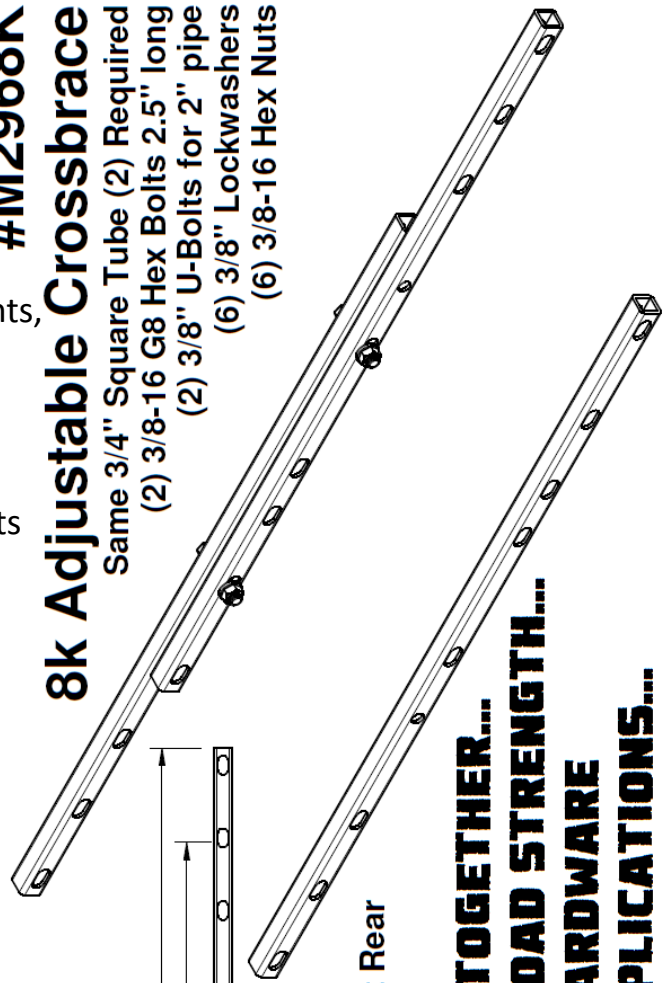

Applications:

Ford E-450 Inside Mount Rear,  
Sprinter Channel Front, Sprinter Channel Staggered/Inside Mount Rear  
Sprinter Universal 4pt 8k15 Rear (replaces crossplate)

**-BOLTS PASSENGER & DRIVER CYLINDERS TOGETHER...**  
**-ADDS STABILITY AND ADDITIONAL SIDE LOAD STRENGTH...**  
**-DRILLING MODIFICATION OR DIFFERENT HARDWARE**  
**MAY BE REQUIRED BASED ON CERTAIN APPLICATIONS...**



# CLASS-A GAS OR DIESEL PUSHER (OR SIMILAR CHASSIS)


Ford F53 or F59, Freightliner MT45, Pusher or M2, Cascadia, Volvo, International, etc.

Front cylinders within 60" behind front axle, closer the better. Rear cylinders within 60" behind rear axle, closer the better for best departure angle. Mount with 9-10" ground clearance (bottom of foot to ground). Make sure maximum weld is applied to frame.

Hook pump power 12v (4 gauge cable supplied) to chassis battery for preferred power supply. Apply ground cable to each pump unit (see page 20 & 23).


Prior to leveling vehicle, the air must be dumped for best performance (lower to ground).

When retracting, vehicle may "scoot" backwards as rear footpads slide on ground while retracting. This is normal, make sure best application to frame is applied (weld, bolts, etc.). If you have issues with the footpads due to the weight or use of the vehicle, we do offer 14" heavy duty round footpads that are 5/8" thick steel at the base, part #M27900.

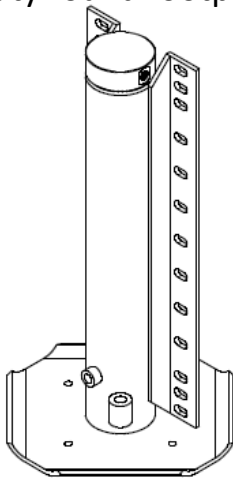


## **QEII SERIES CYLINDERS** **17k-lb LIFT CAPACITY** **3" BORE / 2" RAM**

MOUNT WITH A MINIMUM OF SIX 7/16" GRADE-8 BOLTS

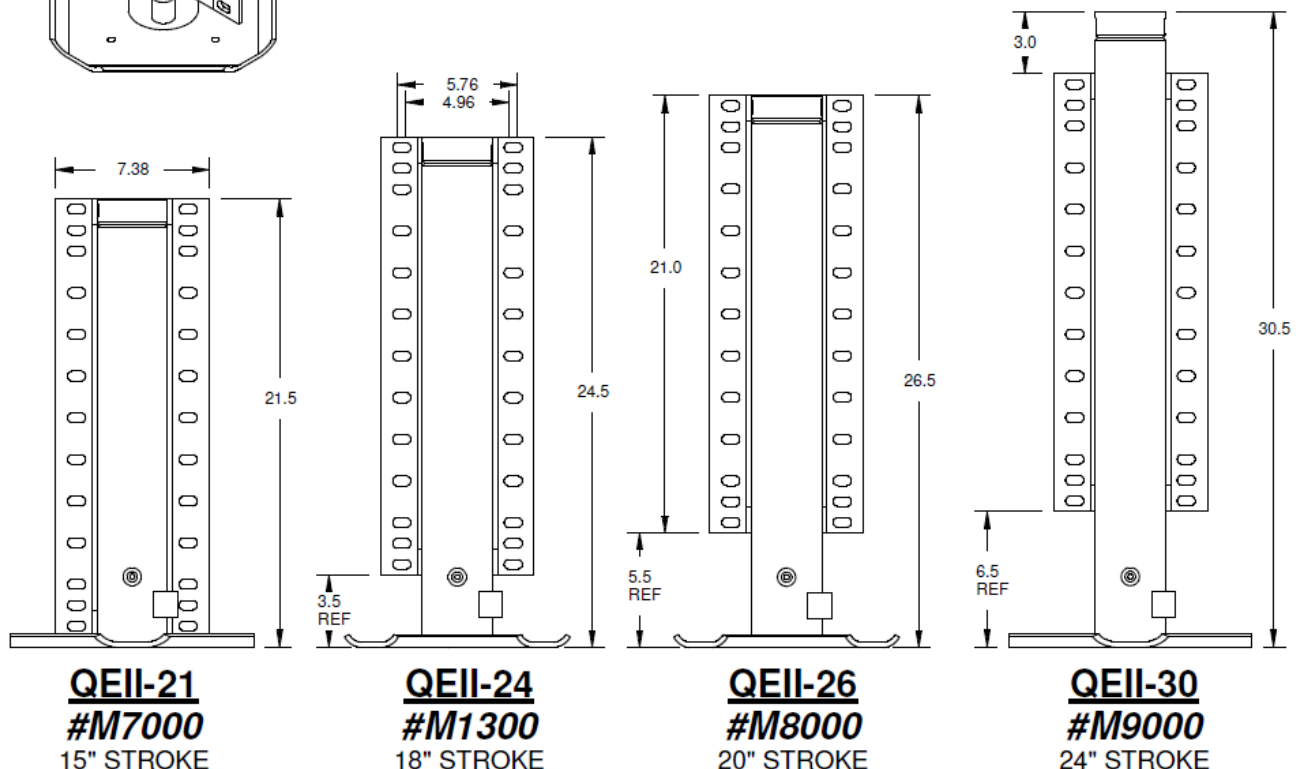

# DIESEL PUSHER EXAMPLE DIAGRAM/LAYOUT...

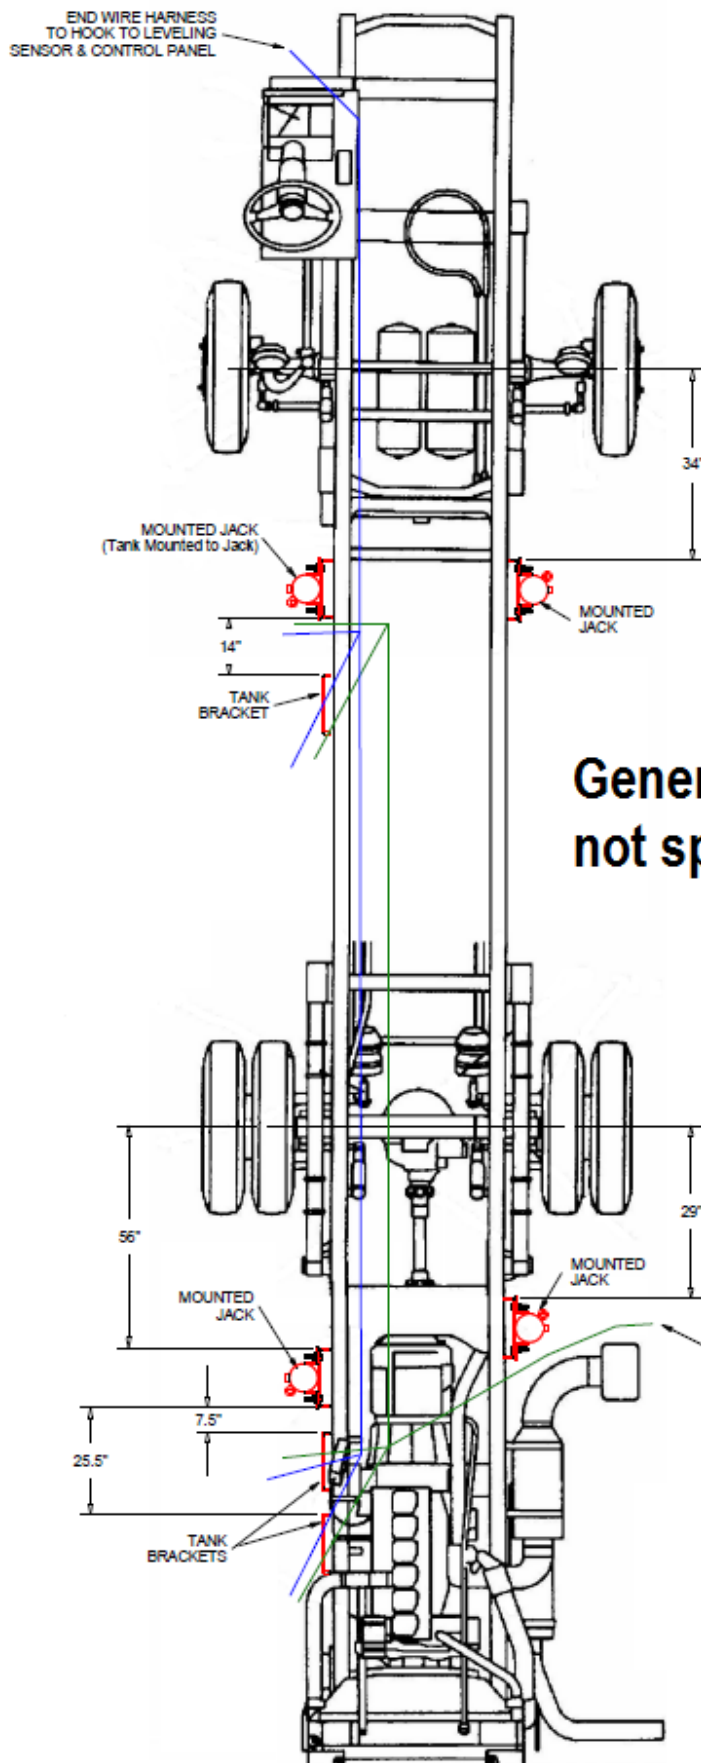

Freightliner XC/XCM Chassis (Diesel Pusher)

- Jack & Tank Locations
- Wire Harness Routing
- Battery Cable Routing
- Mounted Jack Pre-Assembly
- Tank Bracket Pre-Assembly

## COLOR CODES:


RED: CYLINDERS, CYLINDER BRACKETS & TANK BRACKETS  
 BLUE: SYSTEM WIRE HARNESS (14-PIN)  
 GREEN: SYSTEM POWER CABLE (4 GA.)

- FOUR CYLINDERS #M1300 PRE-BOLTED TO FOUR CYLINDER BRACKETS #M31001  
 Bottom of cylinders to be 10-12" off the ground.  
 Bracket & cylinder to be level prior to welding.  
 As much vertical weld on the bracket to frame as possible.
- ONE WIRE HARNESS #M41000  
 Controls end of harness to driver's area.  
 Corner leads to each tank assembly area.  
 Note: Driver front tank attached to jack.
- ONE BATTERY CABLE #M41100  
 Each corner lead to tank assembly area.  
 Main lead to coach's house battery location.

**Generic measurements,  
not specific or required...**

## MOUNTED JACK

- QTY: 4  
 GEII-24 JACK #M1300  
 LONG STD BRKT #M31001  
 Flush w/ Top of Cylinder  
 (8) 7/16-14 G8 Hex Bolts (Shoulder) 1"-1.5" Long  
 Welded to backside of Long Standard Bracket  
 (8) 7/16-14 G8 Hex Nuts  
 (8) 7/16" G8 Lock Washers

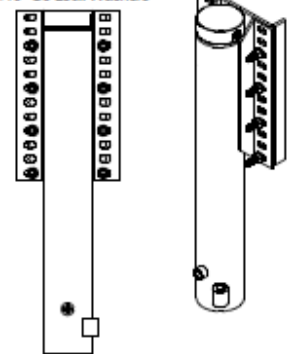

**Reference only...**

# Vertical Tank Assembly for *Central Pump Systems*

Tank Assembly will be pre-assembled & pre-wired direct from factory.

- Mount the pump using a minimum of two 7/16" bolts, nuts & lock washers.
- Plumbing is shown in Fig. 2 below, use 9/16" wrench and be careful not to under or over-tighten the hydraulic fittings. Sometimes marking the hydraulic lines with tape may make it easier.
- **DO NOT** install the top extend lines to the jacks themselves yet, this will be done later in installation.
- The main wire harness will plug directly into the 14-pin connector that is pre-wired to the assembly.
- Route the **ground cable** (attached to ground shown below) to a grounded surface on the vehicle frame.
- Finally installing the plastic three sided tank cover, this should be done later on in the assembly.
- The tank cover will need to be trimmed to your liking around the hydraulic lines. Fasten the tank cover with at least two self-threading screws, be careful not to puncture the plastic reservoir.

Fig. 2 "A" PORTS  
EXTEND


"B" PORTS  
RETRACT

RIGHT FRONT <

LEFT FRONT <

RIGHT REAR <

LEFT REAR <

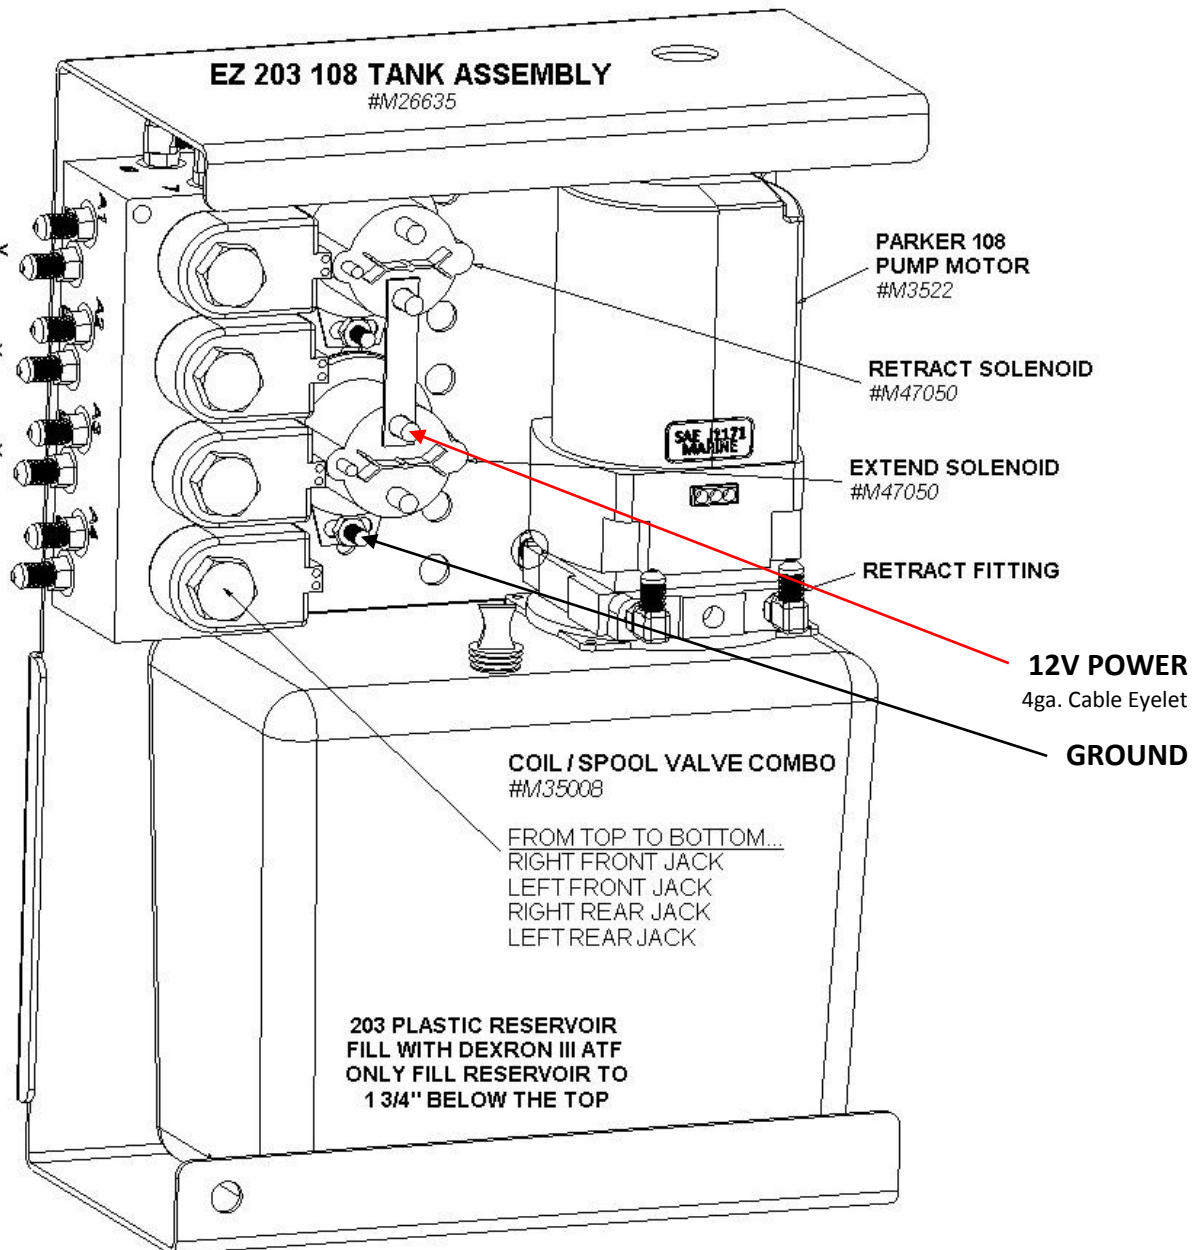

Central tank assembly is typically located near the "center" of the unit, Example: In front of rear axle on driver side frame rail (outside or between rails). Can be mounted to existing boxes, sub-frame, etc.



## Quad Pump or 2pt Stabilizing Systems...

# MEDIUM TANK ASSEMBLY

#M26850

### OVERALL DIMENSIONS:

9" WIDE  
12.5" TALL  
5.75" DEEP

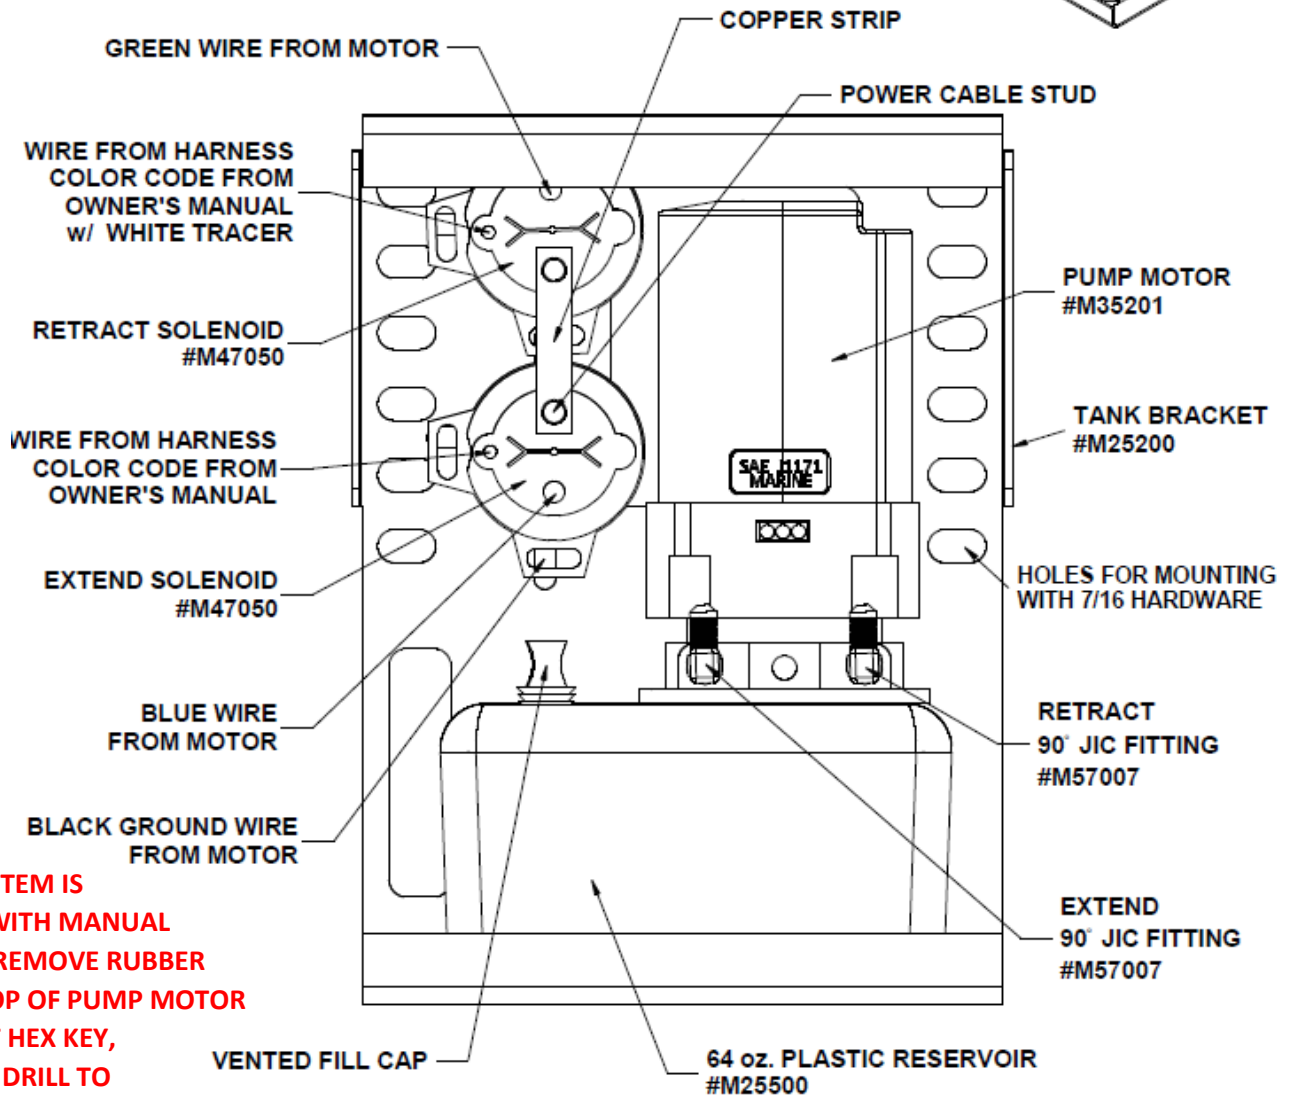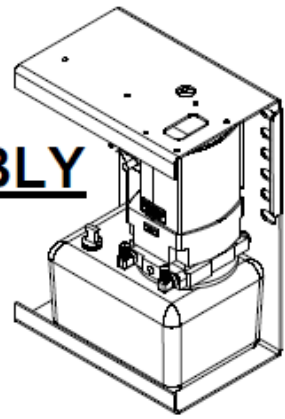

**IF YOUR SYSTEM IS  
EQUIPPED WITH MANUAL  
OVERRIDE, REMOVE RUBBER  
PLUG ON TOP OF PUMP MOTOR  
AND INSERT HEX KEY,  
TURN WITH DRILL TO  
OPERATE JACK UP/DOWN**

**4 PT WIRING HARNESS COLOR CODE DIAGRAM:**  
LEFT FRONT: GREEN/WHITE & GREEN  
RIGHT FRONT: BLUE/WHITE & BLUE  
LEFT REAR: GREY/WHITE & GREY  
RIGHT REAR: BROWN/WHITE & BROWN

**NOT PICTURED:**  
TANK COVER  
(BLACK TEXTURED PLASTIC)  
#M12002


## Mounting Tank Assemblies

Our tank assemblies are weather resistant and must be mounted vertically and can be mounted externally on the vehicle's frame by drilling holes in the frame or welding a bracket, tanks can be mounted to a cylinder bracket or inside a storage box. Use at minimum two 7/16" or 3/8" bolts per tank assembly. Take care when mounting and running hydraulic lines & wiring to avoid moving parts, exhaust, etc.



## Grounding your tank assembly... **Recommended!**


Each pump requires 12V power and sometimes an additional ground is required for the pump/motor to operate correctly. This is true for central pump, quad pump and 2pt systems. An auxiliary ground harness (optional) could come pre-wired to the tank assembly, otherwise attach a minimum 10 gauge wire from the location shown below (solenoid mounting stud for **both solenoids**) to a good grounded surface on the vehicle frame or directly to the negative terminal on the battery. Quad pump or 2pt assembly shown below, but the same solenoids are used on the vertical central pump assembly.

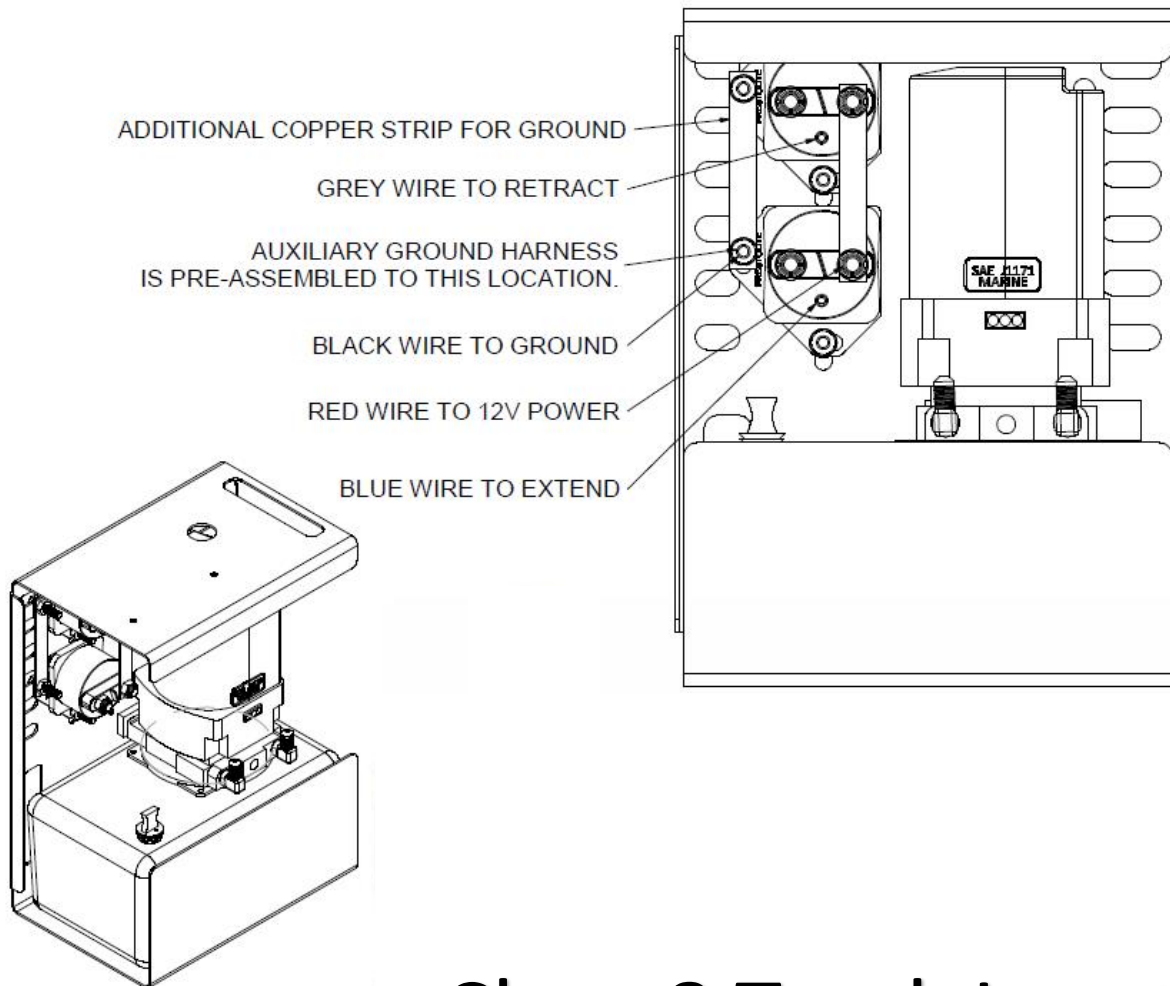

Auxiliary Ground Wire:  
Loomed & Taped  
60" long  
10 gauge wire  
1/4" eyelets each end  
Weatherproofed  
Pre-assembled

## Class-8 Truck Locations:


(Volvo/Freightliner/Peterbilt) Front jacks behind fuel tank, no further than 4-5' behind cab, set cylinder height accordingly to limit lift/stress on frame/body.

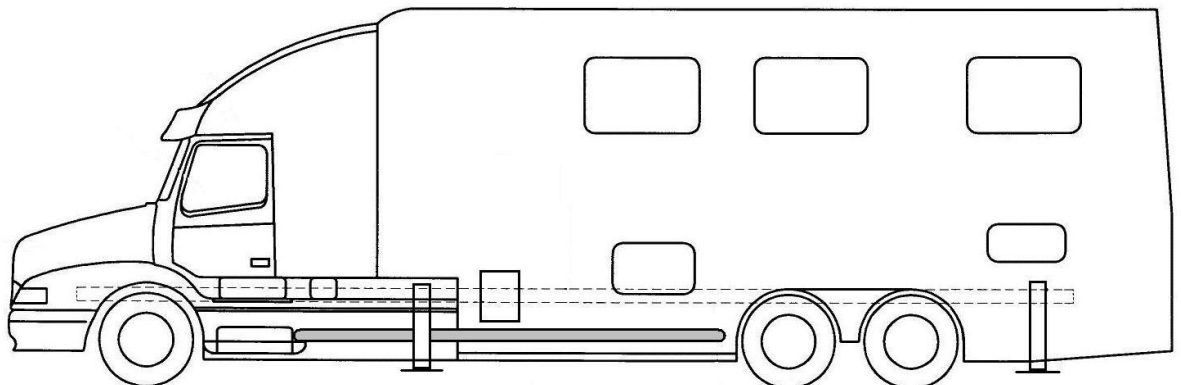

## **FORD E-350/450 TANK MOUNT BRACKET**

*part #M29310/#M29311*


This #M29311 tank mount bracket (to the right) enables the tank assembly (quad pump or central pump assemblies) to mount in-between the frame rails on the Ford's channel frame. Typical open location is on the driver's side in front of the rear axle. For quad pump systems, maybe install both rear tanks or both front tanks. This brackets slides over the top or underneath the channel, allowing a vertical surface over the "open" area of the channel style frame where the cables and wiring are attached. Take care not to drill into the wiring when mounting this to the frame. Simply bolt the tank to the other side using a minimum of two bolts. You can mount the tank using just one side of the bracket to the tank (Ex. To left holes on bracket and tank), the tank body is strong enough to support the weight of the assembly (7/16" hardware and lockwasher required, torque to 70 ft/lbs.).

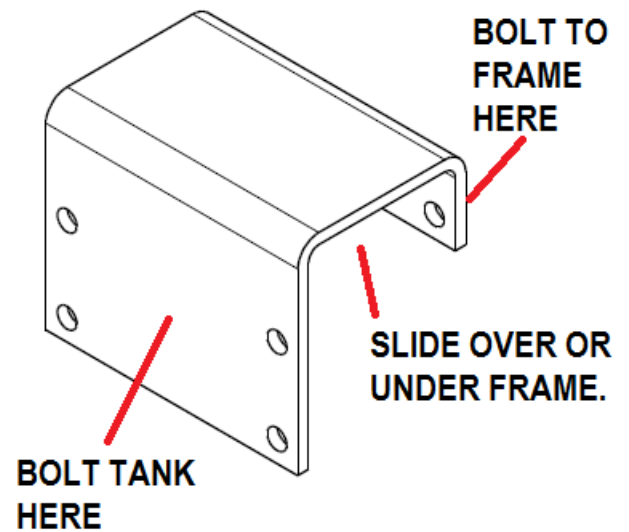

## **MOUNT TANK ASSEMBLY DIRECTLY TO CYLINDER...**

Utilizing the supplied 7/16" hardware (1.5" full threaded bolts) and cylinder mounting bracket on one side, you can mount the tank assembly directly to the cylinder bracket. Doing this saves space and installation time, most quad pump systems come with 2 ft hydraulic lines for this very reason.

If the tank cannot be mounted directly to the cylinder, longer lines will more than likely be needed. (1/4" JIC male fittings on cylinders).

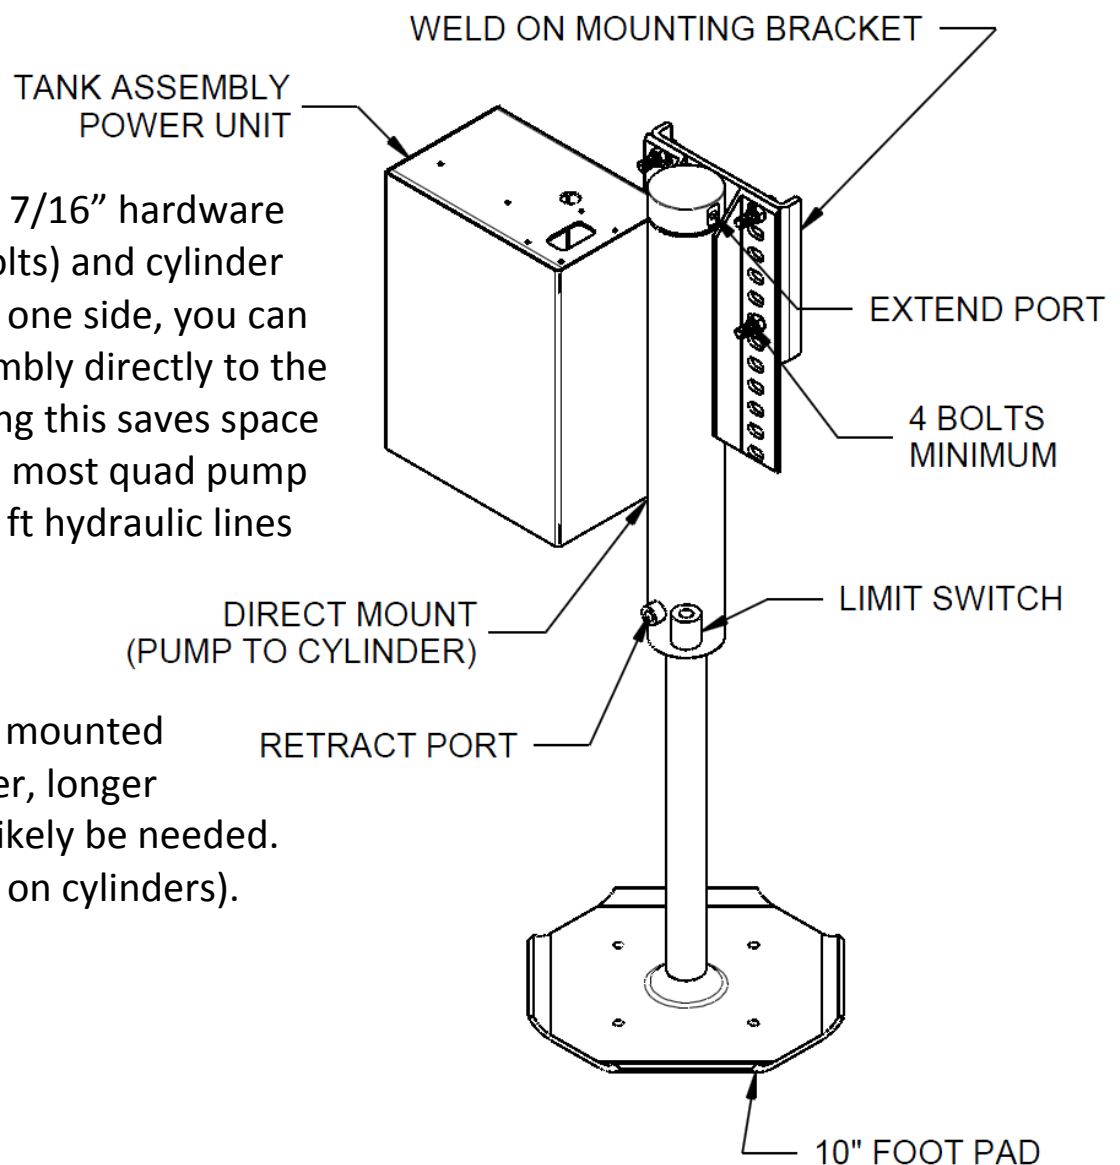

Body Builders Layout Book


SUPER DUTY F-550

MODEL LINEUP DRW CHASSIS CAB


BRACKET LOCATIONS ARE NOT EXACT, BUT  
GENERALLY FRONT CYLINDERS UNDER TRUCK  
CAB, REAR CYLINDERS TUCKED BEHIND REAR  
AXLE (INSIDE OR OUTSIDE OF FRAME CHANNEL).

RECOMMENDED GROUND CLEARANCE:  
-FRONT CYLINDERS: 6.5" TO 8"  
-REAR CYLINDERS: 7.5" TO 9"


TYPICALLY NEED 4-5" OF LIFT IN ORDER  
TO LEVEL. MEASUREMENT TAKEN FROM  
BOTTOM OF CYLINDER FOOTPAD TO  
GROUND PARKED ON LEVEL SURFACE.

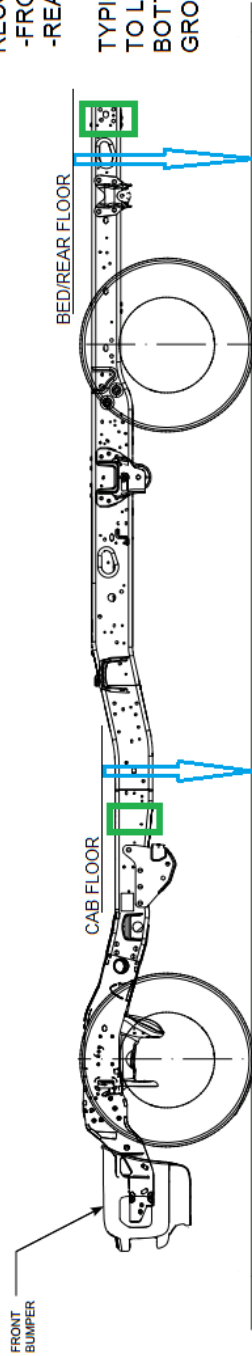


TYPICAL FRONT CYLINDER #M1014

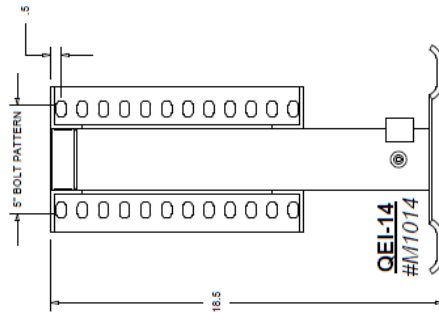


TYPICAL REAR CYLINDER #M1016

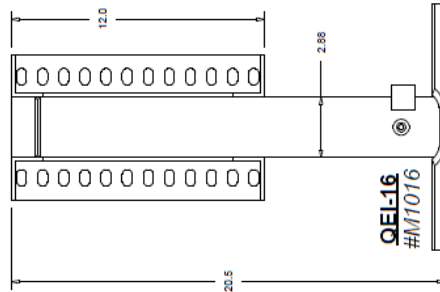

EXAMPLES OF CYLINDER HEIGHT ADJUSTABILITY  
ON THE WELD-ON MOUNTING BRACKET

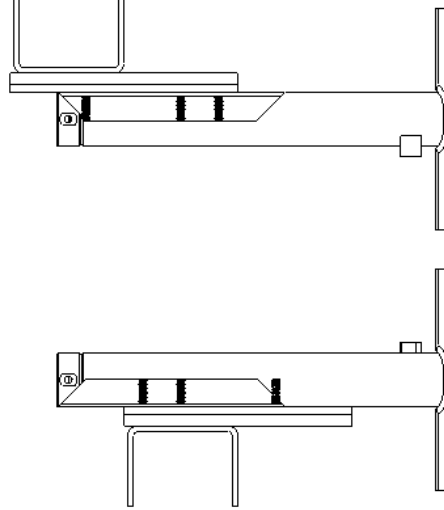

CROSS-BRACE IS REQUIRED IF MOUNTING ONE  
OR MORE OF THE REAR CYLINDERS ON THE  
INSIDE FACE OF THE "C" CHANNEL FRAME.  
BRACKET REQUIRED FOR INSIDE MOUNT IS  
PART #M29350 (SOLD SEPARATELY)

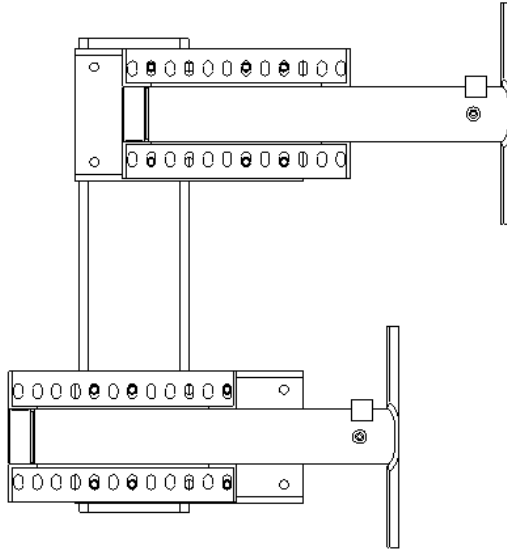

## Main Wire Harness –Automatic Leveling & Platinum System

### Installing the 14-Pin Wiring Harness Central Pump Automatic Leveling & Platinum Systems


The harness has two ends with plugs; the “panel” end has a 14-pin connector & a 6-pin. This end will need to route to the control panel’s location (usually near front of vehicle near driver’s seat or in wall of cabinet near service door). The other end will have one 14-pin connector that will plug directly into the tank assembly. The rest of the harness has two wires: Black & Tan, both of these wires plug directly into the Limit Switch that you installed previously onto each jack. Attach the wire harness to the frame rail (usually inside of rail with other wiring) with p-clips or zip ties safely routing away from any moving suspension parts or exhaust (complying with RVIA regulations). Example diagram on next page...

### Installing the 14-Pin Wiring Harness Quad Pump Automatic System


The main wire harness will have three wires for each corner: One wire goes to the limit switch (has spade connector) (the limit switch has two wires coming from it, the wire with the eyelet goes to ground, the spade connects to harness). The other two wires (same color except one has a tracer) have female push-on connectors that plug into the operation posts on each solenoid. The battery harness has eyelets at each corner that attaches to the power stud on the lower solenoid (with the copper strip). See the “Medium Tank Assembly” diagram earlier in the booklet. The main harness lead has a 14-pin connector at the end, this end will need to route to the sensor location. Attach the wire harness to the frame rail (usually inside of driver’s side rail with other wiring) with p-clips or zip ties safely routing away from any moving suspension parts or exhaust (complying RVIA regulations). Example diagram on next page...

## Installing the Limit Switches to the Jacks


Central Pump systems, both wires from limit switch plug into harness.

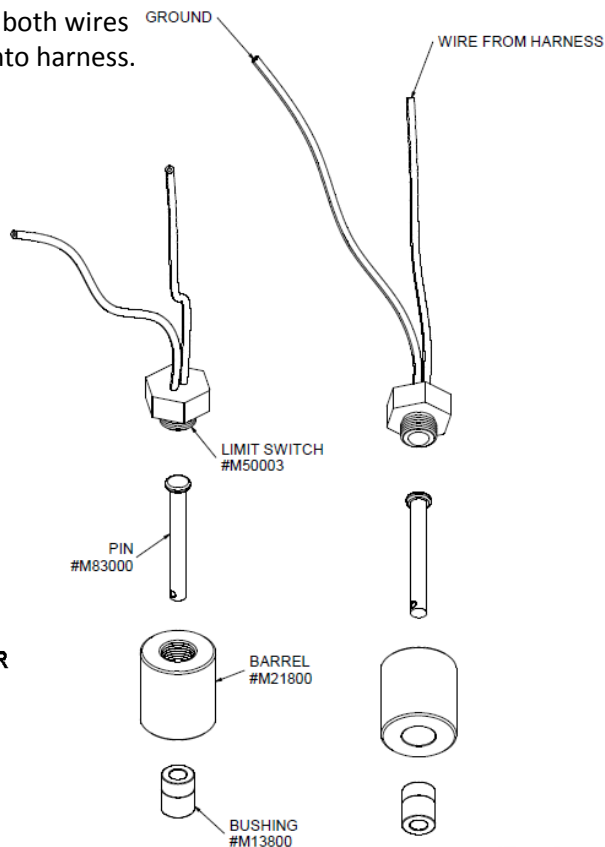


The **Wireless System** does not have a main wire harness that goes to each jack from the controls, but it does have an optional all-up safety feature complete with limit switches that is routed to each jack. This harness routes to the All-Up indicator that should be mounted near the driver inside the vehicle. The Limit Switch harness has two wires that go to each jack, one green & one black, each wire goes to the wires from the limit switch shown on the right. Wiring the lead wire to the all up indicator is shown below.

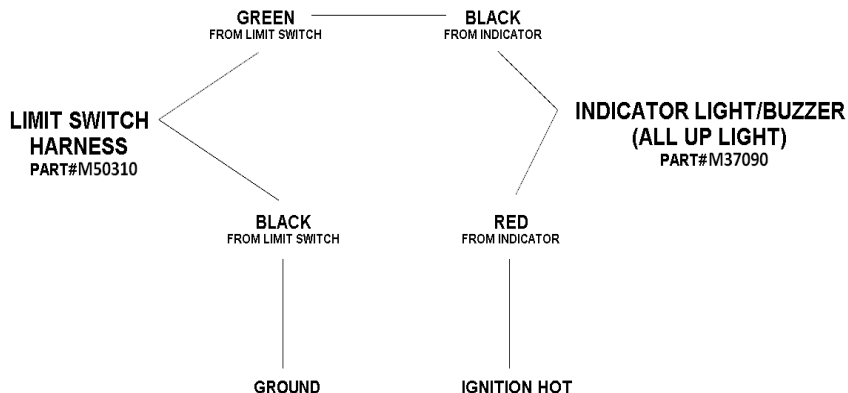

Example below of routing the Quad Pump Automatic & Manual systems 14-pin wire harness. The Central Pump Automatic & Platinum systems harness is similar except that the leads to each corner or jack have only a tan & black wire that plugs into the limit switch and the end of the harness with the 14-pin connector plugs into the pump while the end with the 14-pin & 6-pin connectors plug into the Automatic's Sensor or Platinum panel. Take care to avoid high heat areas and moving parts.

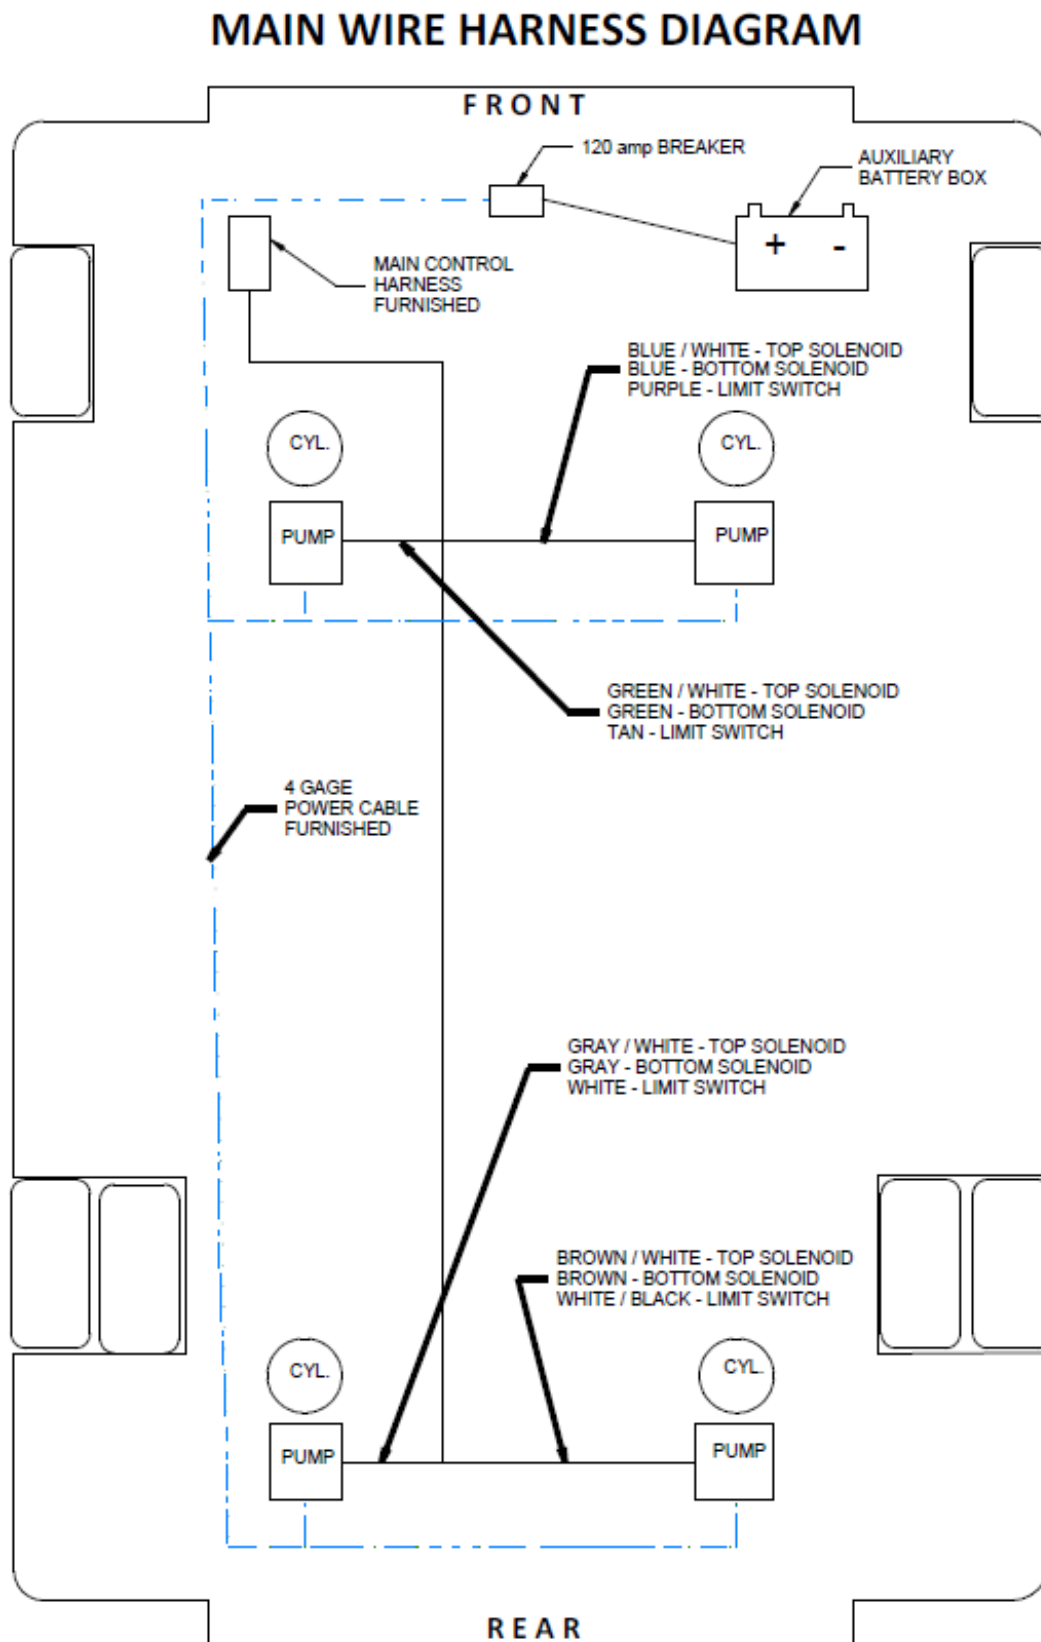



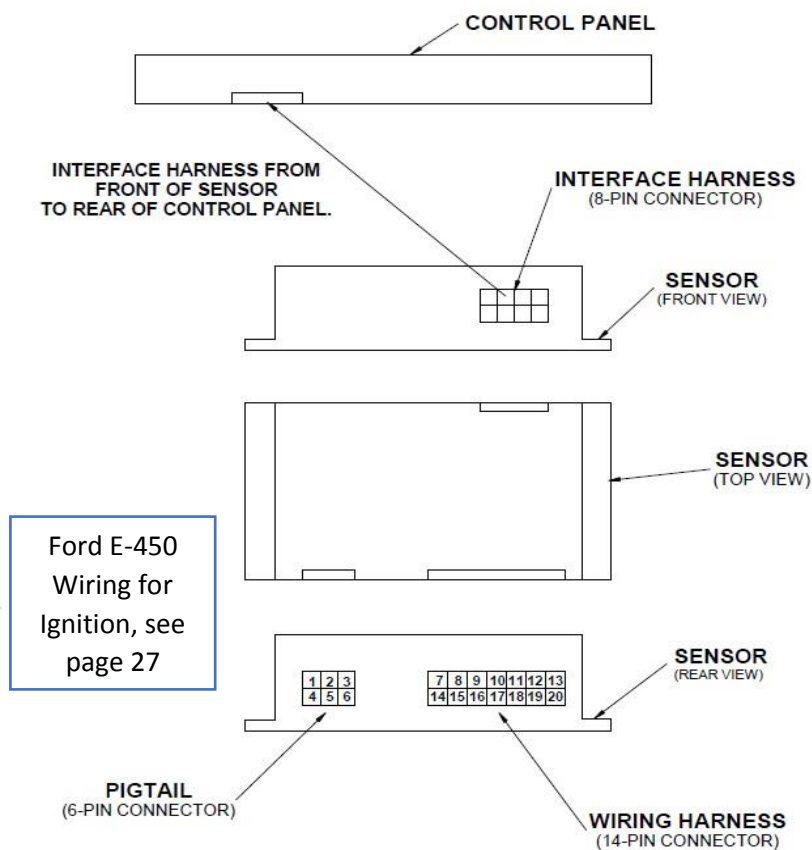

### Installing the Automatic Leveling Sensor & Control Panel:

**Panel:** Fasten the sensor to a secure structure: Typical location would be inside the cabinet near the entry door. It must be inside the vehicle or dry storage area (not weatherproof controls). Ensure that it is mounted level and the arrow on top of the sensor is facing the correct way. Included in most kits is a sensor mounting bracket, attach the sensor with the included #8-32 bolts & nuts. The bracket allows you to mount the sensor off the floor and to vertical surfaces as well, see Fig.33 inside the cabinet (removed drawer for easy access). Plug the 14-pin & 6-pin from the harnesses into the back side. The 6-pin connector only has needs the yellow wire to be hooked up for central pump systems. The yellow wire needs to tie into an ignition or accessory hot wire from the vehicle, see next pages for details. For quad pump systems, the red wire goes to fused 12V and black wire to ground. After doing so attach the interface harness (8-pin connector) to the front of the sensor and attach to the Control Panel. The panel is typically mounted near the side entry door, on a cabinet wall or panel somewhere inside the coach, or inside Quadra's optional plastic box assembly with the harness loosely coiled behind the driver's seat.

### Installing the Platinum Control Panel

Plug the 14-pin & 6-pin from the harness into the back side. There is a yellow wire coming from the 6-pin that needs to tie into an ignition hot wire from the vehicle. The panel may be mounted on the dash in a safe location or on a panel somewhere on inside the coach, or inside Quadra's plastic box assembly with the harness loosely coiled underneath the driver's seat.

### Battery Cable Installation for Central Pump & 2pt Systems

Supplied will be a 4 gauge battery cable that needs to be cut into two pieces.

- The 1<sup>st</sup> to run from the Solenoid power stud (marked BATT+) to the 80 amp breaker AUX stud.
- The 2<sup>nd</sup> to run from the BAT stud on the breaker to the Positive Terminal on the coach's house battery. Hooking up the power should be the final wiring step so make sure this is done after all the other electrical work is done for safety. The supplied 80 amp breaker should be securely fastened in the battery box. Ground cable (attached to central pump assembly, typically white 10ga. wire should be fastened to vehicle frame or extended to negative terminal on battery.

### Battery Harness Installation for Quad Pump Systems

Supplied will be a 4 gauge battery harness that must be ran from the coach's house battery to all four pump assemblies at the solenoid power stud (with the copper strip). For the end going to the breaker read next page:



- Mount the 120 amp breaker near the battery (usually in the battery box) cut a piece of the battery harness off that is long enough to reach the battery from the breaker.
- Install the eyelet to the now open end of the battery harness and hook it to the BATT post on the breaker.
- Install the eyelet to the short cut piece and hook that to the AUX post on the breaker and to the positive terminal on the coach's house battery. Hooking up the power should be the final wiring step so make sure this is done after all the other electrical work is done for safety.

**Installing the Manual Control Panel:** Plug the 14-pin harness & 6-pin into back of panel, mount with bezel, not weatherproof control or wire connection, mount inside with supplied #6 black screws.

## ***Central Pump Final Extend Hose Installation & Bleeding the System***

---

During installation of the hydraulic lines, air is internally captured in the hose. Due to this, bleeding the air out of the system is necessary for the system to work properly. This process is done at the end of installation and requires two people and can be messy, so as a warning make sure you are wearing eye protection and have rags ready to use. Make sure all hose fittings are tight on the pump side and the retract side of the jacks. Extend hose fittings should still be un-installed.

- With person #1 running the panel, go into Manual Mode, all jacks should be fully retracted.
- Person #2 (armed with a 5/8" OR 9/16" wrench, safety glasses, rag and a one gallon container) needs to access the left rear jack and place the un-attached extend hose into the empty container.
- Now person #1 will extend that left rear jack from the panel (press & hold button).
- Fluid & air will be spilling out of the port, once a solid stream of fluid occurs, person #1 will release the button on the panel, after fluid stops flowing person #2 should install the hose fitting to the jack.
- Repeat these steps with the rest of the jacks.
- After doing so, extend all jacks fully and let stand for 15 minutes.
- Then retract all the jacks and remove the tank cover and check your fluid level to verify the fluid in the reservoir is around 1 3/4" below the top (ATF Dexron III) do not fill to the top!

Finally install the tank cover, check that all hardware is tight, the sensor is facing the correct way and is mounted level and the house battery is fully charged.

*In some instances, the front jacks may need to be dis-mounted from underneath the cab to access the top extend ports during the bleeding procedure.*

## ***Bleeding Quad Pump systems***

---

In Manual mode, extend all four jacks to complete extension and leave in this position for 20 to 30 minutes. This pushes all the air out of the lines by weight pressure. After turn panel back on and press Retract.

## ***Troubleshooting - Hydraulic Cylinder/Plumbing Related***

---

**What fluid do we use in the system?** Automatic Transmission Fluid Dexron III ATF

**Cylinders running "choppy"...** Bleed the system, if central pump system, try quad pump method first.

**Cylinders make loud "squeaking" noise while operating...** Spray rams with Teflon spray (dry lubricant).


**Hydraulic fluid on footpad or on ground around cylinder...** Loose fitting or broken hydraulic line.

**Cylinders "creep" down or don't hold pressure when lifting/holding coach...**

- Check fluid level, Check for leaks in hydraulic lines/fittings
- Possibly plumbed backwards... (Bottom port on cylinder tube connects to right port on pump, etc.)
- Relief Valves have failed on pump motor... replace motor/tank assembly
- Hydraulic seal failure, check for oil around bottom of cylinder or welds... replace cylinder

## Ford E-450 chassis wiring... Remove plastic step well at driver seat to expose wiring

Typically: Quadra yellow wire to Ford yellow/orange wire. Quadra red wire to Ford white/red wire.

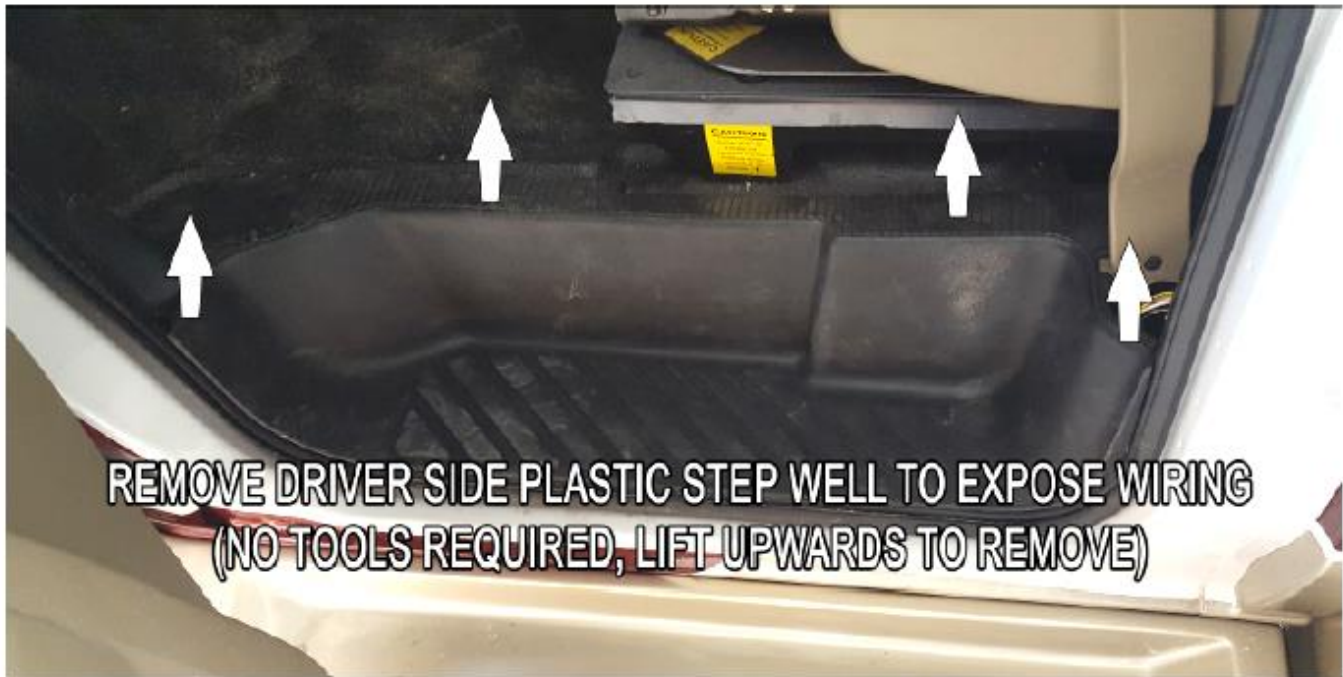

**Hydraulic lines are universal lengths and fit the majority of applications, however if they do not fit your exact model you will need to call and order longer lines.**

## ***Central Pump* Final Extend Hose Installation & Bleeding the System**

---

During installation of the hydraulic lines, air is internally captured in the hose. Due to this, bleeding the air out of the system is necessary for the system to work properly. This process is done at the end of installation and requires two people and can be messy, so as a warning make sure you are wearing eye protection and have rags ready to use. Make sure all hose fittings are tight on the pump side and the retract side of the jacks. Extend hose fittings should still be uninstalled.

- With person #1 running the panel, go into Manual Mode, all jacks should be fully retracted.
- Person #2 (armed with a 5/8" OR 9/16" wrench, safety glasses, rag and a one gallon container) needs to access the left rear jack and place the un-attached extend hose into the empty container.
- Now person #1 will extend that left rear jack from the panel (press & hold button).
- Fluid & air will be spilling out of the port, once a solid stream of fluid occurs, person #1 will release the button on the panel, after fluid stops flowing person #2 should install the hose fitting to the jack.
- Repeat these steps with the rest of the jacks.
- After doing so, extend all jacks fully and let stand for 15 minutes.
- Then retract all the jacks and remove the tank cover and check your fluid level to verify the fluid in the reservoir is around 1 3/4" below the top (ATF Dexron III) do not fill to the top!

Finally install the tank cover, check that all hardware is tight, the sensor is facing the correct way and is mounted level and the house battery is fully charged.

*In some instances, the front jacks may need to be dis-mounted from underneath the cab to access the top extend ports during the bleeding procedure.*

## ***Bleeding Quad Pump systems***

---

In Manual mode, extend all four jacks to complete extension and leave in this position for 20 to 30 minutes. This pushes all the air out of the lines by weight pressure. After turn panel back on and press Retract.

## ***Troubleshooting - Hydraulic Cylinder/Plumbing Related***

---

**What fluid do we use in the system?** Automatic Transmission Fluid Dexron III ATF

**Cylinders running "choppy"...** Bleed the system, if central pump system, try quad pump method first.

**Cylinders make loud "squeaking" noise while operating...** Spray rams with Teflon spray (dry lubricant).

**Hydraulic fluid on footpad or on ground around cylinder...** Loose fitting or broken hydraulic line.

**Cylinders "creep" down or don't hold pressure when lifting/holding coach...**


- Check fluid level, Check for leaks in hydraulic lines/fittings
- Possibly plumbed backwards... (Bottom port on cylinder tube connects to right port on pump, etc.)
- Relief Valves have failed on pump motor... replace motor/tank assembly
- Hydraulic seal failure, check for oil around bottom of cylinder or welds... replace cylinder



# 2pt Stabilizing System: Wireless or Rocker Switch Controls

---

## Wireless Controls

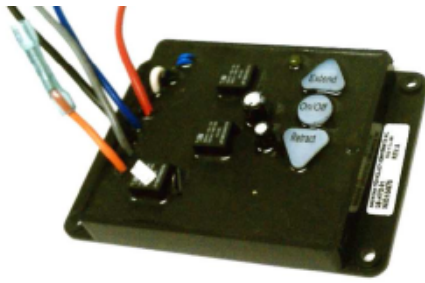

*Components may vary slightly from picture.*

Receiver shown on Left,  
Transmitter shown on Right.

Replacement Transmitter #M37098

Replacement Transmitter/Receiver #M37029

### Operation:

Depress the on/off button on the transmitter to activate. The blue LED light on the top right corner should turn on. The transmitter should be in the off position when the unit is not in use, but is equipped with a safety feature that shuts off if not being used after 3 minutes.

On the transmitter, press & hold the Extend button to lift your unit to desired height. To lower the unit or fully retract the jack(s) press & hold the Retract button.

The controls on the receiver operate the same as the transmitter.

### Sync Transmitter:

This is usually done by the original installer, but if you have an issue or have a new transmitter follow these simple steps...

Make sure the receiver and the transmitter are off. Enter the "learn mode" by pressing & holding the on/off button on the receiver until the LED light starts to **flash quickly** on the receiver then release.

Now press & hold the on/off button on the transmitter until the LED on the receiver becomes **constant**, then release. Transmitter now "learned".

### Re-Program Receiver:

If you are having issues with your controller at all try this before calling for service...

With the transmitter and the receiver off, press & hold the on/off button on the receiver, the LED light will start to flash quickly on the receiver but continue to hold until the light starts to **flash slower**, then release. The receiver module is now cleared of all codes.


Now press & hold the on/off button on the transmitter until the LED on the receiver becomes **constant**, then release. Transmitter now again "learned".

To exit this mode press and release the on/off button on the receiver, the light will become constant. Your controller is now re-programmed and cleared of all error codes.

The Wireless control is wired to the tank assembly and wires are color coded to mate to the extension harness (#M43800 if included). The receiver is podded and can be mounted outside the vehicle, but should be placed where it is easily reached in case if the transmitter is damaged or misplaced, typical placement is inside a storage box wall or inside the tank assembly itself.





## 2nd Gen Wireless 1pt

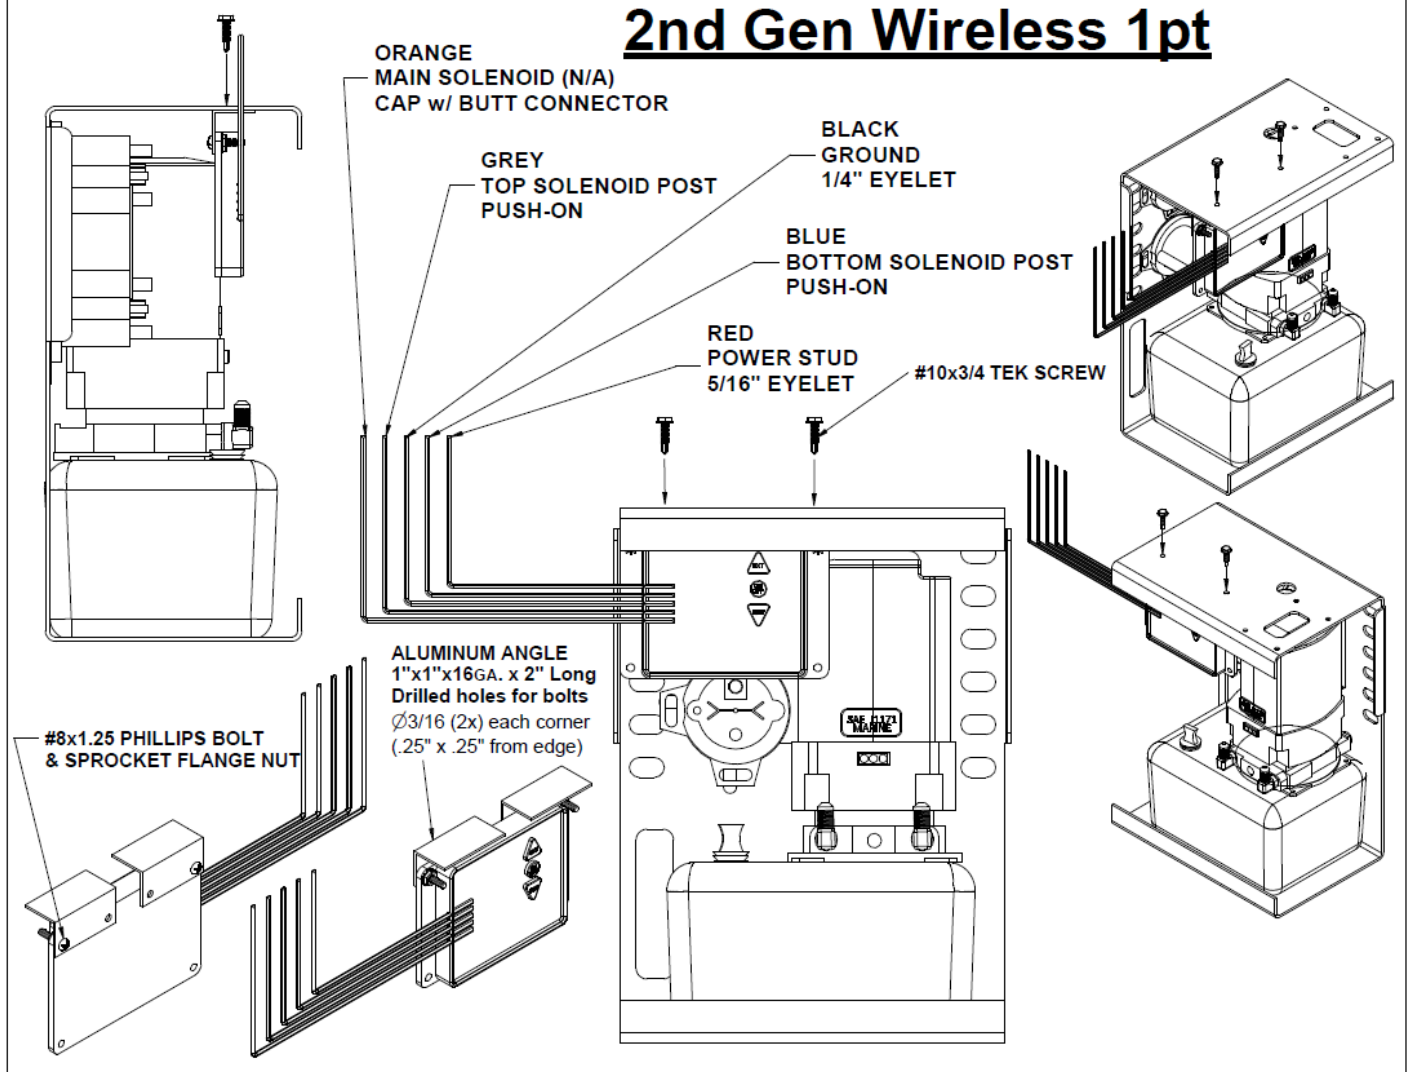

### Operating your Jack with the Emergency Controls:


- 1.) Remove cover screws (two)
- 2.) Remove the cover
- 3.) Press ON/OFF switch
- 4.) Press EXTEND or RETRACT

Primary Control for the Jack is your Key Fob, but if that is misplaced, there is still a way out!

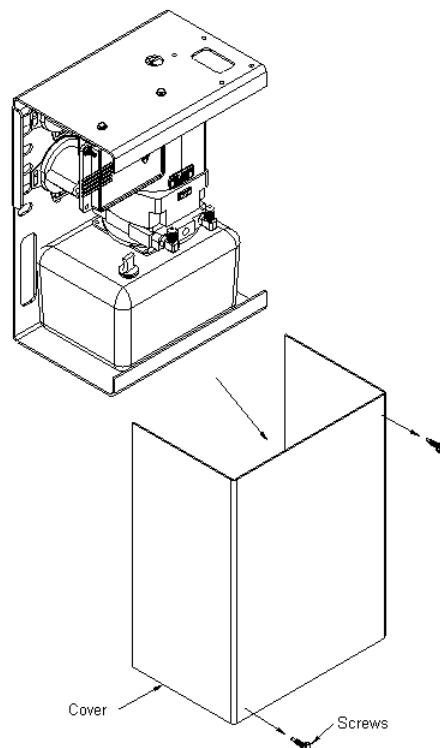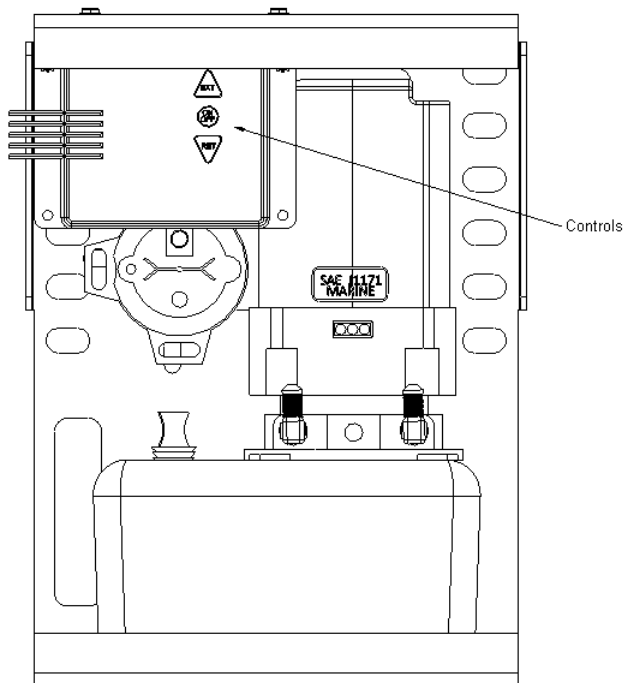


## Rocker Switch Controls

Included is a harness (#M43800) that routes from the tank assembly to the rocker control switch. The red wire is the 12V power, this goes from the power stud on the tank assembly (on copper strip with 5/16" studs from solenoids) to the center post on the switch. The black wire is ground & is not needed for this switch. The grey wire goes from the retract operation post on the retract solenoid to the post labeled "1" on the switch. The blue wire goes from the extend post on the extend solenoid to the post labeled "3" on the switch. The switch is not waterproof & must be installed inside the coach.

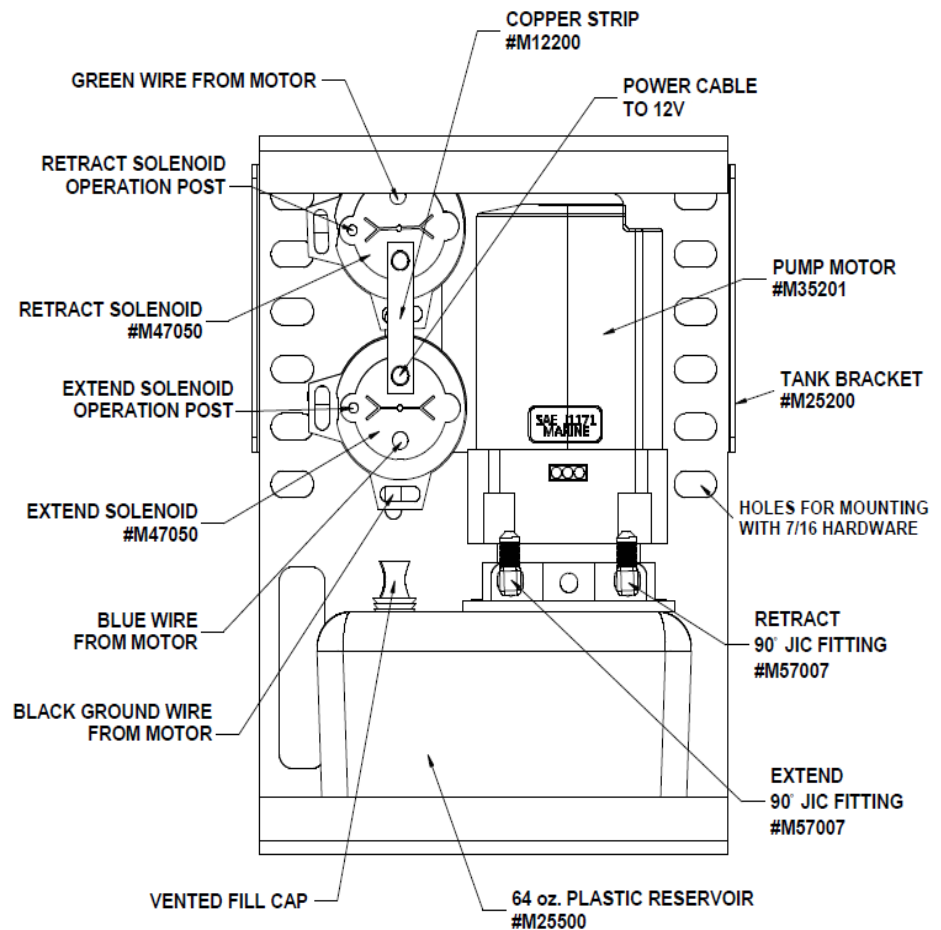

## Typical Plumbing

### For 2pt "Slave" Systems (one pump, two jacks)

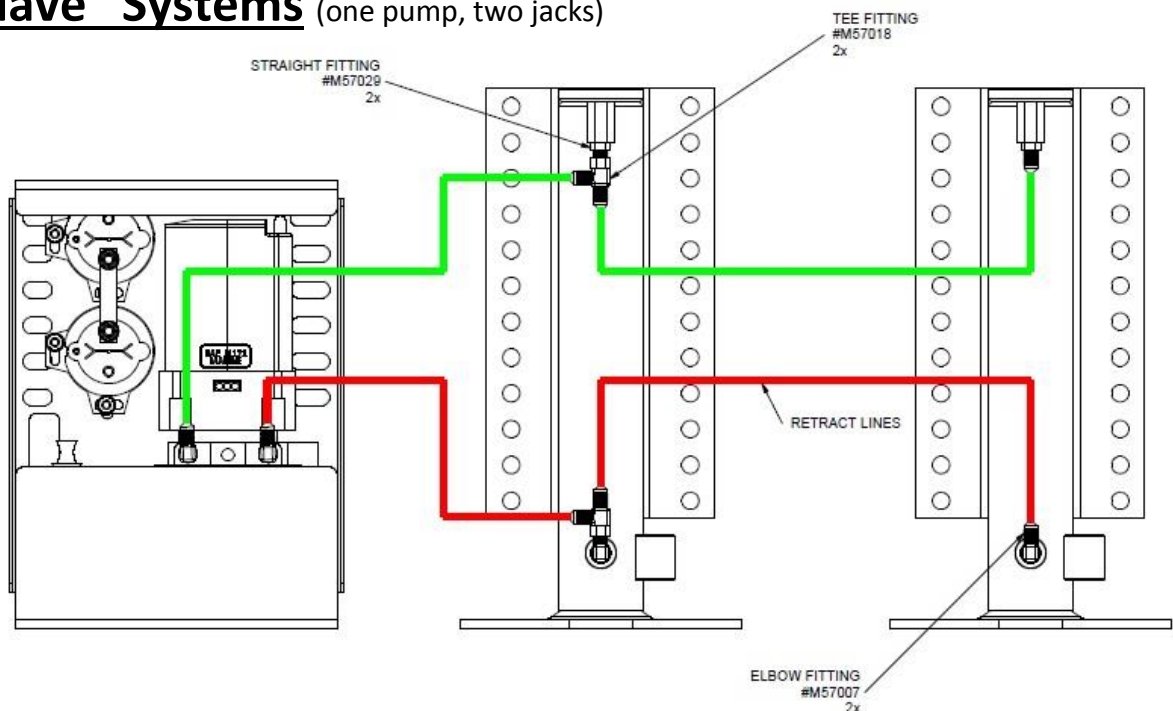

VERSION #1: (SHOWN) THE "TEE" FITTINGS MOUNTED TO THE DRIVE JACK.


VERSION #2: INCLUDES MOUNTING THE "TEE" FITTINGS TO THE PUMP FITTINGS.

VERSION #3: RUNNING TWO LINES FROM THE PUMP AND PLACING THE "TEE" FITTINGS IN-LINE, THEN RUNNING INDIVIDUAL LINES TO EACH JACK FROM THE "TEE" FITTINGS.

# 2pt Dual Control...


## MEDIUM TANK ASSEMBLY

#M26850

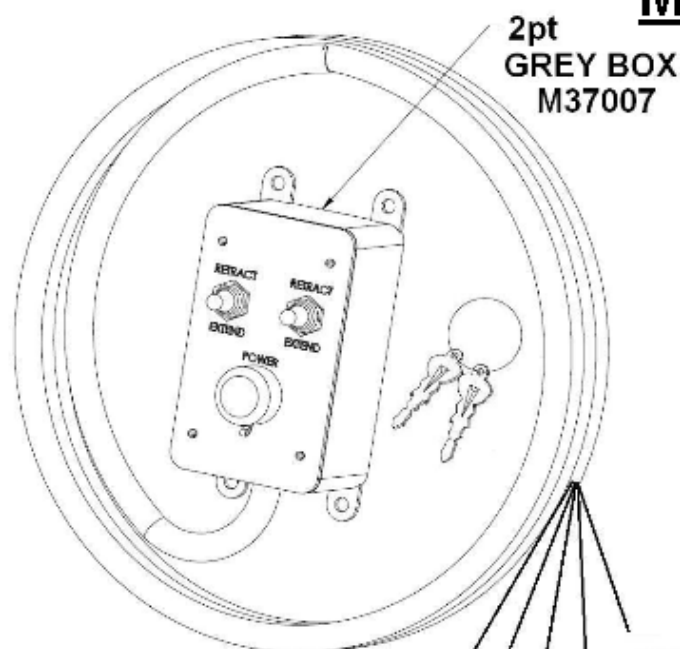

OVERALL DIMENSIONS:

9" WIDE  
12.5" TALL  
5.75" DEEP

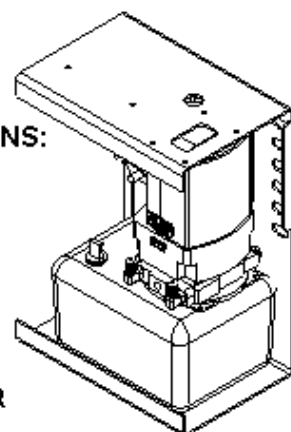

GREEN WIRE  
FROM MOTOR

COPPER STRIP  
#M12200

PUMP MOTOR  
#M35201

**GREEN w/ WHITE  
OR BLUE w/ WHITE  
WIRE FROM BOX**  
RETRACT SOLENOID  
OPERATION POST

**RED WIRE  
FROM BOX**

4 GA. BATTERY CABLE  
ONE END HERE THEN  
TO BREAKER MARKED 'AUX'  
THEN FROM POST MARKED 'BAT'  
TO POSITIVE TERMINAL  
ON BATTERY

**GREEN WIRE  
OR BLUE WIRE  
FROM BOX**  
EXTEND SOLENOID  
OPERATION POST

BLUE WIRE  
FROM MOTOR

BLACK GROUND WIRE  
FROM MOTOR

VENTED FILL CAP

**1pt GREY BOX (#M37022)**  
WIRES UP THE SAME WAY  
(ONLY ONE SWITCH & ONE SET OF WIRES)

64 oz. PLASTIC  
RESERVOIR  
#M25500

EXTEND  
90' JIC FITTING  
#M57007

RETRACT  
90' JIC FITTING  
#M57007

**NOT PICTURED:**

TANK COVER (BLACK TEXTURED PLASTIC) #M12002

5/9/11

**QUADRA**  
MANUFACTURING

# Warranty Guide

---

**Owner must activate warranty! Via Phone or Website**

**OEM Installed Auto Leveling Quad/Central Pump Systems:** 1 year parts and labor.

**Platinum Central Pump System:** 1 year parts and labor.

**Automatic Leveling System:** Lifetime Cylinders, 2 years parts, 1 year labor.

**Manual Leveling Quad Pump System:** Lifetime Cylinders, 2 years parts, 1 year labor.

**Wireless Central Pump System:** 1 year parts and labor.

**1pt & 2pt Round Leg Stabilizing Systems:** 1 year parts and labor.

Should the product be defective due to workmanship and/or material flaws, we will repair/replace the defective material. **Core charges may be applied and refunded on certain components.**

**Quadra is NOT responsible for:**

- **Freight on warranty parts.**
- **Replacing footpads, bolts, or fluids lost as a result of failure to maintain the system (Loose footpads should be tightened at owner's expense).**
- **Damages caused by abuse, misuse, negligence, misapplication, error of operation, accidental or purposeful damage or faulty installation. Including but limited to hoses, fittings & wiring components.**
- **Liability for loss to the vehicle, or apparatus or property, loss of time, manufacturing costs, labor, material, loss of profits, consequential damages (direct or indirect).**
- **For transportation to and from a service center, onsite service calls to or from the customer, damage from road hazard, loss of salaries, commissions, lodging, towing charges, bus fares, car rentals, fuel expense, telephone charges, inconvenience compensation while repairing or replacing a defective part or material.**

This warranty voids all previous issues. Effective date: 2/12/18

**OWNERSHIP MUST BE REGISTERED WITHIN 30 DAYS FROM THE DATE OF PURCHASE TO  
ACTIVATE WARRANTY. Do it online at [BIGFOOTLEVELER.com](http://BIGFOOTLEVELER.com)!**

Prior to any work being done an **authorization number must be obtained** by calling 269-483-9633 for Warranty Parts or Service Labor. For full warranty transcript just contact us!

Service labor based on a flat rate schedule determined by Quadra for **authorized** work performed will be reimbursed. This will eliminate much diagnostic time and avoid **refusal of unauthorized claims**. Many problems may be resolved by contacting a Quadra service representative.

**Provide the system serial number here** \_\_\_\_\_.

## **Emergency Service**

For afterhours emergency service please call our normal office number

**269-483-9633** and follow the instructions.