

R-Series Installation

MOUNT THE BRACKETS. 1.

The LUG

rests


If the clutch is on the right end of the shade, attach the brackets to the window frame, window molding, wall or ceiling, as shown below. If the clutch is on the left end of the shade, reverse the bracket positions, left for right.

TO THE WALL OR TO THE

TO THE INSIDE OF THE WINDOW FRAME

FRONT OF THE WINDOW MOLDING The LUG rests here (\cdot)

TO THE CEILING OR TO THE TOP OF THE WINDOW FRAME

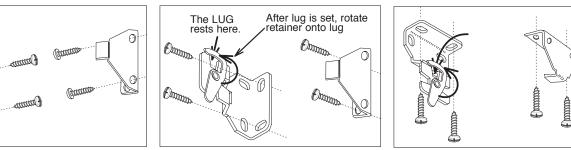

INSTALL THE SHADE. 2.

0 Ć

- Push the clutch straight onto the a. blade of its bracket. The bottom of the clutch should always point straight down.
- Lower the lug of the end plug onto b. the "V" of its bracket. The roller should fit in the brackets securely, with just a little play. Rotate the riveted retainer portion to lock the lug in position.

3. INSTALL THE TENSION DEVICE

See SafetyHold3 Installation Instructions



RETAINER ARM LUG CLUTCH BRACKET 0.0 END PLUG BRACKET/ ROLLEASE CLUTCH BLADE ROLLEASE END PLUG CONTROL CORD

USE THE CONTROL CORD TO OPERATE THE SHADE. 4.

Pulling gently on the cord in one direction raises the shade; pulling it in the other direction lowers it. On shades where the fabric rolls against the window, the front cord does the raising. On shades where the fabric rolls toward the room, the rear cord does the raising.

ATTACH STOPS TO A CONTROL CORD THAT'S MADE OF BEAD CHAIN. 5.

On metal bead chain, attach a metal stop ball that is at least 5/16" (8mm) in diameter, so that it touches the mouth of the clutch when the shade is in the all-rolled-up position.

For metal or plastic bead chain, lower the shade to sill or floor height, and attach the appropriate metal stop or plastic connector next to the clutch, this prevents the shade from being lowered beyond that point.

RollEase Headquarters

200 Harvard Avenue Stamford, CT 06902-6320 USA Office: 203.964.1573 / 800.552.5100 Fax: 203.964.0513 Order Fax: 203.358.5865 www.rollease.com

©2012 RollEase, Inc. / Rev: June, 2013



Quality Wholesale Window Coverings Contract • Hospitality • Healthcare • Residential

RollEase West 7310 West Roosevelt Street, Suite 26 Phoenix, AZ 85043 USA Office: 623.936.5818 Order Fax: 623.936.5294