




## ISP Seat Measurement Instructions

### Step #1



Have the driver sit on large, flat surface such as a work bench or desk that allows his legs to hang off the edge. Driver's legs should be together but relaxed. Place the tape straight across the groin area, to the outer left thigh. This measurement must be in a straight line. To make sure the measurement is accurate you may wish to use right angle objects such as two 2 x 4's placed along each side of the driver to measure between.

### Step #2

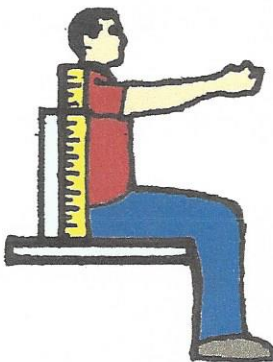

With the driver sitting with good posture, have driver raise his right arm straight forward. Looking at the driver make sure that their shoulders are level. Driver's have a tendency to raise the right shoulder in this position. If this occurs ask the driver to relax the shoulder. From the right side of the driver's body measure from the center of the arm pit to the top of the surface they are sitting on.


4502 Raceway Dr SW \* Concord, NC 28027

Phone 704-795-0403 \* Fax 704-795-0216

[www.ispseats.com](http://www.ispseats.com)




## ISP Seat Measurement Instructions

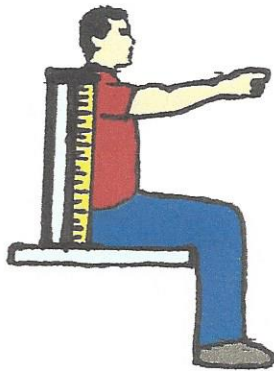

### Step #3

With the driver in same position as step #2, measure the distance from the trapezius muscle (the muscle between the neck and the shoulder where the harness will be) to the top of the surface he/she is sitting on. Take this measurement from the right side only.

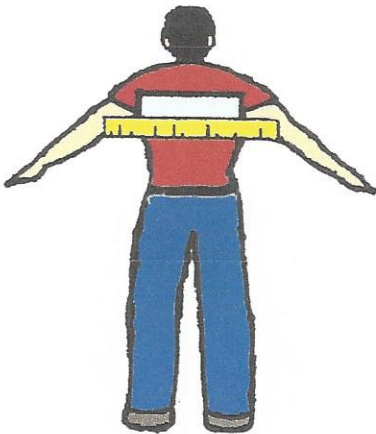


### Step #4

Now we need to know the distance across the upper back. This is not a shoulder to shoulder measurement. Have the driver stand with his back to you with arms raised at a 30 degree angle beside his body. Then measure across their back approximately 2 ½ " below the driver's arm pits. This measurement is extremely important. Your measuring devise must be level.



# ISP Seat Measurement Instructions

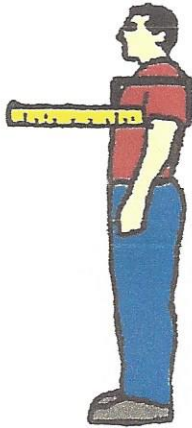

## Step #5

Have the driver stand flat against a wall with his arms down by his side. We are looking for the depth of the driver's chest cavity with this measurement. Place the measuring device under the driver's arm and slide it all the way to the wall. We want the measurement from the wall to the forward edge of the chest.

Driver Name \_\_\_\_\_

Phone # \_\_\_\_\_

Email Address \_\_\_\_\_

Measurement #1 \_\_\_\_\_

Measurement #2 \_\_\_\_\_

Measurement #3 \_\_\_\_\_

Measurement #4 \_\_\_\_\_

Measurement #5 \_\_\_\_\_

Driver Height \_\_\_\_\_ Driver Weight \_\_\_\_\_

Seat Style \_\_\_\_\_

Type of seatbelts 5 points      6 points      7 points      Other \_\_\_\_\_

Type of head restraint \_\_\_\_\_

4502 Raceway Dr. SW \* Concord, NC 28027  
Phone 704-795-0403 \* Fax 704-795-0216  
www.ispseats.com