

**RFM0.1-225-20**

**0.1-225MHz 20W Class A High Performance Amplifier**

- ❖ **Class A 20W linear amplifier**
- ❖ **0.1-225MHz ultra-broadband**
- ❖ **47dB typical gain**
- ❖ **+/- 1.0dB typical gain flatness**
- ❖ **Temperature-compensated bias**
- ❖ **50 ohms input/output**
- ❖ **Available with disable, heatsink and fan, or as a Mini-System**



The RFM0.1-225-20 is a Class A amplifier module, ideal as a standalone laboratory amplifier, or as a driver stage in military, commercial, industrial, or medical systems. With a frequency response down to 100kHz, it is well-suited for LF applications. It exhibits excellent full power and back-off linearity, and utilizes all gold metallized MOSFETs for exceptional ruggedness.

<b>Specifications</b>				
$V_{sup} = +28VDC, I_{DQ} = 3.45A, P_{out} = 20W, T_{base} = 25^{\circ}C, Z_{load} = 50\Omega$				
Parameter	Min	Typ	Max	Units
Freq. Range	0.1		225	MHz
$P_{1dB}$	20	>25	See Figure 4	W
Input Power		-4	0	dBm
Gain	43	47		dB
Gain Flatness		+/-1.0	+/-1.5	dB
Drain Current		3.60	3.80	A
Efficiency	19	20		%
IRL		-30	-20	dB
$f_2$		-35	-23	dBc
$f_3$		-38	-27	dBc
IMD <sub>3</sub> 20W PEP, $\Delta f=10kHz$ See Fig. 2 for 10W		-36	-28	dBc
Dimensions	2.30 X 4.85 X 1.40 (58.42 X 123.19 X 35.56)			inch (mm)


<b>Maximum Ratings</b>	
Operation beyond these ratings may damage amplifier.	
Parameter	Value
$V_{supply}$	24-28VDC
Bias Current	3.5A
Drain Current	4.2A
Load Mismatch*	5:1
Housing Base Temperature	65°C
Storage Temp.	-40°C to 85°C

\*All phase angles, 20W forward power, current limited to 4.2A.

<b>Option Ordering Info</b>	
Disable (TTL, active high)	RFM0.1-225-20-DIS
Heatsink and fan	RFM0.1-225-20-HSF
Mini-System	RFMS0.1-225-20

RF and Microwave Power Technology, LLC • 2380 Solitude Drive • Reno, NV 89511 USA  
 (775) 842-3280 • [sales@rfmpt.com](mailto:sales@rfmpt.com) • [www.rfmpt.com](http://www.rfmpt.com)  
 Specifications contained herein are subject to change without notice.  
 RF and Microwave Power Technology, LLC assumes no liability for the use of this information.  
 © 2016 RF and Microwave Power Technology, LLC



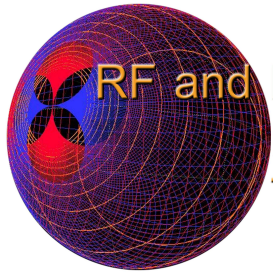

0.1-225MHz 20W Class A  
High Performance Amplifier

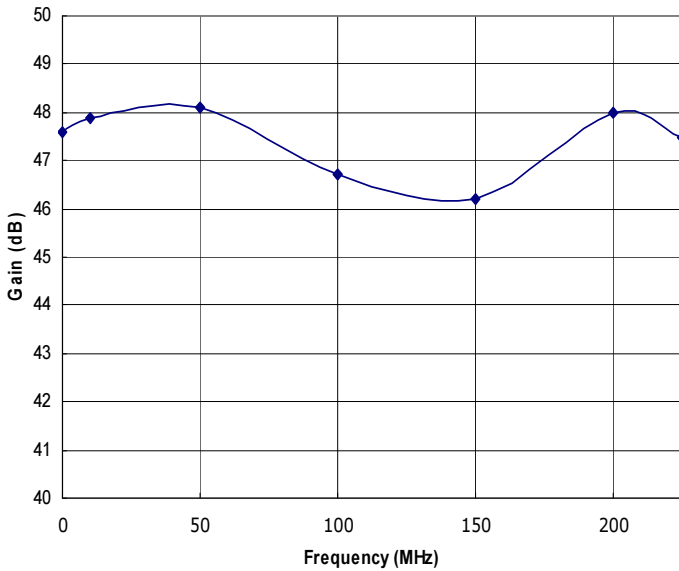


Figure 1: RFM0.1-225-20 Typical Gain @ P<sub>out</sub> = 20W.

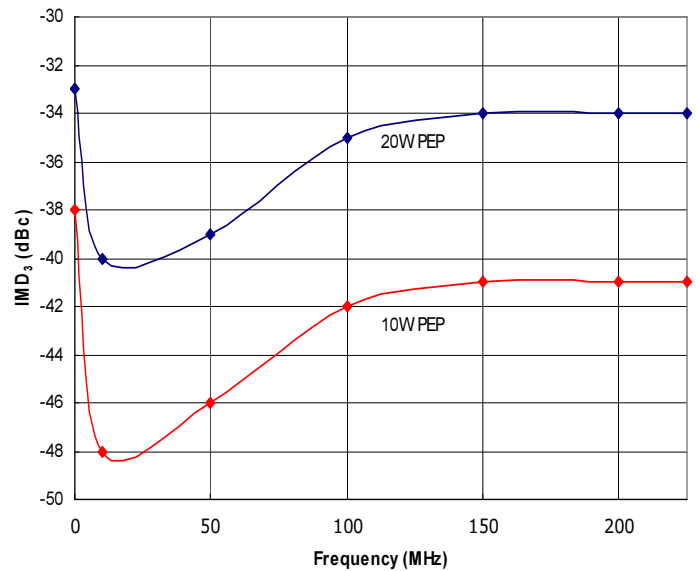


Figure 2: RFM0.1-225-20 Typical IMD<sub>3</sub>, Δf=10kHz, @ P<sub>out</sub> = 20W and 10W PEP.

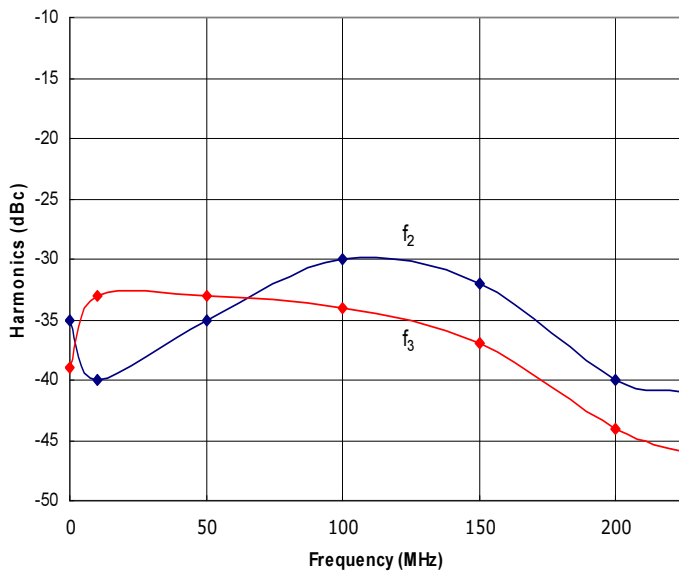


Figure 3: RFM0.1-225-20 Typical f<sub>2</sub> and f<sub>3</sub> @ P<sub>out</sub> = 20W.


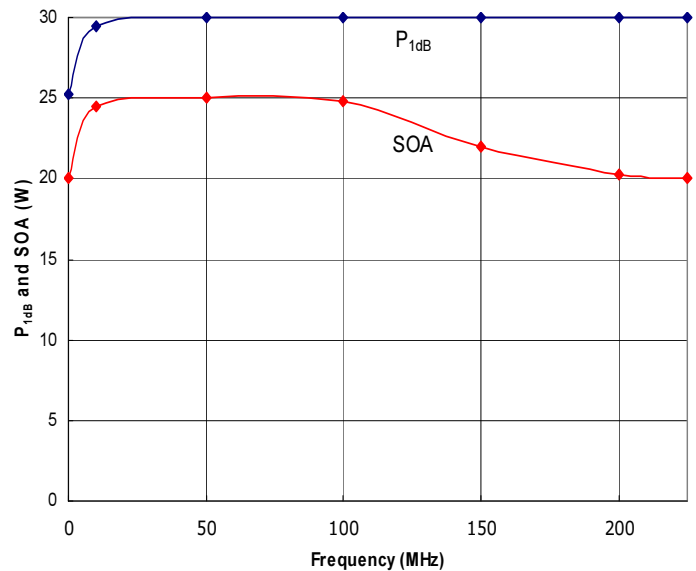


Figure 4: RFM0.1-225-20 Typical P<sub>1dB</sub> and Safe Operating Area (SOA). The amplifier is capable of delivering more power than it is safe to generate. Do not exceed the SOA without first contacting RFMPT to discuss your application.



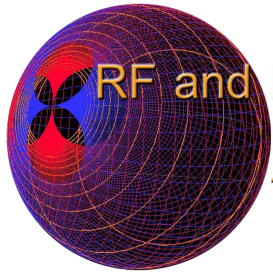


RF and Microwave  
Power  
Technology

**RFM0.1-225-20**


**0.1-225MHz 20W Class A  
High Performance Amplifier**

**Amplifier Mounting Hole and RF Locations**

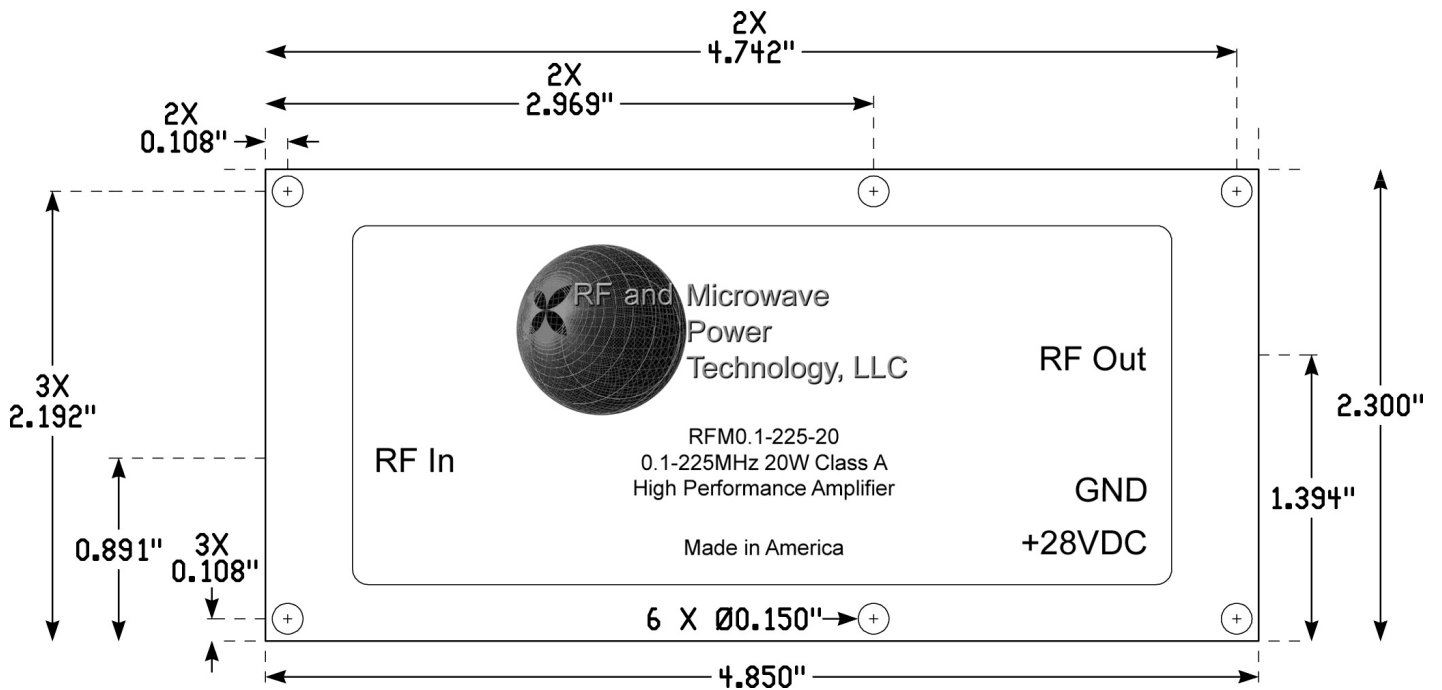

RF and Microwave Power Technology, LLC • 2380 Solitude Drive • Reno, NV 89511 USA  
 (775) 842-3280 • [sales@rfmpt.com](mailto:sales@rfmpt.com) • [www.rfmpt.com](http://www.rfmpt.com)  
 Specifications contained herein are subject to change without notice.  
 RF and Microwave Power Technology, LLC assumes no liability for the use of this information.  
 © 2016 RF and Microwave Power Technology, LLC



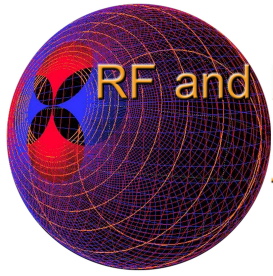

**Instructions for Amplifier Use**

- 1) If not supplied with a heatsink, apply a layer of high quality thermal grease (Wakefield Type 120 or equivalent) to the underside of the amplifier housing. Thinner is better, but ensure that when mounted to your heatsink, contact across the *entire* housing base is made. Gaps and air bubbles will significantly reduce cooling, leading to possible amplifier damage. Use six #6-32 screws to mount the amplifier to your heatsink.
- 2) Guarantee sufficient airflow through the heatsink fins to keep the maximum housing base temperature at or less than that specified in the Maximum Ratings section. Contact RFMPT for details on how to qualify your heatsink’s performance, if needed.
- 3) Connect a proper signal source to the RF IN connector, and desired load to the RF OUT connector. Torque connectors to industry standards for the type supplied with the amplifier.
- 4) Connect DC  $V_{supply}$  and Ground wires to the terminals provided. Ensure that the connections are of proper polarity, and within the voltage range in the Maximum Ratings section.
- 5) Apply DC power and sufficient RF drive to achieve desired output level. Ensure that the Safe Operating Area (SOA) power level indicated in Figure 4 is not exceeded, or amplifier damage may occur, and will void the warranty.
- 6) To disconnect the amplifier, first remove the RF drive, then DC power, then the RF connections.

Contact the factory at [sales@rfmpt.com](mailto:sales@rfmpt.com) with any questions, or for special options, testing requirements, and/or operating conditions not specified in this document.

**Document Control**

Revision	Date	Notes
Pre	4-27-2015	Preliminary release.
A	6-7-2015	Production release.
B	6-2-2016	Updated company info and specifications.

